



This is a digital copy of a book that was preserved for generations on library shelves before it was carefully scanned by Google as part of a project to make the world's books discoverable online.

It has survived long enough for the copyright to expire and the book to enter the public domain. A public domain book is one that was never subject to copyright or whose legal copyright term has expired. Whether a book is in the public domain may vary country to country. Public domain books are our gateways to the past, representing a wealth of history, culture and knowledge that's often difficult to discover.

Marks, notations and other marginalia present in the original volume will appear in this file - a reminder of this book's long journey from the publisher to a library and finally to you.

Usage guidelines

Google is proud to partner with libraries to digitize public domain materials and make them widely accessible. Public domain books belong to the public and we are merely their custodians. Nevertheless, this work is expensive, so in order to keep providing this resource, we have taken steps to prevent abuse by commercial parties, including placing technical restrictions on automated querying.

We also ask that you:

- + *Make non-commercial use of the files* We designed Google Book Search for use by individuals, and we request that you use these files for personal, non-commercial purposes.
- + *Refrain from automated querying* Do not send automated queries of any sort to Google's system: If you are conducting research on machine translation, optical character recognition or other areas where access to a large amount of text is helpful, please contact us. We encourage the use of public domain materials for these purposes and may be able to help.
- + *Maintain attribution* The Google "watermark" you see on each file is essential for informing people about this project and helping them find additional materials through Google Book Search. Please do not remove it.
- + *Keep it legal* Whatever your use, remember that you are responsible for ensuring that what you are doing is legal. Do not assume that just because we believe a book is in the public domain for users in the United States, that the work is also in the public domain for users in other countries. Whether a book is still in copyright varies from country to country, and we can't offer guidance on whether any specific use of any specific book is allowed. Please do not assume that a book's appearance in Google Book Search means it can be used in any manner anywhere in the world. Copyright infringement liability can be quite severe.

About Google Book Search

Google's mission is to organize the world's information and to make it universally accessible and useful. Google Book Search helps readers discover the world's books while helping authors and publishers reach new audiences. You can search through the full text of this book on the web at <http://books.google.com/>





Medium 8vo, with 325 woodcuts, 10s. 6d.

NOTES ON BUILDING CONSTRUCTION.

Arranged to meet the requirements of the Syllabus of the Science and Art Department of the Committee of Council on Education, South Kensington. In Three Parts. Sold separately.

PART I.—FIRST STAGE, OR ELEMENTARY COURSE.

OFFICIAL REPORT ON THE EXAMINATION IN BUILDING CONSTRUCTION, HELD BY THE SCIENCE AND ART DEPARTMENT, SOUTH KENSINGTON, IN MAY 1875.—“The want of a text-book in this subject, arranged in accordance with the published Syllabus, and therefore limiting the students and teachers to the prescribed course, has lately been well met by a work published by Messrs. Rivingtons, entitled ‘Notes on Building Construction.’”

“Those things which writers of elementary books generally pass over are here explained with minuteness. . . . Altogether the book is one which it is a pleasure to recommend. Its primary object may be to support the Science and Art Department, but it will be found to be of wider use; and if the two parts which are to follow are prepared as carefully as this is, the ‘Notes on Building Construction’ will far surpass any work of the kind hitherto published.”—*Architect*.

“Something of the sort was very much needed. . . . The whole series when published will be a great boon to young students.”—*Builder*.

“One of the most sensible and really reliable aids to students of construction we have seen for a long time. If Parts II. and III. are up to the standard successfully aimed at in Part I., the work cannot fail to become the standard text-book for students.”—*Building News*.

“It very rarely happens that explanations are given with such clearness as those in ‘Notes on Building Construction,’ and the dullest student cannot fail to grasp the idea intended to be conveyed. . . . As a work of reference it will at once take a leading place.”—*Builder’s Weekly Reporter*.

“Certainly the three parts will, judging from the first, form the best text-book on the subject extant.”—*English Mechanic*.

“We shall look forward with pleasure for the succeeding portions of the work.”—*Iron*.

“The work throughout is got up in the most admirable style, and is profusely illustrated with well-drawn engravings.”—*Timber Trades’ Journal*.

“The whole will form a compendious series of volumes of very great value to “practical” men. The text is prepared in an extremely simple and consecutive manner, advancing from rudimental and general statements to those which are comparatively advanced; it is a thoroughly coherent self-sustained account. . . . We can testify that its contents justify the promises of the title, that we have missed nothing which we looked for and had a right to expect would be included in the volume.”—*Athenæum*.

“The illustrations and rules given are all that can be desired.”—*Standard*.

“All throughout the illustrations are excellent; they are never overloaded with details, and are always clear and well described. As a mere book it is a credit to the publishers, as a scientific manual it reflects great credit upon the unknown writer.”—*Scotsman*.

[PART III. THIRD STAGE, OR ADVANCED COURSE. *In the Press.*]

RIVINGTONS: WATERLOO PLACE, LONDON; OXFORD, & CAMBRIDGE.

EXTRACT FROM CONTENTS OF PART I.

CHAPTER I.

WALLING AND ARCHES: WALLS—ARCHES—PARTS OF WALLS—APERTURES IN WALLS—WOOD BUILT INTO WALLS.

CHAPTER II.

BRICKWORK: DIFFERENT BONDS—JUNCTION OF WALLS AT RIGHT ANGLES—GAUGED WORK—BRICK ARCHES—ARCHES OVER OPENINGS IN EXTERNAL WALLS—ARCHES OVER OPENINGS IN INTERNAL WALLS—JAMBS OF WINDOW AND DOOR OPENINGS—PARTS OF BRICK WALLS.

CHAPTER III.

MASONRY: WALLING—STONE ARCHES—JOINTS AND CONNECTIONS—DRESSINGS.

CHAPTER IV.

CARPENTRY: JOINTS—*Lapping—Fishing—Scarving—Dovetails—Tenons—Cogging—Wedging, etc.*—FASTENINGS—*Pins—Bolts—Straps—Shoes, etc.*

CHAPTER V.

FLOORS: *Classification—Girders—Wall Plates—Joists—Strutting—Trimming—Pugging—Boarding—Joists—Ceiling Joists—Scantlings, etc.*

CHAPTER VI.

PARTITIONS: *Quartered Partitions—Framed with and without Doorways—Common Partition—Bricknogged Partition.*

CHAPTER VII.

TIMBER ROOFS: DIFFERENT FORMS—SCANTLINGS—PARTS OF A KING-POST ROOF—SCANTLINGS—ROOFS OF WOOD AND IRON COMBINED.

CHAPTER VIII.

IRON ROOFS: *Classification—ROOFS WITH STRAIGHT RAFTERS—PARTS OF IRON TRUSSES—DIMENSIONS.*

CHAPTER IX.

SLATING: *Pitch—Names of Parts—Preparing and laying Slates—Eaves and Ridge Courses—Hips and Ridges—Slating for Iron Roofs—Shouldering—Rendering—Torching—Sizes and Weights of Slates—Wyatt's Patent Slating—Slate Slabs—Ornamental Slating—Open Slating.*

CHAPTER X.

PLUMBERS' WORK: *Laying Sheet Lead—Rolls—Nosings—Seams—Drips—Fixing Lead to Masonry—Lead Dots—Flashings—Lead Gutters—Zinc Gutters—Down Pipes—Ridges and Hips—Substitutes for Lead Flashings—Cisterns.*

CHAPTER XI.

CAST-IRON GIRDERS, BRESSUMMERS, AND CANTILEVERS.

CHAPTER XII.

JOINERY: *Beadings—Scribing—Chamfering, etc.—JOINTS of different kinds—FRAMING—Panelling of different kinds—DOORS—Ledged—Braced—Framed—Panelled, different kinds—Door Frames—WINDOWS—Frames—Solid—Cased—Sashes, hung in different ways—Casements—Fixing Frames—Furniture.*

RIVINGTONS

London, Oxford, and Cambridge.

NOTES
ON
BUILDING CONSTRUCTION

*ARRANGED TO MEET THE REQUIREMENTS OF
THE SYLLABUS OF THE SCIENCE & ART DEPARTMENT
OF THE COMMITTEE OF COUNCIL ON EDUCATION,
SOUTH KENSINGTON*

PART II.
COMMENCEMENT OF SECOND STAGE
OR
ADVANCED COURSE



RIVINGTONS
London, Oxford, and Cambridge

MDCCCLXXVI

[A-66.]

PREFACE.

THESE Notes have been compiled in order to assist students preparing for the examinations in Building Construction held annually under the direction of the Science and Art Department.

It is hoped that they may be found useful by others engaged in designing or erecting buildings.

The following Syllabus of the Science and Art Department has been taken as a guide in the arrangement of the Notes, and in determining the subjects to be treated upon.

SYLLABUS.

Subject III.—Building Construction.

As the object of this Course of Instruction is to lay the foundation of a sound knowledge of the principles, as well as of the practice, of Building Construction, and so lead the workman to labour with his head at the same time as with his hands, the teacher should not, necessarily, attempt to push the students through the whole of the subjects enumerated in this syllabus, but should limit the range of his tuition according to the time at his command and the intelligence of the pupils.

A larger number of questions will be set in the examination papers for the Elementary and Advanced stages, than the candidate will be allowed to attempt, so that he will, to a certain extent, be able to show his knowledge in such branches as he may, from circumstances, have paid special attention to. For instance, a student better acquainted with iron than wooden structures will be able to select a question on iron, in preference to one on wood, work. In order, however, to ensure that special attention shall not be given to work of one description

only, a certain number of the questions given, about one-half, will be compulsory, *i.e.* the candidate must attempt these, and unless he shows a sound knowledge of work of more than one kind, by answering a fair proportion of them, the rest of his paper will not be considered.

Moderately good drawing, showing an intelligent knowledge of the subject, will always be awarded higher credits at the examination than more highly finished drawings, exhibiting an ignorance of constructive details.

FIRST STAGE, OR ELEMENTARY COURSE.

It is assumed that the student has already mastered the use of the following drawing instruments :—rulers, ordinary and parallel ; ruling pen, compasses, with pen and pencil bow-sweeps, as well as the construction and use of simple scales, such as 1, 2, 3, or more feet to the inch, showing inches ; or such as $\frac{1}{2}$, $\frac{3}{8}$, $\frac{1}{4}$, $\frac{3}{16}$, $\frac{1}{8}$, $\frac{3}{32}$, or other fraction of full size, or of any given scale or drawing : and the meaning of such terms as plan, elevation (front, back, or side), section, sectional elevation.

He should understand the object of bond in brickwork, *i.e.* English bond, Flemish bond, or English bond with Flemish facing, and how it is attained in walls up to three bricks thick, in the following instances—viz. footings with offsets, angles of buildings, connection of external and internal walls, window and door openings with reveals and square jambs, external gauged arches (camber, segmental, and semicircular), internal discharging arches over lintels, and inverted arches.

He should know where to put wood bricks, or plugging, and their use ; the construction and uses of brick corbeling, and the construction of trimmer arches in fireplaces.

He should be able to give sections and elevations to scale of the following kinds of masons' work—viz. uncoursed and coursed rubble, block in course, and ashlar, with their bond, and the proper dimensions of the stones, as to height, width of beds, and length ; and of the following dressings—viz. window sills, window and door jambs, plain window and door heads, door steps, string courses, quoins, copings, common cornices, blocking courses ; and of the following methods of connecting stones—viz. by cramps, dowels, joggles, and lead plugs.

He should be able to show how to join timbers by halving, lapping, notching, cogging, scarfing, fishing, and mortise and tenon ; as applied to wall plates, roof timbers, floors, ceilings, and partitions.

He should be able to draw, from given dimensions, couple, collar, and king post roofs, showing the details of the framing and of the iron-work.

He should be able to draw, from given dimensions, single, double, and framed floors, with or without ceilings beneath them ; showing modes of supporting, stiffening, and framing the timbers, trimming round hearths and wells of stairs ; also floor coverings of boards or

battens, rebated and filleted, ploughed and tongued, and laid folding, with straight or broken joints, bevelled or square heading joints.

He should be able to draw in elevation, from given dimensions, a framed partition with door openings.

He should be able to draw in elevation, and give vertical and horizontal sections of, solid door frames and window frames.

He should be able to describe, by drawings, beadings of different kinds, dovetailing, cross-grooving, rebating, plough-grooving, chamfering, rounded nosing, and housings.

He should be able to draw in elevation, and give vertical and horizontal sections of, the following doors—viz. ledged, ledged and braced, framed and braced, panelled, and the mode of putting them together, position of hinges and furniture; as well as to describe, by drawing, the following terms as applied to panelled doors—viz. square and flat, bead butt, head flush, moulded, all on one or both sides.

He should be able to draw in elevation, and to give vertical and horizontal sections of, the following window sashes and frames—viz. single or double hung sashes with square, bevelled, or moulded bars, and cased frames; casement sashes hung to solid frames, with method of hanging and securing in each case.

He should be able to show, in elevation and section, the lead work connected with chimneys, ridges, hips, valleys, gutters, and lead flats.

He should be able to give an elevation and section of the slating of a roof laid with duchess or countess slates on boards or battens.

He should be acquainted with the proper cross section for cast-iron beams for use in floor girders or bressummers, or as cantilevers; and be able to draw such a section in its right proportions from given dimensions of flanges.

He should be able to draw in elevation, from given dimensions and skeleton diagrams, ordinary iron roofs up to 40 feet span, showing the sections of different parts, and methods of connecting them.

SECOND STAGE, OR ADVANCED COURSE.

In addition to the subjects enumerated for the Elementary Course—in all of which questions of a more complicated nature may be set, combining work done by the different trades—the knowledge of the students will be tested under the following heads, viz.—

1st. Freehand sketches explanatory of any details of construction, such as the joints of iron and wooden structures, and other parts requiring illustration on an enlarged scale. These sketches may be roughly drawn, provided they are clear and capable of being readily understood.

2d. The nature of the stresses to which the different parts of simple structures are subjected, as follows:—

In the case of beams fixed at one end, such as cantilevers, and fixed at both ends, or supported at both ends, as in girders, the

student should know which side of the beam is in compression, and which in tension.

He should be acquainted with the best forms for struts, ties, and beams, such as floor joists, exposed to transverse stress.

He should know the difference in the strength of a girder carrying a given load at its centre, or uniformly distributed.

In the ordinary kinds of wooden or iron roof trusses, and framed structures of a similar description, he should be able to distinguish the members in compression from those in tension.

3d. The nature, application, and characteristic peculiarities of the following materials in ordinary use for building purposes, viz.—

Bricks of different kinds in common use, York, Portland, Caen, and Bath stones (or stones of a similar description), granite, pure lime, hydraulic lime, Portland and Roman cement, mortars, concretes, grout, asphalt, timber of different kinds in common use, cast and wrought iron, lead.

4th. Constructive details, as follows :—

The ordinary methods of timbering excavations, such as for foundations to walls, or for laying down sewers ; the erection of bricklayers' and masons' scaffolding ; the construction of travellers ; the use of piles in foundations, hoop iron bond in brickwork, diagonal and herring-bone courses in ditto, damp-proof courses, bond timber in walls and the objections to it.

He should know how bricks are laid in hollow walls, window or door openings with splayed jambs, flues, chimneys, fireplaces, and arches up to about 20 feet span ; how mortar joints are finished off, and the thickness usually allowed to them ; why bricks and stones ought to be wetted before being laid.

He should be acquainted with the construction of brick ashlar walls, rubble ashlar walls, stone stairs, wooden stairs (both dog-legged and open newel), skylights, fire-proof floors (such as brick arches supported on rolled or cast-iron girders, Fox and Barrett's, and Dennett's patent concrete floors), circular and egg-shaped drains, roofs of iron or wood, for spans up to 60 feet ; the fixing of architraves, linings, and skirtings to walls, shutters to windows, lath, plaster, and battening to walls, roof coverings of tiles and zinc, slate ridges and hips.

Written answers will be required to some of the questions.

EXAMINATION FOR HONOURS.

The candidate will have to furnish a design for a building, or part of a building, in accordance with given conditions ; which design he will be allowed to draw out at his own home.

He will be called upon to answer in writing—illustrated by sketches, either freehand or to scale, as directed—questions on all the subjects previously enumerated for the Elementary and Advanced courses.

He must possess a more complete knowledge of building materials, their application, strength, and how to judge of their quality ; and in the case of iron, of the processes of manufacture, and the points to be attended to in order to insure sound castings and good riveting.

He must be able to solve simple problems in the theory of construction, such as in the case of a beam supported at both ends, to ascertain the proportion of the load transmitted to each point of support, and to determine the safe dimensions of iron or wooden beams subjected to dead loads.

In ordinary roof trusses and framed structures of a similar description, he must be able to trace the stresses, brought into action by the load, from the points of application to the points of support, as well as to determine the nature and amount of the stresses on the different members of the truss, and, consequently, the quantity of material required in each part.

In ordinary walls and retaining walls, he must be able to ascertain the conditions necessary to stability, neglecting the strength of the mortar.

In these Notes the subjects of the above Syllabus are divided as follows :—

PART I. treats on all the points laid down as necessary for the examination in the First Stage, or Elementary Course.

PART II. contains further instruction on the same subjects, and also includes those mentioned in the Syllabus for the Second Stage, or Advanced Course, with the exception of a few reserved for Part III., and specified below.

PART III. will contain instructions regarding “the nature of stresses to which the different parts of simple structures are subjected,” “the nature, application, and characteristics of the materials used in buildings,” together with notes on foundations, timbering excavations, scaffolding, travellers, etc.

With regard to the Examination for Honours, Part III. will give all the information required regarding materials; but the art of designing buildings from given conditions, and the problems involved in the theory of construction, must be studied in works specially devoted to those subjects.

In order to make these Notes useful to students throughout the country, many of the Scotch and Irish technical terms, where they differ from those in ordinary use in England, have been given in footnotes.

NOTES ON BUILDING CONSTRUCTION.

Note to Part II.

SEVERAL works on different subjects have been consulted in the preparation of these Notes, among which may be mentioned the following:—

Dempsey's Iron Roofs.
Dobson and Tarn's Guide to Measuring.
Fairbairn's Application of Iron to Buildings.
Hurst's Architectural Surveyor's Hand-Book.
Latham's Sanitary Engineering.
Latham's Wrought Iron Bridges.
Laxton's Examples of Building Construction.
Matheson's Works in Iron.
Maynard's Bridges.
Molesworth's Pocket-book of Engineering Formulæ.
Newland's Carpenter's and Joiner's Assistant.
Nicholson's Works.
Pasley's Practical Architecture (Brickwork).
Proceedings of the Institute of Civil Engineers.
Rankine's Civil Engineering.
Reed on Iron Shipbuilding.
Seddon's Notes on the Building Trades.
Stoney on Strains.
Tredgold's Carpentry (1870 edition); also a new, valuable, and greatly extended edition, by Mr. Hurst, C.E.
Unwin's Wrought Iron Bridges and Roofs.
Wray's Application of Theory to the Practice of Construction.
The Professional Journals.

The assistance derived from the above-mentioned works and many others has been acknowledged, as far as possible, wherever they have been quoted or otherwise made use of.

The student is referred to them for further information regarding some of the subjects treated upon in these Notes.

Caution.—Some of the figures which appear to be isometrical projections are purposely distorted in order to bring important points into view.

CONTENTS OF PART II.

CHAPTER XIII.

BRICKWORK AND MASONRY—*Continued.*

COMPOUND WALLS.—*Evils of facing with superior Bricks—Brick Ashlar—Rubble Ashlar.*

PREVENTION OF DAMP IN WALLS.—*Air Drains—Damp-proof Course—Damp-proof Walls—Hollow Walls; with thin portion inside—with thin portion outside—with bonding Bricks—with Iron Ties and Cramps—Built with common Bricks only—Openings in Hollow Walls.*

JOINTS.—*Flat or Flush Joints—Struck Joints—Keyed Joints—Raking and Pointing—Flat Joint Pointing—Tuck Pointing—Bastard Tuck Pointing—Blue or Black Pointing—Mason's or V Joints.*

VARIOUS BONDS NOT MENTIONED IN PART I.—*Raking Bond—Diagonal Bond—Herring-bone Bond—Garden Bond—English—Flemish—Bond Courses—Brick Piers—Bond of Walls forming Obtuse and Acute Angles—Reveals with Splayed Jambs—Arches—In English Bond—In Flemish Bond—In Heading Bond—1½ Brick thick—In Half-brick Rings—In Whole-brick Rings—With Bond Blocks—Bonding Rings in Pairs—Thick Arches bonded throughout their Depth—Of Large Span—Bond Timbers—Ranging Bond—Hoop Iron Bond.*

BRICK DRAINS AND SEWERS.—*Circular Drains—Covered Drains—Egg-shaped Sewers—Comparative advantages of Oval and Circular Forms.*

CHIMNEYS.—*Arrangement of Flues—First Illustration—Second Illustration—Chimney Shafts—Chimney Caps—Fireplaces—Hearths—Bond of Chimney Shafts—Whole-brick External Walls, English Bond—Half-brick External Walls, English Bond—Half-brick External Walls, Flemish Bond—Stone Chimneys—Chimney Flues—Rendering—Par-getting—Coring—Chimney Pots* Pages 209-244

CHAPTER XIV.

TIMBER ROOFS—*Continued.*

King and Queen Post Roofs—Queen Post Roof with King Bolts—Queen Post Roofs—Roof with Queen Posts and Princesses—Roofs of Spans greater

than 60 feet—*Roofs composed of Wood and Iron for Spans of more than 40 Feet.*

PARTS OF A QUEEN-POST ROOF.—*Queen Posts—Straining Beam—Straining Sill—Binders—Purlin Roofs—Horizontal Rafters.*

ROOFS OF VARIOUS SHAPES, AND THEIR PARTS.—*Lean-to—M Roof—V Roof—Flat-topped Roof—Curb or Mansard Roof—Conical Roof—Ogee Roof—Ridge—Eaves—Gable—Hipped Roof—Hips—Valleys—Pavilion Roof—Construction of Hipped Roofs—Framed Angle—Trimming—Flat-topped Roofs—Mansard or Curb Roofs—Tredgold's Tables of Scantling for Roofs 30 to 60 Feet span.*

TREDGOLD'S RULES FOR SCANTLING OF ROOF TIMBERS.—*Tie Beam—Ceiling Joist—King Post—King Bolt—Queen Post—Queen Bolt—Struts and Braces—Principal Rafters—Purlins—Common Rafters—Straining Beam.*

BEST FORMS OF ROOF FOR DIFFERENT SPANS. Pages 245-261

CHAPTER XV.

ROOF COVERINGS—*Continued.*

General Remarks—Pitch of Roofs—Slating—Tiles—Plain Tiles—Ornamental Flat Tiles—Pan Tiles—Italian Tiles—Taylor's Patent Tiling—Thatch—Wrought Iron Flat Plates—Corrugated Iron—Sheet Lead—Copper—Zinc—Welded Joints—Drips—Corrugated Zinc Roof—Thickness of Zinc for Roofing—Zinc Flashings—Zinc Gutters—Glass—Asphalted Felt 262-274

CHAPTER XVI.

BUILT-UP BEAMS, CURVED RIBS, TIMBER AND IRON GIRDERS.

Built-up Beams, Ribs, and Trussed Timber Girders—Built-up Beams—Joggled or Keyed Beam—Indented Beams—*Curved Ribs*—Built Ribs—Laminated Ribs.

STRENGTHENING TIMBER GIRDERS—*Fitch Beams—Iron Fitches—Trussed Girders*—Girders trussed within their own Depth—With Deep Trussing.

IRON GIRDERS—*Cast Iron Girders—Wrought Iron Girders—Rolled Wrought Iron Beams—Riveted Plate Girders* 275-285

CHAPTER XVII.

CENTRES 286-288

CHAPTER XVIII.

JOINERY—*Continued.*

MOULDINGS.—Torus—Double Torus—Ovolo—Double Ovolo—Cavetto—
Ogee or Cyma Reversa—Reverse Ogee or Cyma Recta—Scotia—
Bolection Mouldings.

JOINTS.—*Angle Joints*—Mitre Joints—Butt Joints—Dovetail Joints—
Keys—*Clamping*—*Glued Joints*—FIXING JOINERS' WORK—GROUNDS
—ARCHITRAVES—SKIRTINGS—DADO AND SURBASE.

LININGS.—To Doorways—To Windows—*Jamb and Soffit Linings*—
Window Linings.

SHUTTERS.—*Inside Shutters*—Folding—Sliding—*Outside Shutters.*

SKYLIGHTS AND LANTERNS.—Sliding Sash in Skylight . Pages 289-320

CHAPTER XIX.

STAIRS.

Dimensions of Stairs—Flights.

DIFFERENT FORMS OF STAIRS.—*Straight*—*Dog-legged*—*Geometrical*—
Circular—Circular Newel—Circular Geometrical.

STONE STAIRS.—*Stone Steps*—Square—Spandril—Fixing Stone Steps—
Different Arrangements of Stone Stairs—Straight—Dog-Legged—Geo-
metrical—Circular—Circular Newel—Circular Geometrical.

WOODEN STAIRS.—*Parts of Wooden Stairs*—Strings—Wooden Steps—
Different Forms of Wooden Stairs—Straight—Dog-legged—Newel—
Open Newel—Geometrical—Bracketed—*Handrailing*—*Balusters*—
General Remarks on Planning Stairs . . . 321-353

CHAPTER XX.

RIVETING.

Different Forms of Rivets—Steel Rivets—*Proportions of Rivets*—*Pitch of Rivets.*

RIVETED JOINTS.—Lap—Fish—Butt—Single Riveting—Double Riveting
—Triple and Quadruple—Chain—Zigzag—*Comparative Strength of*
different kinds of Riveted Joints—*Joints in Tension*—Butt Joints—
Joints in Compression—*Essentials of Good Riveting*—Rivet Holes—
Causes of Failure . . . 354-366

CHAPTER XXI.

FIREPROOF FLOORS.

General Remarks—Girders and Brick Arches—Whichcord's Fireproof

Blocks—Bunnett's System—Tile Floors—Girders with Cast Iron Plates—Girders with Wrought Iron Plates—Fox and Barrett's Floors—Measures' Patent Fireproof Flooring—Moreland's System—Dennett's Fireproof Floor—Allen's System—Hornblower's System—*French Systems*—Thuasne's System—Fer Tubulaire—Fer à Coulisse

Pages 367-378

CHAPTER XXII.

IRON ROOFS—*Continued.*

Trussed Rafter Roofs—Truss with Two Struts—Truss with Three Struts—*Queen Rod Roofs*—Modification of Queen Rod Roof.

PARTS OF IRON ROOF TRUSSES.—*Principal Rafters*—Hip Rafters—*Purlins*—*Struts*—*Tie and Tension Rods*—*Suspending Rods*—*Diagonal Ties*—*Shoes and Heads*—*Expansion and Contraction Arrangements*—*Attachment to Columns*—*Lanterns and Ventilators*—*Coverings for Iron Roofs*—*Designing Iron Roofs*—Table of Scantlings of Iron Roofs

379-394

CHAPTER XXIII.

PLASTERERS' WORK.

Materials used by the Plasterer—Limes and Cements—Sand and Water—Mixtures—Laths—*Lathing*—*Plastering*—One-Coat Work—Two-Coat Work—Three-Coat Work—*Rendering*—Gauged Work—*Cornices, Mouldings, and Ornaments*—*Rendering in Cement*—*Stucco*—*Selenitic Plaster*—*Rough Cast*—*Surfaces*—*Pugging*—*Scagliola*—*Arrises*

395-410

CHAPTER XXIV.

PAINTING—PAPERHANGING—GLAZING.

Materials used in Painting—*Painting Woodwork*—Inside Work—Outside Work—Graining—*Painting Plaster*—Sanding—*Fresco*—*Painting Canvas and Paper*—*Clearcole*—*Repainting Old Work*—*Painting Iron-work*—*Gilding*.

PAPERHANGING.—Re-papering.

GLAZING—In Wooden Sashes—In Iron Sashes—Skylights—Lead Work—Fretwork 411-421

CHAPTER XIII.

BRICKWORK AND MASONRY.

(Continued from Part I.)

THIS chapter will contain brief notes on a few points connected with Brickwork and Masonry, which by the Syllabus are excluded from the Elementary Course, and were therefore hardly, if at all, touched upon in Part I.

COMPOUND WALLS.

It has already been said that uniformity of construction in walling of any description is of the first importance.

All walls must be expected to consolidate and settle down when weight comes upon them, but so long as they settle equally no injury is done; *inequality* of settlement, however slight, is dangerous, and produces unsightly cracks in the masonry.

A want of uniformity in construction leads to such results, and other evils are involved, among which is instability when exposed to the action of fire. With regard to this, Captain Shaw, the Chief of the London Fire Brigade, says, "The walls of a most pretentious and imposing building, of sufficient thickness, and apparently constructed of sound stones, are found to crack at an early stage of a fire, and perhaps to fall down altogether, and then it is discovered that they have been only a deception, having been constructed externally of stone and internally of brick."¹

It will be as well to notice two or three forms of composite walls, in order that their structure and defects may be described.

In all compound walls the backing should have joints as nearly as possible equal in number and thickness to those in the face, so that the back and front may settle down under pressure to the same extent; if not, the joints should be in cement or quick-setting mortar, in order that they may become consolidated before any pressure comes upon them.

Evils of Facing with superior Bricks.—It is a common practice, especially in using single Flemish bond, to build the face work

¹ Fire Surveys by Captain Shaw.

with better bricks, and with thinner joints, than the backing. This leads to unsound work, and should not be allowed.

In such cases, on account of the joints of the backing being thicker than those of the face work, the courses will not be of the same depth in front and back. For example, it may require eight or nine courses of the face to gain the same height as six or seven in the backing (see Fig. 326), and it is only when they happen to come to a level, as at *aa* (once in every eight courses or so), that headers can be introduced. Even the few that can thus be used are liable to be broken off by inequality of settlement, caused by the difference in the thickness of the joints.



Fig. 326. joints.

This may be partly remedied by using thicker bricks in the backing; but even then the difference in thickness of the joints in facing and backing tends to cause unequal settlement, unless the work is built in very quick-setting mortar which will harden before any weight comes upon it.

A further result of this practice is that, in order to economise the more expensive face bricks, dishonest bricklayers will cut nearly all the headers in half, and use "false headers" throughout the work, so that there is a detached slice, $4\frac{1}{2}$ inches thick, on the face, having no bond whatever with the remainder of the wall.

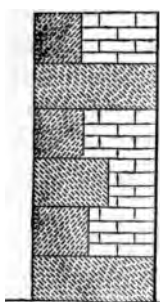


Fig. 327.

Brick Ashlar.—This is a name given to walls with ashlar facing, backed in with brickwork.

Such constructions are liable in an aggravated degree to the evils pointed out as existing in walls built with different qualities of bricks. The coarser and more numerous joints in the brick backing are sure to consolidate to a greater extent than the few and fine joints of the ashlar, and thus tend to cause a separation of the face and backing; or, if this is prevented by bond stones, the facing will probably bulge outwards.

In building such work the ashlar stones should be of heights equal to an exact number of courses of the brickwork, in order that they may bond in with it; the stones should be properly square throughout, with the back joints vertical, so as to leave no vacuities between the facing and the brickwork, for these could not be properly filled in without the expense of cutting bricks to fit the irregularities.

Rubble Ashlar consists of an ashlar stone face with rubble backing (see Fig. 328), and is subject, even to a still greater extent than brick ashlar, to the evils caused by unequal settlement.

To avoid these evils, the stones and joints of the rubble backing should, as before mentioned, be made as nearly as possible of the same thickness as those in the ashlar facing, or, if the joints are necessarily thicker, there should be fewer of them, so that the total quantity of mortar in the backing and face may be about the same. This can seldom be economically arranged in practice, but it should be remembered that the more numerous and coarser the rubble joints, the worse the construction becomes.

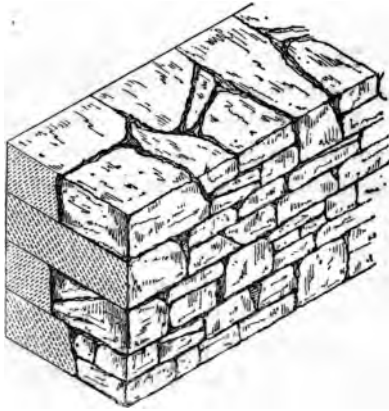


Fig. 328.

The ashlar should be bonded in with through-stones or "headers," as previously described; their vertical joints should be carefully dressed for some distance in from the face, and their beds should be level throughout; the back joint and sides of the tails of the stones, may, however, be left rough, the latter may even taper in plan with advantage, and they should extend into the wall for unequal distances, so as to make a good bond with the rubble, the headers from which should reach well in between the bond stones of the ashlar. Through stones may be omitted altogether, headers being inserted at intervals on each side extending about $\frac{2}{3}$ across the thickness of the wall.

Care must be taken that the stones in the ashlar facing have a depth of bed at least equal to the height of the stone. In common work the facing often consists merely of slabs of stone having not more than from 4 to 6 inches bed, with a thin scale of rubble on the opposite side, the interval being filled in with small rubbish, or by a large quantity of mortar, which has been known to bulge the wall by its hydrostatic pressure.

The ashlar facing is in all respects, except those above mentioned, built as described in the section on ashlar, p. 39, Part I., and the backing may be of random rubble done in courses from 10 to 14 inches high, according to the depth of the stones in the facing.

Fig. 328 is the section of a wall 3 feet thick, with an ashlar facing composed of good substantial stone.

PREVENTION OF DAMP IN WALLS.

The importance of keeping moisture out of walls as far as possible need hardly be dilated upon.

In addition to the great importance of a dry building for sanitary reasons, it is also most necessary for good construction; dampness in the masonry soon communicates itself to the wood-work, and causes rot throughout the building, besides which, the masonry itself is not sound, the mortar, unless of good hydraulic lime, does not set, and is always liable to the attacks of frost.

To give some idea of the quantity of water that the walls of an improperly protected building may contain, and of the evil effects caused by damp, the following remarks are quoted from an official report.¹

"In England the common bricks absorb as much as a pint or pound of water. Supposing the external walls of an ordinary cottage to be one brick thick, and to consist of 12,000 bricks, they will be capable of holding 1500 gallons or $6\frac{1}{2}$ tons of water when saturated. To evaporate this amount of water would require nearly a ton of coal, well applied. The softer and more workable stones are of various degrees of absorbency, and are often more retentive of moisture than common brick. Professor Ansted states that the facility with which sandstone absorbs water is illustrated by the quantity it contains both in its ordinary state and when saturated. He states that even granite always contains a certain percentage of water, and in the dry state is rarely without a pint and a half in every cubic foot. Sandstone, however, even that deemed fit for building purposes, may contain half a gallon per cubic foot, and loose sand at least two gallons. When water presents itself in any part of such material it readily diffuses itself by the power of capillary attraction, by which, it is observed on some walls in Paris, it ascends 32 feet from the foundations. Walls of such absorbent constructions are subject to rising wet by capillary attraction, as well as the driving wet of rain or storm. To guard against the driving wet on the coast, expensive external coverings, 'weather slates,' are used. But these do not stay the

¹ *Report on Dwellings in the Paris Exhibition*, by Edwin Chadwick, Esq., C.B.

interior rising wet. This wet having to be evaporated lowers temperature. Damp walls or houses cause rheumatism, lower strength, and expose the system to other passing causes of disease."

It is a wise precaution to cover the whole surface of the ground under a dwelling with a layer of concrete, in order to prevent the damp and bad air out of the ground from rising into the building.

This precaution is, however, generally omitted because it involves expense, but measures to keep the walls dry are or should be adopted in nearly all buildings intended for occupation by human beings.

The walls of a building are liable to be charged with moisture—

1. By wet rising in them from the damp earth.
2. By rain falling upon the exterior of the walls.
3. By water from the roofs or leaking gutters soaking into the tops of the walls.

Of these evils the first may be prevented by the construction of dry areas or "air drains" and by the introduction of damp-proof courses; the second may be counteracted by impervious outer coatings or by the use of hollow walls; and the third avoided by the use of projecting eaves with proper gutters—or where parapet walls are used, by an upper damp course.

Air Drains are narrow dry areas, 9 inches or more in width, formed around such parts of the walls of a building as are below the ground.

They prevent the earth from resting against the walls and imparting to the masonry its moisture, which, rising by capillary attraction, might cause the evils already referred to.

The outer wall of the area should rise slightly above the surrounding ground, so as to prevent the water from the surface from entering the air drain. Arrangements should be made for keeping the area clear of vermin, for ventilating it, and also for draining off any moisture that may accumulate at the bottom.

In the section Fig. 369 is shown an air drain 12 inches wide, having a rubble retaining wall, and being covered by flagstones built into the wall and weathered on the upper surface; of these, one here and there is removable in order to give access to the drain. The air-holes shown in the figure ensure the thorough ventilation of the drain and of the space below the floor of the building.

There are several forms of air drains; the width of the area is often much less than that shown in the figure, and sometimes is

so reduced that the arrangement simply amounts to providing a hollow wall. In other examples the outer retaining wall is curved in plan, being concave on the inside, by which additional strength is gained and thinner walls may be used. The area is frequently covered by a small quadrant arch turned against the wall, instead of by paving.

In some cases, to avoid the expense of air drains, the outer surface of the portion of wall below ground is rendered with cement or covered with a layer of slates attached to the wall.

Substitutes for properly built air drains may be cheaply formed by placing a flagstone in an inclined position against the outside of the wall to be protected.

Wide and open areas are much more expensive, but allow a freer circulation of air, exclude damp more thoroughly, and are, on the whole, superior to air drains.

Damp-proof Course.—Even where air drains are provided, a damp-proof course should be inserted in all walls, to prevent the moisture out of the soil from rising in the masonry.

The damp-proof course should be 6 inches or more above the level of the external ground, but under the wall-plate carrying the floor-joists.

There are several forms in which a damp-proof course may be provided.

It may be of glazed pottery slabs built into the wall, as shown at D D in Fig. 330. The joints between the slabs must be left empty, or the damp will rise through them.

A layer of tough asphalte about $\frac{3}{8}$ inch thick is often used instead, as at A in Fig. 331.

In buildings finished with a parapet wall, a damp-proof course should be inserted just above the flashing of the gutter, so as to prevent the wet which falls upon the top of the parapet from soaking down into the woodwork of the roof and into the walls below.

In some localities damp-proof courses are formed with slates set in cement; these are rather liable to crack, and thin impervious stones are better. Sheet lead has been used for the same purpose, and is most efficacious, but very expensive.

Arches are frequently rendered all over the extrados with asphalte or cement to prevent the penetration of wet.

Damp-proof Walls.—In addition to the precautions adopted to prevent damp out of the ground from rising in walls, it is necessary (especially when using inferior bricks or porous stone) to

prevent moisture falling upon the outer face from penetrating to the interior of the wall.

The wet may be kept out of the interior of the wall by rendering the exterior surface with cement, covering it with slates fixed on battens, or with glazed tiles set in cement. Taylor's pottery facing bricks answer the same purpose.

Another plan patented by Mr. Taylor consists of overlapping slates placed vertically in the middle of the wall—the two portions of which are united by peculiar iron ties.

Hollow Walls not only exclude the damp, but the layer of air they contain being a non-conductor of heat tends to keep the building warm. Such walls are formed in two separate portions, standing vertically parallel to one another, and divided by a space of about 2 or 3 inches.

These two portions are generally united either by special bonding bricks or by iron cramps. There are several ways of arranging the thickness of the portions of the wall, and the consequent position of the air space.

In some cases the two portions are of equal thickness, the air space being in the centre.

Very frequently one of the portions is only $4\frac{1}{2}$ inches thick, built in brickwork in stretching bond; the other is of such thickness as may be necessary to give the whole stability.

In such a case the thin $4\frac{1}{2}$ portion is sometimes placed on the outside, and sometimes on the inner side of the wall.

Hollow Walls with the thin portion inside.—In some cases, such for instance as when the wall has a stone face, the $4\frac{1}{2}$ inch portion is necessarily on the inside, but this arrangement has many disadvantages.

In the first place, the bulk of the wall is still exposed to damp, and the moisture soaks in to within 7 or 8 inches of the interior of the building.

Again, if the wall has to carry a roof, expense is caused, as the span should be increased so as to bring the wall-plates on to the outer or substantial part of the wall, clear of the $4\frac{1}{2}$ -inch lining.

This may be avoided by bridging over the air space, so as to make the wall solid at the top, which, however, renders it liable to damp in that part.

Hollow Wall with the thin portion outside.—On the other hand, if the $4\frac{1}{2}$ -inch portion is placed outside, the damp is at once intercepted by the air space, kept out of the greater portion of the wall, and at a considerable distance from the interior of the building.

The roof can be economically arranged so as to rest upon the interior thicker portion of the wall.

The stretching bond is, however, considered by some to be unsightly, unless made to appear like English or Flemish bond by using false headers, and, where the bricks are bad, the thin exterior portion, if liable to be attacked by frost, is soon destroyed.

Hollow Walls with Bonding Bricks.—Jenning's patent bonding bricks are made of vitrified pottery, and were originally of the shape shown in Fig. 329. These bricks are built in across the opening at horizontal intervals of about 2 feet 6 inches and vertical intervals of about 9 inches to 12 inches. The bricks in the several courses are placed chequer-wise, so that each is over the interval between two below.



Fig. 329.

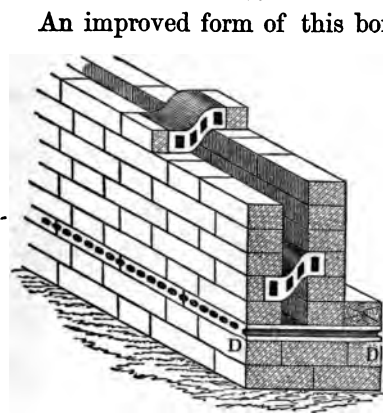


Fig. 330.

The peculiar shape of the brick enables it to be built into the wall so that the end in the front portion is a course lower than the end in the back portion of the wall. This prevents any moisture running along the surface of the bonding brick to the interior of the wall.

When building with these bricks, it is advisable to cover them temporarily with a pipe swathed in hay bands, or by a

narrow strip of wood, in order to prevent the falling mortar from lodging upon them. As the wall rises, the strip is transferred in succession from each row of bonding bricks to cover the last built in.

The straight bonding bricks shown in Fig. 329 are made in three sizes, ranging from 9 inches to 14 inches in length, and the bent bonders (Fig. 330) are in four sizes from $7\frac{1}{2}$ inches to $13\frac{1}{2}$ inches horizontal length between their ends.

With either form the bonding bricks may extend right through the thin portion of the wall, or, if this is objectionable on account of appearance, their ends may be covered by bats, as shown in the figure.

Hollow Walls with Iron Ties and Cramps.—Ties of wrought iron are frequently used instead of bonding bricks, and have the advan-

tage of not being liable to be broken if the wall should settle unequally. On the other hand, they are subject to decay by rust, and to expansion from the same cause, which injures the wall.

The ties are about 8 inches long, $\frac{3}{4}$ inch wide, by $\frac{1}{16}$ inch thick; they are placed about 3 feet apart, horizontally, and with 9-inch vertical intervals between the rows.

Each tie is either bent in the middle, as at *x*, so as to stop the passage of water along its surface, or twisted in the centre, as at *y*, so as to answer the same purpose, and to give them strength to resist compression, and hollow iron ties possessing great strength as struts have for some time been introduced.

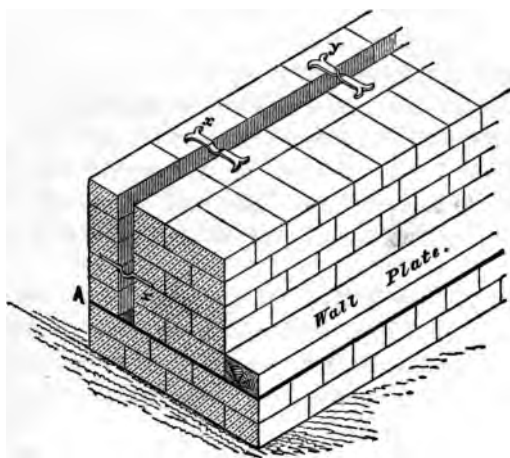


Fig. 331.

Cast-iron cramps are made about $\frac{1}{2}$ inch wide and $\frac{3}{16}$ thick, and somewhat similar in form to the above.

The hollow wall begins on the damp-proof course (see p. 214), and a covering course of brickwork is placed on the top of the air space, which should have no communication with the outer air.¹

Some walls are built entirely of hollow bricks made for the purpose.

Stone walls are sometimes lined with $4\frac{1}{2}$ brickwork on the inside, an air flue about 2 inches wide being left between the masonry and the brickwork.

Hollow Walls built with common Bricks only.—In the absence of iron cramps or bonding bricks, hollow walls may be built with

¹ Some are of opinion that there should be gratings near the bottom and top of the wall, so as to insure a current of air passing constantly through the space, but such an arrangement would destroy its efficiency as a non-conductor of heat.

ordinary bricks placed on edge, after being dipped in boiling tar to make them as non-absorbent as possible. Every course is composed of alternate headers and stretchers, so arranged that each header comes immediately over the centre of a stretcher in the course below. The wall thus formed consists of two portions, each 3 inches thick, separated by a 3-inch space.

Another plan is to lay the bricks as in ordinary English bond, leaving a space of about $2\frac{1}{2}$ inches between the stretchers in the front and back. This makes the wall $(4\frac{1}{2} + 2\frac{1}{2} + 4\frac{1}{2}) = 11\frac{1}{2}$ inches thick, and the headers are therefore too short to reach from face to back; the deficiency is made up by inserting bats at the ends of the headers.

These and other plans adopted for building hollow walls with ordinary bricks are defective in strength as compared with the walls constructed with special bonds or cramps, and, moreover, the common bricks being porous, conduct moisture to the interior of the wall and defeat the object aimed at in making it hollow.

A better plan, in the absence of the special bonding bricks or ties, is to unite the portions of the wall by pieces of slate slab, or of dense impervious stone, used in the same way as the iron ties.

Openings in Hollow Walls.—Where the lintels of doors and windows occur in a hollow wall with a $4\frac{1}{2}$ -inch exterior portion, the following arrangement may be adopted to prevent the wet which may enter the air-space from dropping upon the window or door frame.

Just above the window or door head a piece of sheet-lead is built in on the inner side of the $4\frac{1}{2}$ -inch exterior wall. This lead may be $4\frac{3}{4}$ inches wide, 2 inches being built into the $4\frac{1}{2}$ -inch wall, $1\frac{3}{4}$ inch projecting into the air space, and the remaining inch turned up so as to form a sort of gutter, which should be carried about 2 inches farther than the ends of the lintel each way, so as to lead the water clear of the door or window frame.

JOINTS.

Mortar is used to cement the parts of a wall together, and also to prevent the fracture of the bricks or stones by insuring an even distribution of pressure, notwithstanding any irregularities in their beds.

The quantity and coarseness of the mortar that should be used will therefore decrease in proportion as the beds are more perfect; *e.g.*, ashlar masonry has thinner joints than rubble, and good bricks can be set with closer joints than bad ones.

It has already been stated in Part I. that the bricks or stones should be wetted, the mortar used stiff, and every joint well flushed, all interstices being filled with bits of brick or stone set in mortar.

Thick joints should be avoided when possible. They not only injure the appearance of the work, but, when the weight of the superincumbent walling comes upon them, the mortar is squeezed out, projects beyond the face of the wall, catches the rain, and leads it into the wall, rendering the work liable to injury by frost.

Larrying is the method usually adopted for filling in the interior of very thick walls. After the bricks forming the exterior faces of a course are laid a thick bed of soft mortar is spread between them, and the bricks for the inside of the wall are one by one pushed along in this bed until the mortar rises in the joints between them.

Grouting consists in pouring very liquid mortar over the course last laid, in order that it may run into all vacuities left by careless workmanship in not properly filling up all the internal joints with mortar. Grout is, however, a weak and objectionable form of mortar.

The joints, both of brick and of masonry, are finished so as to present a neat appearance on the face in several different ways.

Flat or Flush Joints.—In these the mortar is pressed flat with the trowel, and the surface of the joint is flush with the face of the wall.

Such joints are not very ornamental, but are suitable for internal surfaces to be whitewashed.

Flat Joints jointed are the same as those last described, except that an iron jointer is used to mark a narrow line along the centre of the joints, which improves their appearance.

Struck Joints should be formed by pressing back the upper portion of the joint while the mortar is moist, so as to form a sloping surface which throws off the wet; the lower side of the joint is cut off with the trowel to a straight edge. These joints are usually struck along the *lower* edge; a ledge is thus formed above which catches the rain.

Keyed Joints are formed by drawing a curved iron key or jointer along the centre of the flush joint, pressing it hard, so that the mortar is driven in beyond the face of the wall; a groove of curved section is thus formed, having its surface hardened by the pressure.

In some cases the moist key is dipped into ashes, which are thus rubbed into the surface of the joints.

Raking and Pointing consists in removing the original mortar joints to a depth of about $\frac{3}{4}$ inch in from the face, filling in with mortar, and finishing the joints in one of the methods about to be described.

Pointing is not advisable for new work, when it can be avoided, as the joints thus formed are not so enduring as those which are finished at the time the masonry is built.

During severe frost, however, it would be useless to strike the joints at the time the work is built, for the mortar would be destroyed by the frost.

Pointing is, moreover, often resorted to when it is intended to give the work a superior appearance, and also to conceal the defects of inferior work.

In repairing old masonry or brickwork, the mortar of which has become decayed, raking out and pointing become necessary.

Both in old and new work, before pointing, the original mortar should be raked out with an iron hooked point, and the surface well wetted before the fresh mortar is applied.

Flat Joint Pointing.—The raked joints are filled in with fine mortar, and struck flat with the trowel or jointer.

Tuck Pointing is used chiefly for brickwork; the joints having been raked are "stopped," that is, filled up flush with mortar. This is coloured or rubbed over with a soft brick until the joints and bricks are of the same colour. A narrow groove is then cut along the centre of each joint, and the mortar is allowed to set. After this the groove is filled with pure white lime-putty, which is caused to project so as to form a narrow white ridge, the edges of which are cut off parallel so as to leave a raised white line about $\frac{1}{8}$ inch wide. This process causes inferior work to look as if it had been executed with large bricks and very fine joints; in carrying it out any defects in the work, such as irregularity of joints, are corrected by smearing over the face and striking false joints, so that badly executed work is disguised and made to present a good appearance.

Bastard Tuck Pointing consists in forming a ridge from $\frac{1}{4}$ to $\frac{3}{8}$ wide on the stopping itself, the edges being cut parallel and clean. There is no white line, the projecting part of the joint being of the same colour as the remainder.

Blue or Black Pointing is done with mortar mixed with ashes instead of sand.

Mason's or V Joints project from the face of the wall with an angular V section. With good mortar they throw off the wet, but when inferior lime is used they soon become saturated and destroyed by frost.

VARIOUS BONDS NOT MENTIONED IN PART I.

The principal bonds used in brickwork were described in Part I., but there are one or two varieties not so commonly used which remain to be noticed.

Raking Bond is of two kinds, *Diagonal* and *Herring-bone*. In both the bricks in the interior of the wall are placed in directions oblique to the face. A course or two of raking bond is sometimes introduced at intervals in thick walls built in English bond.

The proportion of stretchers in a brick wall diminishes according to its thickness (see p. 18, Part I.) The raking courses are therefore useful in giving longitudinal strength to thick walls which are deficient in stretchers.

In both kinds of raking bond alternate courses rake in opposite directions.

DIAGONAL BOND.—In this the bricks (except those in the faces of the wall) are laid diagonally, at such an angle with the face that the bricks will just fit in without being cut.

A two-brick wall is the thinnest in which this can be done, and then only in the stretching courses. In thicker walls diagonal bond may be inserted in any course.

The triangular spaces at the back of the facing bricks are objectionable; it takes some trouble to cut a piece to fit them, and they are therefore frequently left empty.

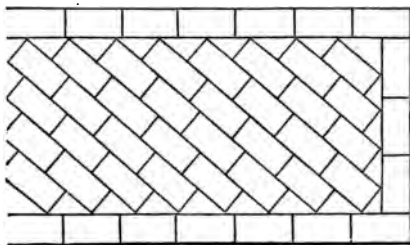


Fig. 332.

HERRING-BONE BOND consists of bricks laid raking from the sides toward the centre line of the wall, as shown in Fig. 333.

This is a defective bond, for, in addition to the triangular spaces at the back of the facing bricks, there are likely to be voids, each larger than half a brick, left in the centre of the wall, unless great care be taken to have them properly filled in.

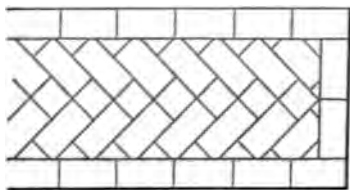


Fig. 333.

Herring-bone courses cannot be introduced at all in walls less than

3 bricks thick, and only in the stretching courses of such a wall; in thicker walls, however, this bond may be introduced in any course.

In practice this bond is rarely, if ever, adopted for walls.

Garden Bond is of two kinds—

ENGLISH GARDEN BOND consists of one course of headers to three or four courses of stretchers.

FLEMISH GARDEN BOND contains in each course one header to three or four stretchers.

The object in each case is the same, to show as few headers as possible, in order to get a fair face on both sides of walls 9 inches thick, for which such bond is chiefly used.

Bond Courses of superior construction are sometimes built into inferior walls to strengthen them.

Thus courses of brickwork may be built into walls of flints or rubble, and are called *lacing courses*.

Brick Piers are generally rectangular, and may be built either with or without reveals.

Fig. 334 is a plan of one course of a pier 18 inches square, without reveals, built in English bond.

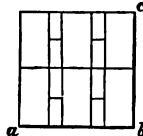


Fig. 334.

The next course is precisely similar as regards bond, but is placed at right angles to the first, being turned round so that the side *a b* in the course coincides with *b c* in Fig. 334.

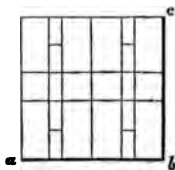


Fig. 335.

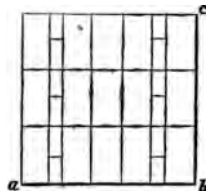


Fig. 336.

The same remark applies to Figs. 335 and 336.

Fig. 335 is the plan of a pier $2\frac{1}{2}$ bricks square, and Fig. 336, of one 3 bricks square, both in English bond.

It will be noticed from these figures that in piers whose sides are equal in length to an even number of half-bricks (Figs. 334 and 336) all the bricks of the stretching courses are whole bricks, but when the sides are of a length equal to an uneven number of half-bricks (Fig. 335) a line of half-bricks or of headers must be introduced in each stretching course.

Bond of Walls forming Obtuse and Acute Angles.—The methods of arranging the bond for walls meeting at a right angle, as is most commonly the case in buildings, have been explained in Part I.; an illustration will now be given of the bond for walls meeting at an inclination greater or less than a right angle.

OBTUSE ANGLES.—Figs. 337 and 338 show two 18-inch brick walls meeting at an obtuse angle.

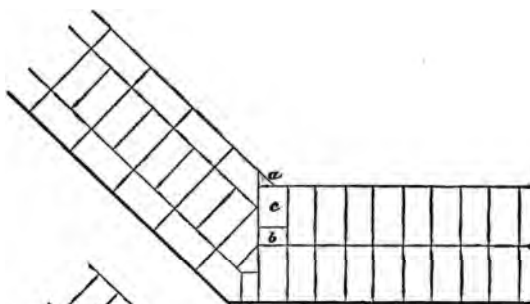


Fig. 337.

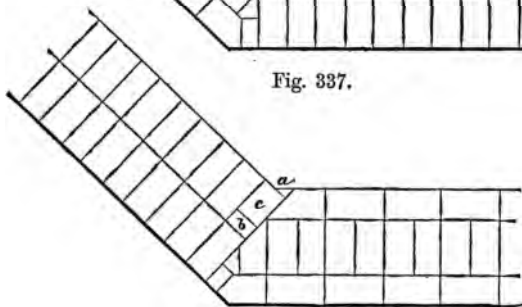


Fig. 338.

There are several ways of forming the bond, but the arrangement shown is a good one.

To avoid cutting the bird's-mouth in the brick at the re-

entering angle, the little triangular points *a* are often very improperly put in as separate pieces, in which case the bat *b* is not required, *b* and *c* being replaced by a whole brick.

ACUTE ANGLES.—In Figs. 339 and 340 two 18-inch brick walls meet at an acute angle.

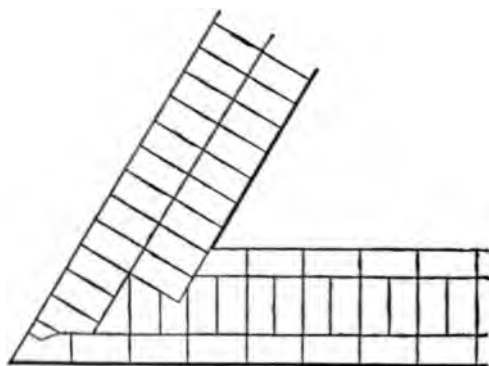


Fig. 339.

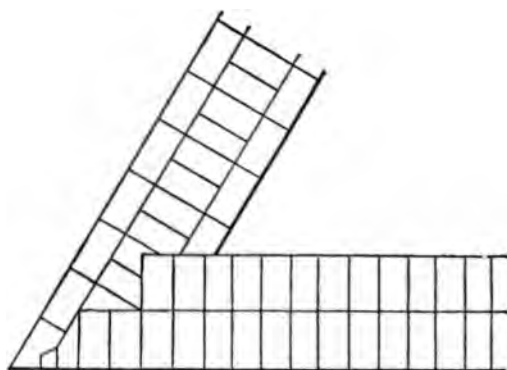


Fig. 340.

The bonds shown involve a good deal of cutting, which is inevitable to form really good work, but much of it would be omitted in ordinary building, the resulting gaps and spaces being filled in with bits of brick bedded in mortar.


Reveals with Splayed Jambs.¹—Splayed jambs in brickwork

¹ Reveals with square jambs belong to the Elementary Course (see p. 32, Part I.)

are weaker than square jambs, and should only be used where there is a good interval between the windows.


ENGLISH BOND.

1½-Brick Wall.

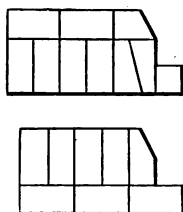

Figs. 341-2.

2-Brick Wall.

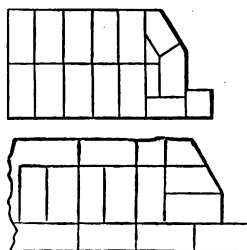


Figs. 343-4.

Figs. 341, 342 are plans of the alternate courses of a reveal with splayed jambs for a 14-inch (1½-brick) wall in English bond. Figs. 343, 344 are plans of the same in an 18-inch (2-brick) wall.


FLEMISH BOND.

1½-Brick Wall.

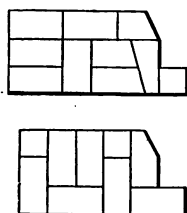

Figs. 345-6.

2-Brick Wall.

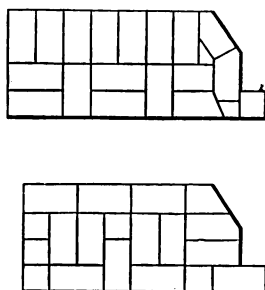

Figs. 347-8.

Figs. 345 to 348 give the same information for 14-inch and 18-inch walls in Flemish Bond. There is a peculiarity in the bond of these walls which was noticed but not illustrated in Part I. It will be seen that there are no false headers in the face. Every header is a whole brick: this makes stronger work, and causes fewer splits in the wall than the ordinary single Flemish bond illustrated in page 23, Part I.

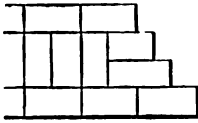


Fig. 349.

When splayed jambs are to have linings, they may be built with square offsets, as in Figs. 349, 350.

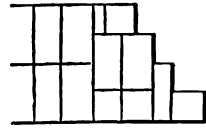


Fig. 350.

Arches.—It has been stated in Part I. that small rough arches of brickwork are generally turned in half-brick rings, and that this is especially necessary when the arch is of a quick curve, in order to avoid large joints upon the extrados.

Some authorities, however, recommend that flatter arches, especially those of larger span, should be built in 9-inch rings. This may be done in two or three different ways.

1. IN ENGLISH BOND.—Fig. 351 being the section, and the

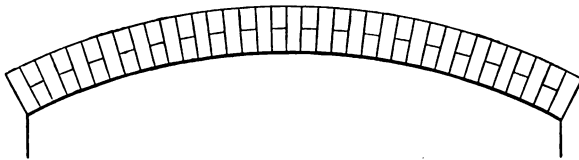


Fig. 351.

plan consisting of alternate courses of headers and stretchers, presenting the appearance of English bond on the soffit of the arch.

2. IN FLEMISH BOND.—The section being like that in Fig. 351, and the soffit showing the same arrangement as the face of a wall built in Flemish bond.




Fig. 352.

3. IN HEADING BOND.—The ring throughout consisting of headers as in the section, Fig. 352, excepting at the ends of the arch, where three-quarter bricks are introduced to break the bond, in the same manner as is done in the face of a wall built in heading bond.

Of the above varieties the heading bond is the strongest, as the voussoirs are each in one piece and no bats are required; but it is very difficult to make neat work with such a bond, and it is therefore very seldom adopted.



Fig. 353.

1. ARCHES $1\frac{1}{2}$ BRICK THICK may be built as shown in Fig. 353, which represents a section; the end elevation of the arch is the same, and the plan is like the face of a wall in English bond.

2. ARCHES IN HALF-BRICK RINGS are very commonly used, and

are easily built; they should not, however, be adopted for spans exceeding 30 feet. The rings have a tendency to settle unequally; in such a case the whole weight may be thrown for a moment upon a single ring; if this is crushed, the pressure comes upon the next ring, and so on, resulting in the failure of the whole arch.

Arches turned in Whole-brick Rings consist of rings like that in Fig. 354 superposed one over the other, and are liable in a lesser degree to the evils just noticed.

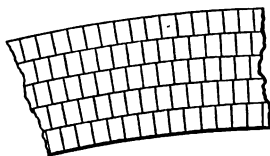


Fig. 354.

In building arches with half-brick rings it is advisable to build the undermost ring with thin joints and gradually to thicken the mortar joints as the extrados is approached; this prevents the lowest ring from settling while those above remain in position, which would cause an ugly fissure.

Arches with Bond Blocks.—To avoid the disadvantages above mentioned, arches have been built with blocks, B B, set in cement, running through their thickness at intervals, so as to form a bond right through the thickness of the arch. Stone bonds may be used instead, cut to the shape of a voussoir. These bond blocks should be placed at the points where the joints of the various rings coincide: those points will be determined by the radius of curvature of the arch, the thickness of the bricks, and of the joints.

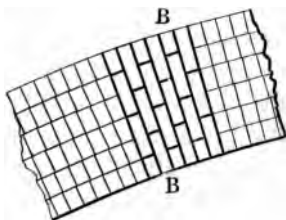


Fig. 355.

Bonding Rings in Pairs.—Another arrangement consists in introducing headers so as to unite two half-brick rings wherever the joints of two such rings happen to coincide. The rings are often thus united in consecutive pairs right through the thickness of the arch.

THICK ARCHES BONDED THROUGHOUT THEIR DEPTH, as shown in Fig. 356, have sometimes been used for large spans.

The joints in the extrados are necessarily very wide, but the evil effects of this may be guarded against by using cement or quick-setting mortar, or by wedging up the joints of the outer portion with pieces of slate. In this latter case, however, the inner rings are apt to be relieved of pressure, and the stretchers are liable to drop out.

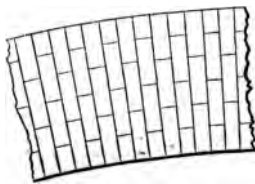


Fig. 356.

ARCHES OF LARGE SPAN, in whatever way they are bonded, should be built in good hydraulic mortar, setting moderately quickly, so that when the centres are struck the joints may be soft enough to adapt themselves to the inequalities of the bricks, and thus enable them to obtain a firm bearing. Hoop-iron bond is sometimes introduced between the rings parallel to the soffit.

In ordinary buildings, however, arches of large span are seldom required, and they need not, therefore, be further alluded to.

Bond Timbers were at one time extensively used to give longitudinal strength to walls, but they are injurious in many ways.

In process of time they shrink, they rot, and, in case of fire, they burn away; in either instance the whole superincumbent weight of the wall is thrown upon a small portion of it, or again, they may absorb moisture, swell, and overthrow the masonry.

RANGING BOND consists of narrow horizontal pieces built into the joints of walling parallel to one another at intervals of about 18 inches, to form grounds for battening, etc. etc. The face of the pieces projects slightly from the wall, so that the battens may be clear of the masonry.

Dry wood plugs may be used instead, let into holes cut in the stones or bricks, not in the beds or joints, otherwise they may swell and disturb the wall.

It has already been stated that timber in every shape and form should be kept out of brickwork and masonry as much as possible; where it is absolutely necessary to insert it in order to form a hold for woodwork, etc., the pieces should be as small as practicable.

Hoop-iron Bond, consisting of strips of hoop-iron (about $1\frac{1}{2}$ inch broad and $\frac{1}{16}$ inch thick), tarred and sanded, and inserted in the joints as shown in Fig. 357, is far preferable to bond timbers, and is frequently used, especially in half-brick walls.

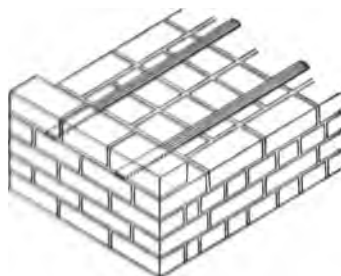


Fig. 357.

The hoop-iron should in every case be thoroughly protected from the action of the atmosphere, or it will oxidise and destroy the masonry; if used in thin walls, they

should always be built in cement.

The ends of the hoop-iron should be bent so as to hook one

another at the joints in the length, and at corners where two walls meet, forming an angle.

Pieces of hoop-iron are often used to make a junction where the bond of the brickwork is defective; see p. 26, Part I.

BRICK DRAINS AND SEWERS.

Brickwork is evidently not adapted for drains of small diameter, as there are, necessarily, very wide joints on the extrados of rings turned to a quick curve.

Earthenware pipes being cheaper, and preferable in every way, have in most cases long since superseded brickwork for drains of less than 18 inches or 2 feet in diameter.

Circular Drains.—When pipes are not procurable, circular drains may be constructed with bricks, as shown in section Fig. 358.

This figure shows an 18-inch drain constructed with two half-brick rings, but as a rule the thickness of the brickwork need not be more than one ring, (or $4\frac{1}{2}$ inches) in sewers of less than 3 feet diameter.

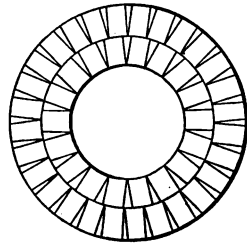


Fig. 358.

Covered Drain.—Another form of brick drain consists of a semicircular inverted arch covered with a flat stone, S, the removal of which gives easy access to the drain for examination.

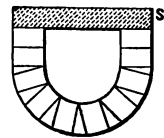


Fig. 359.

Egg-shaped Sewers may be constructed of the section shown in Fig. 360. The proportions of such sewers vary according to circumstances; but in all cases the invert, *i*, should have a quick curve (of radius not exceeding 9 inches), and the crown should be a semicircle.

The usual method of construction is to make the diameter of the invert half that of the crown, and the height of the sewer equal to 3 times the diameter of the invert.

Thus in Figure 360—

$$hi = cf = 1. \quad qh = \frac{1}{2}. \quad ai = df = dk = 3.$$

The invert may be formed either of brickwork in cement, with a terra-cotta invert block, or with an invert block bedded in concrete, as shown at B in Fig. 360.

Comparative Advantages of Oval and Circular Forms.—Oval or egg-shaped sewers are the best adapted for situations where there is an intermittent flow of sewage—that is, when the quantity passing varies considerably at different times.

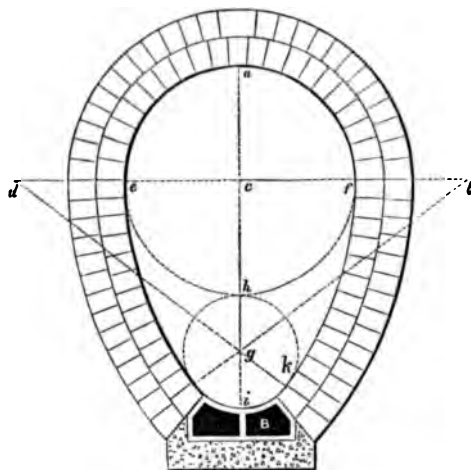


Fig. 360.

The reason for this is, that at the time when there is but a small quantity of sewage passing, it occupies in the narrow bottom of the egg-shaped sewer a greater depth than it would in a circular sewer of the same area of section.

This increased depth of the sewage causes it to flow with greater velocity, and thus renders the sewer more efficient.

When the flow of sewage is nearly uniform the circular sewer may be adopted, and will be found stronger and cheaper than the other.

Bricks for sewers should be of the hardest possible description, and laid in hydraulic mortar. Even the best bricks will be gradually destroyed by the sewage.

The inverts especially require to be of hard lasting material with a smooth surface, so as to resist as little as possible the passage of the sewage matter passing over them. They should, therefore, be formed with a smooth terra-cotta or fireclay invert block, as shown in Fig. 360, or built with glazed or very smooth bricks. Bricks "purpose-moulded" to the radii make the best sewers; but where they cannot be obtained, common bricks are sometimes formed with blocks placed in frames, grouted and formed into a solid mass with cement.

When sewers are constructed in a porous soil, the invert should be very carefully built, and a lining of puddle clay placed outside the sewer, so as to render it water-tight to half its vertical depth.

Great care should be taken in filling in over sewers, so that large clods or masses of earth may not be allowed to fall upon the brickwork and injure it.

Sewers are frequently built in concrete either alone or combined with brickwork.

When concrete is used by itself it is sometimes rammed into a trench round a mould of the section intended for the sewer, so that the sewer consists of a rectangular block of concrete containing a circular or egg-shaped tunnel.

In many cases, however, the concrete is lined with brickwork, and sometimes the lower part only of an egg-shaped sewer is built in brickwork, the upper portion being finished with concrete rammed in over a centre.

Concrete is also much used for the foundations of sewers in unfavourable positions; the lower half of the sewer is imbedded in a block of concrete, which is made of a width and thickness suitable to the nature of the ground.

Sewers are also built up of hollow terra-cotta segment blocks, which fit into one another with groove and tongue joints.

The construction of drains with stoneware pipes, and of sewers in concrete, or in segment blocks, will not be further noticed, as the subject does not fall within the limits of this Course.

CHIMNEYS.

The fireplaces in a house generally stand one immediately over the other, and each chimney flue¹ from the lower rooms has in consequence to be carried to one side or the other to avoid the fireplaces above it.

Arrangement of Flues.—Flues from the lower stories are therefore necessarily curved, but not those from the attics; a curve is, however, considered advisable in all flues, to prevent rain or sleet from beating vertically on to the fire, and to stop draughts of cold air. This curve should be sufficient to prevent daylight from being seen when looking up the flue.

¹ *Sc. Vents.*

The funnel, or opening above the fireplace, is gathered over (see p. 238), so as to be contracted to the size of flue required.

Fireplaces generally require more depth than can be provided in the thickness of the wall; this necessitates a projection to contain the fireplace and flues called the *chimney breast*. Sometimes this projection is on the back of the wall, in which case it gives more space and a more convenient shape to the room. When on the outer wall of a house it may be made an ornamental feature.

Every fireplace should have a distinct flue to itself; if the flues of two fireplaces communicate, and only one fire be lighted, it will draw air from the other fireplace, and smoke; moreover, its own smoke may enter any other room the fireplace of which is connected with the same flue.

The air heated by the fire is rarefied, rendered lighter, and ascends the flue, drawing the smoke with it, whilst cold air rushes into its place from below.

Hence the throat or lower opening of the flue should be small, so that no air may pass through it without first coming into contact with the fire and being thoroughly warmed.

The flue should not be larger than is necessary for conveying the smoke and heated air; if too large, it will smoke in certain winds.

With regard to the proper size for flues there are great differences of opinion. The size should vary according to the circumstances of different cases—but generally speaking a flue 9 inches square is sufficient to carry off the smoke from very small grates, a flue 14 inches \times 9 inches for ordinary fireplaces, and a flue 14 inches \times 14 inches for large kitchen ranges.

The smaller the flue, and the greater the height, the more rapid the draught and the less likely the chimney to smoke, provided that sufficient air is supplied and that the flue is large enough to carry off the smoke.

The flue should change its direction by gradual curves and contain no sharp angles, otherwise soot accumulates and makes it smoke. The Building Act requires that if any angle is necessarily less than 130° an iron soot door should be provided at the bend, so that the soot may be removed (see S, Fig. 369).

Much depends upon the height of a flue, the shortest, i.e. those from upper rooms, or in low buildings, being most liable to smoke.

The air should pass through or very near the fire.

Thus a high opening above the fire is bad, as it admits cold



air, which gets up the flue without being heated, and cools the rising warm air.

The fireplace should, therefore, be not much higher than the grate.

All walls about chimneys should be well built, and so should the "*withs*" or partitions between flues, as cold air may penetrate badly-built walls from the outside, or from an unused flue cold air may get into one in use, thus cooling the heated air and causing the chimney to smoke.

If openings are left in the *withs*, the smoke from a flue in use may penetrate another, and from it enter a room in which the fire is not burning.

The width of the chimney breast for each room of a high building must be arrived at by drawing the plan of the fireplace of each room, including the flues from the fireplaces of the rooms below; they can be arranged in plan in such a form as may be most convenient for the chimney stack.

A very common practice is to build the fireplaces of adjacent rooms or houses back to back, in which case the arrangement on each side of the wall is exactly the same.

The plan of bringing a number of flues into a "stack" is economical, and tends to preserve an equal temperature in them.

First Illustration of Arrangement of Flues.—Figs. 361, 362, are respectively longitudinal and cross sections of the fireplaces and flues in the wall between two 5-storied buildings.

The dotted lines in Fig. 362 show the direction of the flues of the fireplaces on the other side of the wall.

The remaining figures on page 235 show the plan of the chimney breasts on the level of each floor.

The weight upon the chimney breasts should be spread over a greater area by introducing footings,¹ as shown in Figs. 361, 362.

In some cases the same object is attained by turning an invert arch between the chimney breasts under the fireplace.

In order to economise the brickwork, and to leave as much interior space in the building as possible, the part of the chimney breast in each room is generally made of the minimum width that is absolutely necessary to contain the flues at that point.

Thus it will be seen that the chimney breasts on floors I K and G H are made narrower than those above them, because they contain fewer flues. The extra width required for the flues in the chimney

¹ *Sc. Coddings.*

breast on the other floors is gained by corbelling out as shown at *t t*. The projections in the brickwork are concealed under the floor and by the cornice of the ceiling below.

Sometimes one side of the chimney breast is made narrower than the other; thus the side *x* might be made narrower than *y*, and *w* narrower than *z*, for in each case the chimney breast on the left contains one flue less than that on the right. This causes an unsymmetrical appearance, but is often done even in superior buildings.

The whole of the external walls, both of chimney breasts and shafts, are generally made half a brick or only $4\frac{1}{2}$ inches thick.

It is safer, however, to make the front and outside wall of the chimney breasts 9 inches thick, especially when they are in contact with woodwork, such as skirtings, dados, etc.

Again, even when this is done, the outside wall of the chimney shaft itself is often reduced to half a brick directly it has passed through the roof. It is better, however, to keep the external walls of the shaft 9 inches thick throughout (as dotted at *SS* in Fig. 361), for the reasons stated at page 240.

Second Illustration of Arrangement of Flues.—It is frequently necessary, for the sake of appearance, to place the chimney in a symmetrical position, such as the centre of the roof. To this end, and also in order to avoid a multiplicity of chimney shafts, the flues have to be collected from opposite sides of the house into a central stack.

Fig. 369 shows an example of this. The flues from the rooms A, B, C, and E, converge towards a central stack, the space between the chimney breasts of the upper rooms being bridged by an arch *W*, over which the flues are carried; the brickwork forming the upper wall of the flue is racked back as shown, leaving only thickness sufficient for safety above the flues.

The chimney breast of the room C cannot be carried down to the foundation, as it would interfere with the folding doors in the room below. It is therefore supported by courses corbelled out into the room from the wall, as shown in dotted lines.

It will be noticed that the chimney breast of the room A is nearer the outer wall than that of the room below; in order to avoid widening the chimney breast below, the upper and outer chimney breast *p* is supported by courses corbelled over to one side as dotted. The corbelling is concealed by being carried out within the floor.

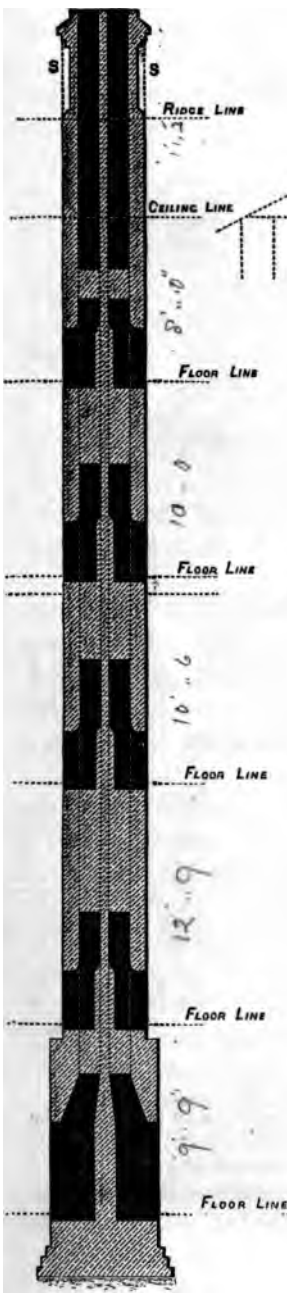


Fig. 361.

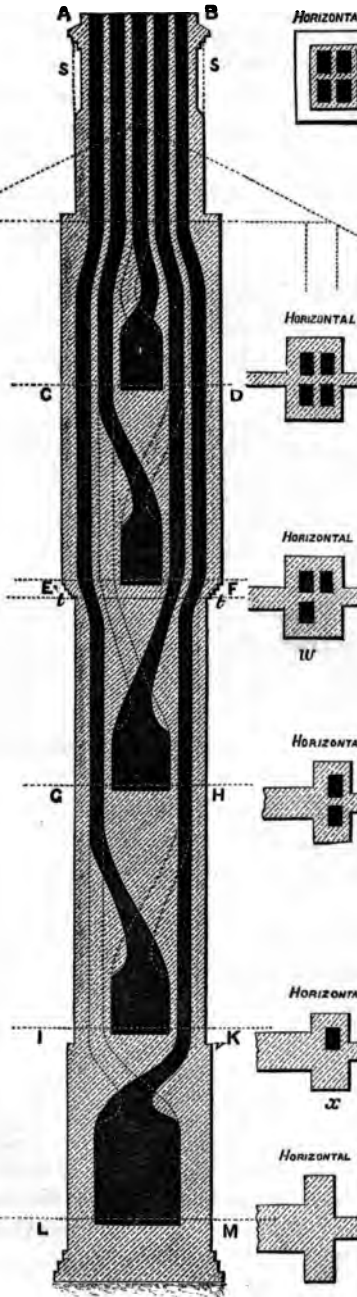


Fig. 362.

HORIZONTAL SECTION A.B.




Fig. 363.

HORIZONTAL SECTION C.D.




Fig. 364.

HORIZONTAL SECTION E.F.




Fig. 365.

HORIZONTAL SECTION G.H.




Fig. 366.

HORIZONTAL SECTION I.K.




Fig. 367.

HORIZONTAL SECTION L.M.




Fig. 368.



Fig. 369.

This Figure is the section of an ordinary dwelling-house taken on this side of the flue from E, and is intended to show two or three different arrangements of flues. It also illustrates the remarks made in Part I. as to the increase of roofing required when the wall plates are placed in the middle of the thickness of the walls. The whole surface of the ground may, with advantage, be covered by a layer of concrete, as described at page 213.

The projecting part of the upper chimney breast might be supported by turning an arch, as shown by the dotted line X, and this is a construction often adopted.

It will be seen that the flue from the room E is carried vertically up in the thickness of the outer wall as high nearly as the ceiling of the room C, then over an arch covering the recess between the chimney breast and the outer wall.

The portion of flue in the thickness of the outer wall is rather apt to be cold and to check the draught, and the construction might in this case be avoided by carrying the flue across the corner of the party wall of room D, and up the left chimney breast S (which would have to be widened to receive it) of the room C, above.

The flues in this illustration are supposed to be formed with circular earthenware pipes¹ of 9 inches diameter, shown in plan in Fig. 370.

The external walls are here shown only $4\frac{1}{2}$ inches thick, because the thickness of the flue-pipe itself affords a great protection and renders it unnecessary to make the brickwork so thick as it should be round pargetted flues.

Chimney Shafts.²—At the ceiling of the highest room the chimney breast is reduced in size to the chimney shaft of a width just sufficient to contain the flues. This shaft should be carried well above the roof, higher if possible than adjacent roofs or buildings, which are apt to cause eddies or down-draughts and make the chimneys smoke.

Chimney Caps.—A few of the upper courses of high chimney shafts are generally made to project, and should be built in cement to serve as a protection from the weather.

The cap is frequently made ornamental by bricks, placed angle-wise, etc., in a similar manner to the brick cornices and coping referred to in Part I. Stone caps are also used for brick as well as for stone chimneys.

Fireplaces.—Jambs of fireplaces are built in the same manner as brick walls. The chimney breasts should be carefully founded, resting upon footings, or supported by corbels where necessary.

In order to form the throat of the chimney, the courses are "gathered" over, each projecting $1\frac{1}{8}$ inch or so over the last, until the opening is narrowed to the required dimensions. The exact projection depends of course upon the curve required. The

¹ Sc. *Vent-linings*.

² Sc. *Stalks*.

narrowest part or throat should be immediately over the centre of the fireplace. Above the throat the flue ascends vertically for a short distance, then gathers again to the right or left, as shown in Fig. 371.

The projecting corners of the offsets are cut off, and where the flue recedes the re-entering angles are sometimes filled up with bits of brick, or by the rendering of the flue.

In consequence of the number of bats necessary in such work, the bond cannot be laid down beforehand, but must be left a good deal to the bricklayer.

Fig. 371 is an enlarged section of the flues contained in the chimney breast just above the floor, C D, in Fig. 364. It shows the method of gathering over for the flue of a small fireplace, and also the arrangement of the bricks in forming the withs, etc., for the flues from the stories below.

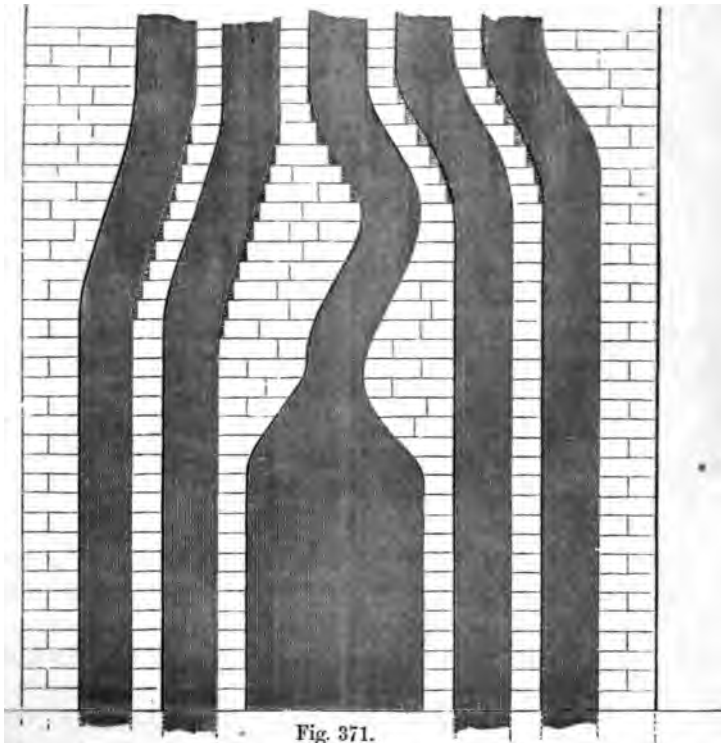


Fig. 372 is an elevation of a fireplace, showing the rough arch

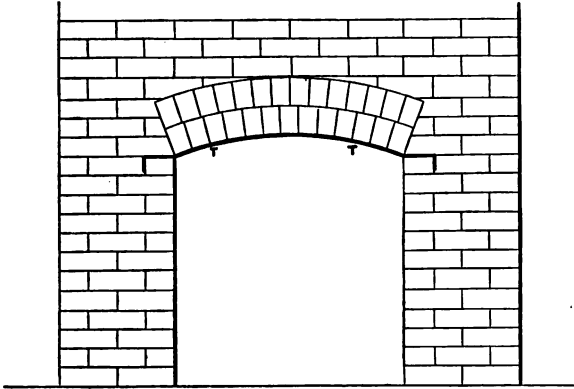


Fig. 372.

supported by a "*turning bar*,"¹ T T, of which a sketch is given in Fig. 373. The bricks next to the skew-backs are often laid as headers.

This bar is from $\frac{1}{2}$ to $\frac{3}{4}$ inch thick, and about 3 inches wide. It has a bearing of $4\frac{1}{2}$ inches on each jamb, and beyond the bearing portions, ends about 3 inches long. These ends are sometimes split longitudinally, and *corked*,² i.e. turned in opposite directions, up and down, as shown in Fig. 373. Very frequently the ends are turned either up or down without being split, and this is a better plan than that shown, for it avoids cutting bricks.



Fig. 373.

The bar is curved to fit the soffit of the arch, and in order to prevent it from straightening under the thrust a small bolt is sometimes passed through it and secured to a plate on the crown of the arch.

Flat turning bars have been advocated as tending to draw the jambs together instead of thrusting them out, but they are seldom if ever adopted.

The interior of the jambs of chimney breasts should always be filled in solid.

Hearths are stone flags about $2\frac{1}{2}$ inches thick, placed so as to catch the droppings from the grate. The *back hearth* covers the

¹ Or Chimney-bar.

² Or Corked.

space between the jambs of the chimney breast. The *front hearth* rests upon the trimmer arch described at p. 92, Part I.

Bond of Chimney Shafts.—It has already been mentioned that the external walls of chimneys should be 9 inches thick, at least until the shaft has passed through the roof; they are better if built in cement.

Such a thickness is almost necessary for safety within the building, where the woodwork of the roof and skirtings is frequently brought up against the chimney.

It is, moreover, an advantage to have a thick wall round the chimney shaft, even in the open air, as it tends to keep the flue warm. A thin wall is soon partially destroyed by the weather, and admits cold air to the flue, causing it to smoke.

WHOLE-BRICK EXTERNAL WALLS, ENGLISH BOND.—Figs. 374-5

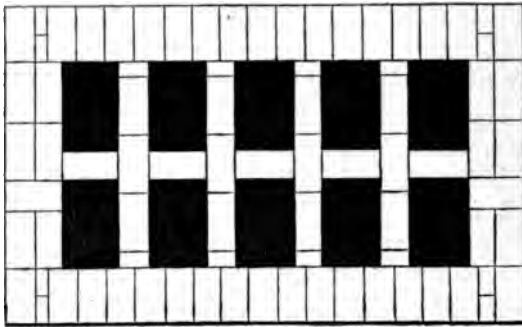


Fig. 374.

give horizontal sections of two courses of the chimney in Fig. 362, just before it emerges from the roof. It has an exterior wall 9 inches thick built in English bond.

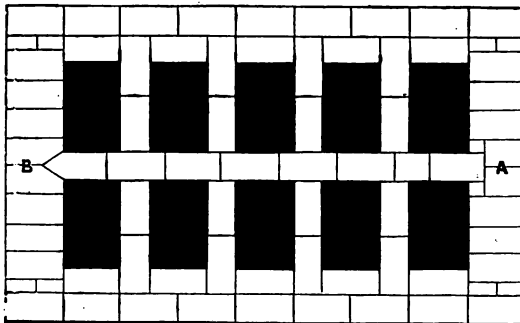


Fig. 375.

It will be seen that the cross withs are well bonded into the external walls in alternate courses, and the longitudinal with may also be bonded in either by cutting bricks as at A, or by mitreing as at B.

HALF-BRICK EXTERNAL WALLS, ENGLISH BOND.—In ordinary buildings the external walls of chimneys and chimney breasts,

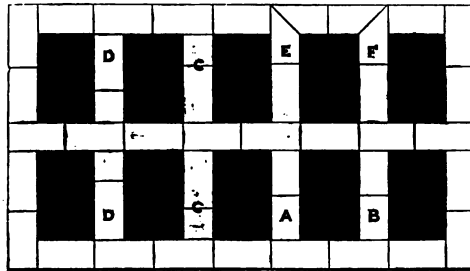


Fig. 376.

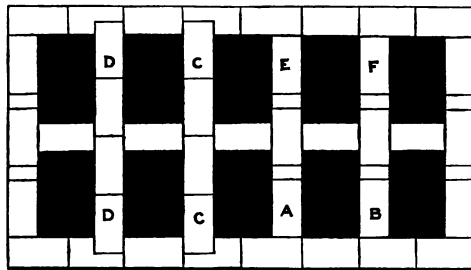


Fig. 377.

are, for economy, made only half a brick thick throughout, both inside the building and above the roof. Examples of the necessary bond are therefore shown in Figs. 376, 377, though such thin external walls are objectionable for the reasons already stated.

These $4\frac{1}{2}$ -inch external walls are generally built in stretching bond; such a bond, however, carried out in the ordinary manner leaves the cross withs quite detached from the side walls, as are the withs A B in Fig. 377.

This may, however, be avoided by causing the withs in alternate courses to penetrate the side walls to the depth of $\frac{1}{4}$ brick or $2\frac{1}{4}$ inches, as shown in withs C C, D D, Fig. 377, or by cutting the bricks forming the ends of the withs to a mitre, as at E F, Fig. 376, so as to fit the adjacent bricks in the external wall, which are similarly cut.

In both these arrangements the bricks are not allowed to show

on the face of the external wall, as headers would interfere with the appearance of the stretching bond.

HALF-BRICK EXTERNAL WALLS, FLEMISH BOND.—The external walls of chimneys may very conveniently be built in Flemish

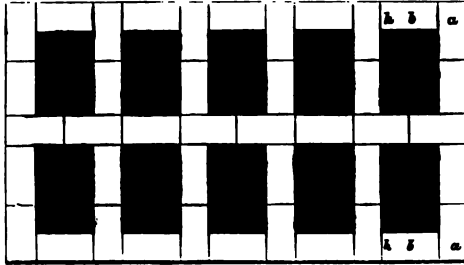


Fig. 378.

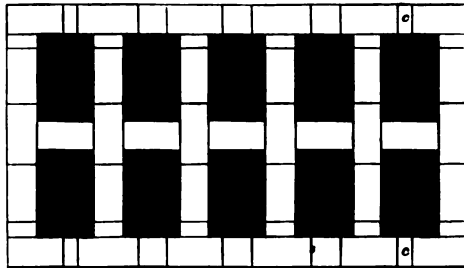


Fig. 379.

bond as shown in Fig. 377. It will be noticed that there is no elaborate cutting of bricks, the bond is perfectly symmetrical, and the withs are admirably united with the external walls.

If the flues at one end were required to be 14 inches square, as for a very large kitchen chimney, $\frac{3}{4}$ bricks would be used instead of *c c*, and half bricks or false headers inserted at *h h*.

The exact arrangement of bond in a chimney must depend upon the size, shape, diameter, and arrangement of the flues, the thickness of the outer walls, the bond adopted in the building, and other particulars depending upon circumstances.

It would of course be impossible to illustrate even a very small portion of the various arrangements required by different combinations of the above particulars.



Further examples cannot here be given, but it will be good practice to the student to draw for himself the bonds best adapted for chimneys of different forms and arrangements, in doing which it is hoped that he will find the above illustrations a useful guide.

Stone Chimneys.—Chimney breasts in stone buildings are very often built with bricks, which are better adapted than stone for forming the thin withs and walls required, and generally less expensive than sound masonry.

The chimney breasts and flues are, however, frequently built in rubble.


When the chimney passes above the roof it is of course

Fig. 380.

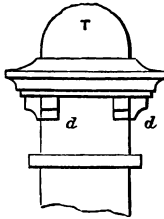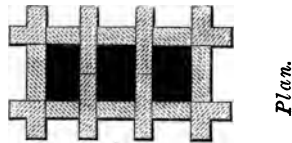

End Elevation.

Fig. 382.

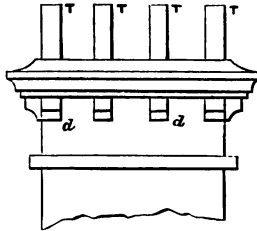

Side Elevation.

Fig. 381.

necessary that, for the sake of appearance, it should be of the same material as the walls of the building generally.

Chimneys in rubble are built in a very similar way to those in brickwork; those of cut stone or ashlar are very varied in form and design.

Figs. 380 to 382 show the plan and elevations of a chimney in cut stone, of a form frequently used.

The cap is supported by dentils, *d d*, and surmounted by semi-circular "terminals," *T, T*, which are intended to prevent down-draughts, and to protect each flue from the action of those adjacent to it.

Chimney Flues, especially those in masonry, are frequently formed with earthenware pipes, which afford but little resistance to the smoke, are free from the objectionable corners of brick flues, do not collect the soot, and are easily kept of uniform section throughout; on the other hand, if the internal surface is too smooth, the soot is apt to collect and fall in lumps.

RENDERING.—The flues may be rendered inside with Portland cement.

PARGETTING.—The ordinary method is, however, to plaster the inside of the flue over with a mixture of one part of lime with three of cow dung; this forms a tough lining with a smooth surface, and not so liable to crack as ordinary mortar.

CORING.—While a chimney flue is being built, it is advisable to keep within it a bundle of rags or shavings called a "sweep," in order to prevent mortar from falling upon its sides; and after the flue is finished, a wire brush or core should be passed through it to clear away small irregularities, and to detect any obstruction that there may be in the flue.

CHIMNEY POTS¹ are frequently placed over flues, to prevent the eddy of wind that would be caused by a flat surface at the top of the chimney.

¹ Sc. *Chimney cans*.

CHAPTER XIV

TIMBER ROOFS.

(Continued from Part I.)

THE king-post roof and simpler forms described in Part I., are adapted for spans up to 30 feet.

This Course includes the trusses ordinarily used for spans of from 40 to 60 feet.

Gothic and other roofs adapted for special styles of architecture, or for particular situations, will not be referred to.

Trusses involving the use of curved or built-up beams are also excluded.

N.B.—In all the figures illustrating timber roofs, the distinctive letters for different parts are as follows :—

| | | | |
|---------------------------|-----------|------------------------------|-----------|
| Angle Tie | <i>a</i> | Pole Plate | <i>PP</i> |
| Battens | <i>b</i> | Princess Post | <i>PP</i> |
| Binders | <i>Bi</i> | Purlin | <i>P</i> |
| Blocking Course | <i>Bc</i> | Rafters, Principal | <i>PR</i> |
| Boarding | <i>B</i> | „ Common | <i>CR</i> |
| Ceiling Joists | <i>Cj</i> | „ Jack | <i>JR</i> |
| Cleats | <i>C</i> | Ridge | <i>r</i> |
| Collar Tie | <i>CT</i> | Soffit | <i>fs</i> |
| Cornice | <i>c</i> | Struts | <i>S</i> |
| Fascia | <i>F</i> | Slates | <i>s</i> |
| Gutter | <i>G</i> | Straining Beam | <i>SB</i> |
| Gutter-bearer | <i>gb</i> | „ Sill | <i>SS</i> |
| Gutter-plate | <i>gp</i> | Templates (wall) | <i>wt</i> |
| King Bolt | <i>KB</i> | Tie Beam | <i>T</i> |
| „ Post | <i>KP</i> | Tilting Fillet | <i>tf</i> |
| Queen Bolt | <i>QB</i> | „ Batten | <i>tb</i> |
| „ Post | <i>QP</i> | Truss (Principal) | <i>TP</i> |
| Parapet Wall | <i>PW</i> | Wall Plates | <i>wp</i> |

King and Queen Post Roofs.—King-post trusses will do very well for roofs up to about 30 feet span, but for wider roofs it is found that the tie beam requires support at more than the one central point; additional vertical ties, called queen posts, have therefore to be introduced, as at QP, QP, Fig. 383.

The common rafters being longer, require support at more than

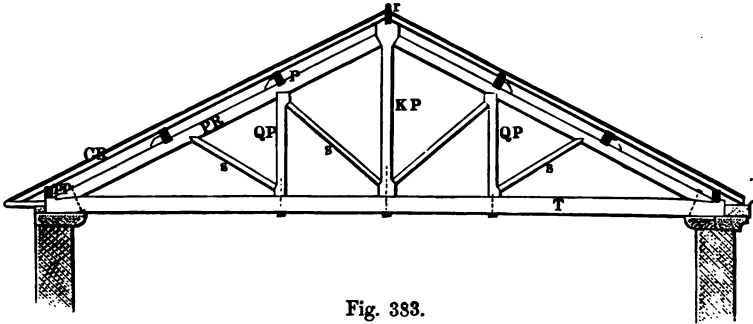


Fig. 383.

one point, two purlins are therefore introduced on each side of the roof.

Queen-Post Roof with King Bolts.—This excellent construction is shown in Fig. 401.

When a flat top is not required, purlins with common rafters running down the slope of the roof are adopted, as in Fig. 383, and the apex of the roof finished as there shown.

Queen-Post Roofs.—When rooms have to be formed in the roof, and frequently besides, the king post is omitted, in which case, to prevent the heads of the queen posts from being forced inwards, a straining beam is placed between them, as shown at SB in Fig. 384, and their feet are kept apart by a straining sill, SS.

This form of roof is well adapted for spans of from 30 to 45 feet.


The ends of the straining beam sometimes receive additional support from cleats, as at C, secured to the queen posts. The strap above C is omitted in the figure in order to show the joint.

Roof with Queen Posts and Princesses.—In roofs of a greater span than 45 feet, the tie beam requires to be upheld at more than two intermediate points.

The extra support necessary is furnished by the introduction of additional suspending posts, PP, known as *Princesses*.

Such a construction as that shown in Fig. 385 may be used for spans between 45 and 60 feet.

In roofs of above 50 feet span the straining beam between the heads of the queen posts is so long that it would sag without support, and this may be afforded by means of a small king tie, suspended from the junction of the principal rafters, which are prolonged above the straining beam, as dotted in the figure.

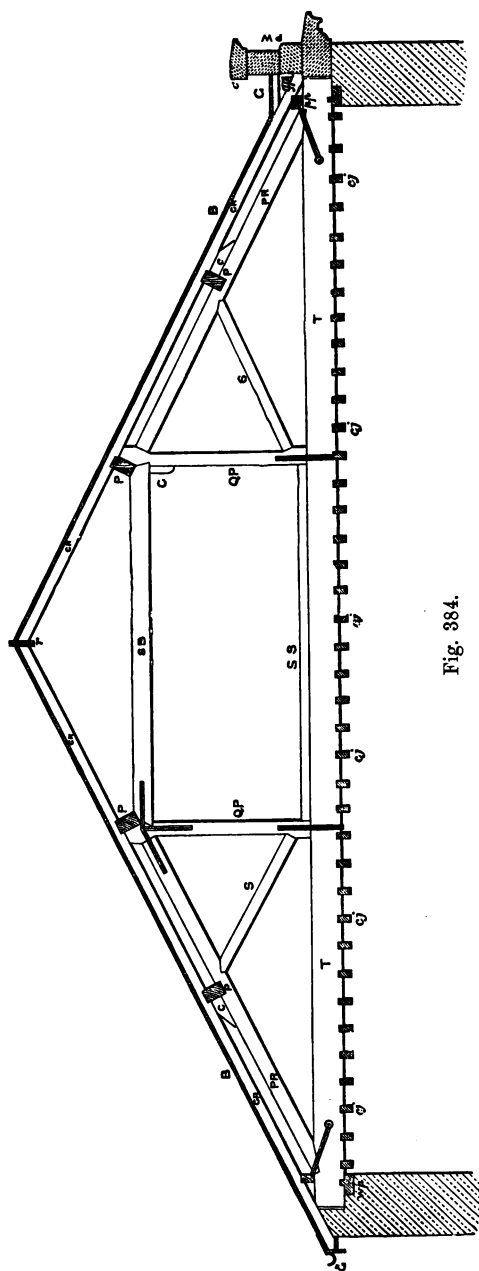

Elevation of Queen-Post Truss.

In a roof of this kind the space between the queen posts affords convenient accommodation.

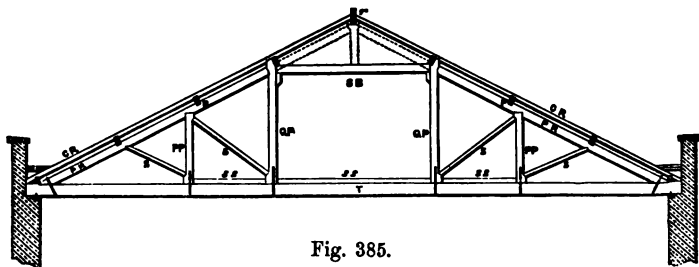


Fig. 385.

Roofs of Spans greater than 60 Feet.—The consideration of such roofs does not fall strictly within the limits of this course, and in these days they would generally be constructed of iron; it will be sufficient, therefore, to give one or two skeleton examples of old timber roofs of large span, before dismissing the subject.

In these figures the lines all represent timber in scantling, framed and put together in a similar way to the members of the trusses depicted in Figs. 383-385.

Fig. 386 nearly resembles the roof of the old Birmingham

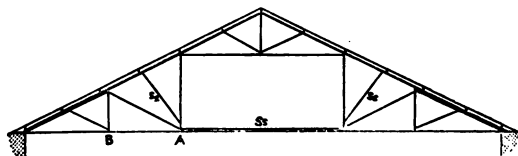


Fig. 386.

Theatre, and is recommended by Tredgold as a good truss for roofs of from 75 to 90 feet span.

In this case the triangular portion above the straining beam, being of considerable dimensions, is formed into a regular king-post truss.

The length of rafter between the queen post and princess being so great as to require support, this is afforded by means of a second strut, S_2 .

In this roof the straining sill, SS , was keyed and bolted to the tie beam, and the tie beam was scarfed between A and B .

The scantlings adapted for the trusses shown in Figs. 384-386 are given at page 259.

Fig. 387 shows one of the principal trusses of the old roof of Exeter Hall.

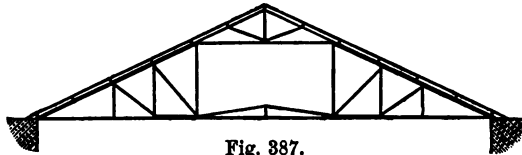


Fig. 387.

This truss is of 76 feet span, and includes a second set of princesses.

In other respects it is similar to the roof last mentioned, except that the straining sill is trussed as described at page 250.

The scantlings of this roof were as follows:—

| | Inches. | | Inches. |
|---|-------------------------------------|-----------------------------------|-------------------------------------|
| Tie beam | $14\frac{1}{2} \times 7\frac{1}{2}$ | Struts | $7\frac{1}{2} \times 7\frac{1}{2}$ |
| Principal rafters { long | $8\frac{1}{2} \times 7\frac{1}{2}$ | Apex { king posts (oak) | $6 \times 7\frac{1}{2}$ |
| { short | $14 \times 7\frac{1}{2}$ | { struts | $6 \times 7\frac{1}{2}$ |
| These extended only as far as the head of the queen post. | | Straining sill | $7\frac{1}{2} \times 7\frac{1}{2}$ |
| Straining or collar beam | $14 \times 7\frac{1}{2}$ | Common rafters | $5 \times 2\frac{1}{2}$ |
| Queen posts (oak) | $8\frac{1}{2} \times 7\frac{1}{2}$ | Hip rafters | $10 \times 2\frac{1}{2}$ |
| Princesses | $12 \times 4\frac{1}{2}$ | Ridge piece | $8 \times 3\frac{1}{2}$ |
| do. outer set | $10 \times 4\frac{1}{2}$ | Pole plates | 12×4 |
| | | Wall plates | $13\frac{1}{2} \times 6\frac{1}{2}$ |

Fig. 388 shows a similar form of roof, but with the apex re-




Fig. 388.

moved, and a lead flat substituted, the central portion, which carries the flat, being strengthened by the introduction of a king post and cross bracing.

Roofs composed of Wood and Iron for Spans of more than 40 Feet.—As already stated in Part I., the chief use of wrought iron in composite roofs is as a substitute for the wooden posts or suspending pieces which uphold the tie beam.

Cast iron is also extensively used, in the form of shoes, heads, etc., for receiving and connecting the members of the truss.

It is not considered worth while to give any illustrations of composite roofs of wide span, as they are similar in principle to those illustrated in Part I., and have not been much used since the introduction of iron roofs.

PARTS OF A QUEEN-POST ROOF.

The parts common to all ordinary roofs, such as tie beams, rafters, wall plates, purlins, ridges, gutters, etc., have already been considered in Chap. VII., Part I., and it remains only to give a description of those peculiar to queen-post roofs.

Queen Posts.—These have, between them, to carry about $\frac{2}{3}$ the weight of the tie beam, together with that of the ceiling, if any, suspended therefrom, and they frequently have to support additional loads brought upon the tie beam by the occupation of the space between the queen posts as a garret.

The heads of the queen posts are kept apart by a "straining beam," SB (Fig. 384), and the feet are tenoned into the tie beam and prevented from moving inwards by a "straining sill," SS.

The feet of the queen posts are sometimes secured by being housed on their inner sides into the tie beam, in which case the straining sill may be dispensed with.

Straining Beam.—The object of this beam has just been mentioned—its ends are supported by being housed and tenoned into the heads of the queen posts, additional security being generally afforded by cleats, C, nailed to the posts as shown.

When the straining beam is of considerable length it is sometimes supported in the centre by struts inclining inwards from the feet of the queen posts, as in Fig. 401.

In that figure it is shown as supporting a lead flat, in which case it may with advantage be made thicker in the centre than at the ends, so as to strengthen the beam, and to give the lead a slight slope outwards.

Straining Sill.—This is generally merely a piece of scantling lying on the tie beam, and butting against the feet of the queen posts.

The straining sill is sometimes bolted and keyed to the tie beam in the manner explained at page 275.

It may, however, be arranged, as shown in Fig. 387, so as to form a truss and give support to the centre part of the tie beam.

In a roof with princess posts, straining sills may advantageously be introduced between the feet of the queens and princesses.

Binders, marked *Bi*, are shown in Fig. 401 framed in between the tie beams. This is sometimes a convenient arrangement for

stiffening the roof. It may also be adopted when the principals are widely spaced, in order to afford a shorter bearing for the ceiling joists.

Purlin Roofs.—When a long building is divided into rooms of moderate length by partition walls running across it, as shown in Fig. 389, the walls themselves play the part of the principals and carry the purlins, these latter supporting the rafters as usual.

If the purlins have to be of such a length that their scantling would be inconveniently large, they may with advantage be constructed in the form of trusses.

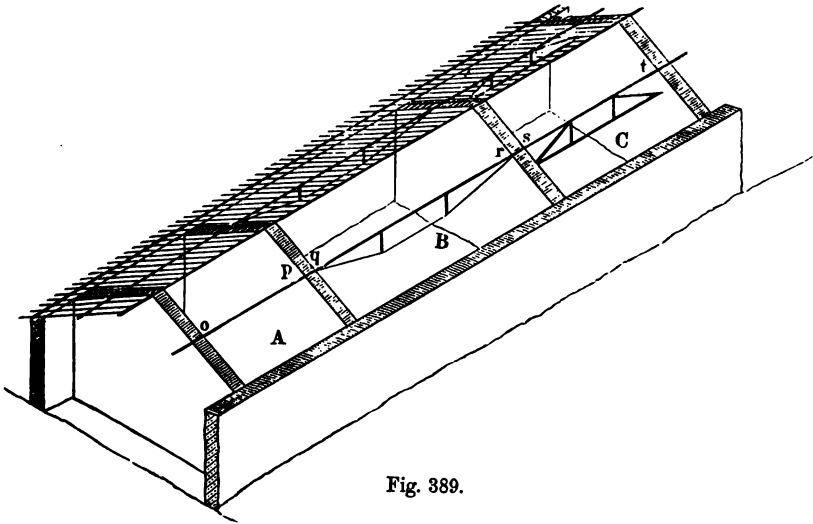


Fig. 389.

It will, however, be a question of economy whether it is more or less expensive to use trussed purlins than to introduce principals between the walls, so as to reduce the bearing of the purlins to such an extent that they may be formed with beams of ordinary scantling.

Fig. 389 shows a portion of a building of the description referred to above. The first space A, being of moderate length, is spanned by a purlin consisting of an ordinary beam *op*. The next room B, being much longer, is crossed by a purlin, *qr*, trussed with iron rods as described at page 280, while the roof on the third compartment, C, has a wooden purlin *st* trussed in ordinary queen-post fashion.

The rafters resting upon the purlins are omitted on the near

side of the roof to avoid confusing the figure. The purlins should rest upon stone templates built into the walls; these are not shown in Fig. 389.

In some cases trussed purlins are used in connection with ordinary trussed principals; these latter being placed at a considerable distance apart.

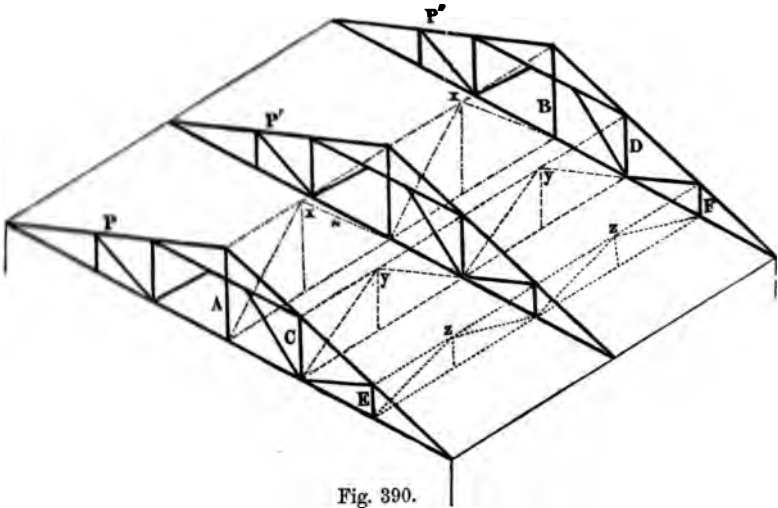


Fig. 390.

For example, in the skeleton diagram Fig. 390, the principals P P P, represented in thick lines, are 20 feet apart, and connected by trussed purlins (each dotted in a different manner), which are shown only on the near side of the roof; those on the farther side being omitted for the sake of clearness.

On these purlins may lie the common rafters, inclining downwards, parallel to the principal rafters, or intermediate principal rafters may be introduced, not forming part of a truss, but resting upon the purlins at $x y z$, and across the principal rafters horizontal common rafters may be placed.

This roof resembles that fixed at Christ's Hospital in 1834, the details of which will be found in Tredgold's Carpentry.

Horizontal Rafters.—Roofs are sometimes constructed with horizontal rafters extending across the principals, at right angles to them, as in Fig. 401. These are in fact purlins, except that they support the roof covering directly, having no rafters upon them.

This is a strong and cheap arrangement, and specially con-



venient when the roof covering is in large pieces, such as sheets of corrugated iron, which can be laid on the rafters without boarding.

When boards are required, they of course extend lengthways down the slope of the roof, and their edges are thus not so liable to be soaked with wet, in case of a leak, as they are when laid parallel to the ridge.

ROOFS OF VARIOUS SHAPES, AND THEIR PARTS.

Different names are given to roofs according to their form.

A "**Lean-to**"¹ roof has only one side or slope, which leans against a vertical wall. See Fig. 391.

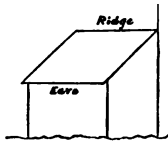


Fig. 391.




Fig. 392.




Fig. 393.

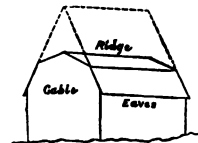


Fig. 394.

A **M Roof** consists of two ordinary triangular roofs side by side (Fig. 392).

A **V Roof** (shown in section, Fig. 393) has two slopes inclining inwards from side walls towards a gutter, which rests upon beams running along the centre of the building.

A **Flat-topped Roof** is one in which the apex of the triangle is cut off flat, as in Fig. 401.

A **Curb or Mansard Roof** is one in which the apex of a high triangle is cut off and replaced by a flatter summit, as in Fig. 394.

A **Conical Roof** is shaped like a cone.

An **Ogee Roof** has sides of which the lower portions are

¹ Sc. To-fall.

convex outwards and the upper portion concave, thus forming curves resembling that after which they are named. These two last descriptions are seldom required, and will not be further noticed.

The Ridge is the line formed by the meeting of the slopes of a roof at the summit.

The Eaves are the lower edges of the slopes, which rest upon the walls or project over them.

A Gable is formed when the end wall of a building is carried up so as to terminate the roof, as in Fig. 392.

A Hipped Roof¹ is sloped back at the ends as in Fig. 395. These terminating slopes are called the "hipped ends."

Hips² are the salient angles formed by the intersection of the sides and ends.

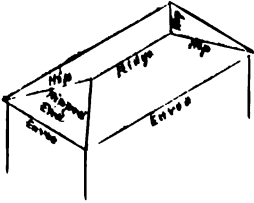


Fig. 395.

Valleys are the intersections similarly formed in re-entering angles (see VR VR, Fig. 396).

A Pavilion Roof is hipped uniformly at both ends, as shown in Fig. 395.

Construction of Hipped Roofs.—If a roof terminates in gables only ordinary principals are required in its construction,

but if it is cut into by another roof or is hipped back at the ends special arrangements have to be made for the valleys and hips.

When a simple couple roof is "hipped," deep and narrow "*hip rafters*"³ HR, Fig. 396, are carried from the end of the ridge to the angles of the end of the building, and short rafters, called "*jack rafters*," jr, are cut to fit in between the hip rafters and the wall plates.

The same course is followed in the valley caused by the intersection of two roofs, "*valley rafters*" or *valley pieces* being introduced, as at VR VR in Fig. 396.

In framed roofs the jack rafters fit in between the hip rafters and the wall plates, or between the valley pieces and the ridges.

Fig. 396 is the plan, and Fig. 397 a sectional elevation, of a collar-tie roof covering a building of irregular form.

In the former figures, HR HR are the hip rafters, VR VR the valley rafters, DD the dragon pieces in the angles (see p. 256), TT the trimmers carrying the rafters round openings left in the roof for chimneys, skylights, etc.

¹ Sc. *Piend* roof.


² Sc. *Piends*.

³ Sc. *Piend* rafters.

Fig. 397 shows in section the collar-tie roof trimmed to clear the chimney, and in elevation the gable end G, and the end hipped back at F.

Fig. 396.

Plan.

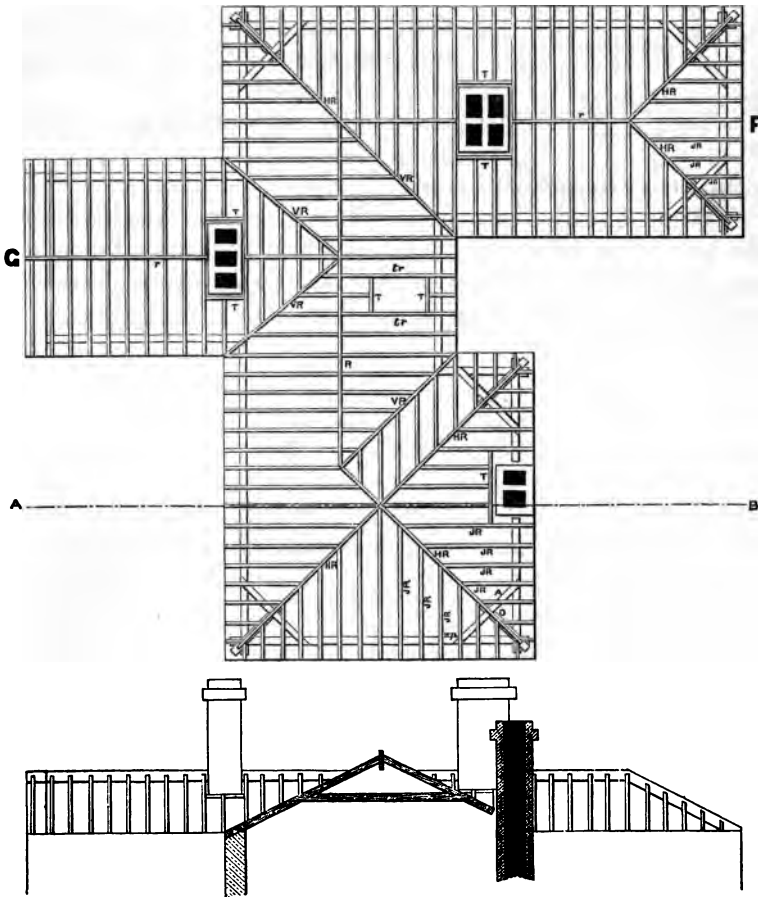

Sectional Elevation on A B.

Fig. 397.

In a larger roof, such for instance as requires king-post trusses with purlins, as in Fig. 398, the length of the purlin, PP, on the hipped end would be too great to be left without support; in such a case a half king-post truss may be introduced at KT.

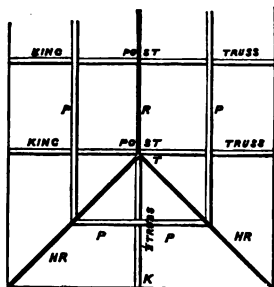


Fig. 398.

Similarly in a queen-post roof half principals are placed abutting against the queen posts of the first main truss, and at right angles to it.

In larger roofs flat-topped trusses must be introduced at intervals in the hipped ends to carry the rafters.

FRAMED ANGLE.—In a construction such as that described above, the hip rafter being very long and heavy requires to be well supported at its lower end, or it would thrust out the corner of the building; moreover the angle requires to be tied together.

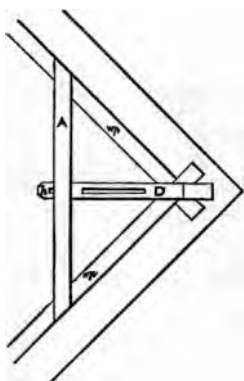


Fig. 399.

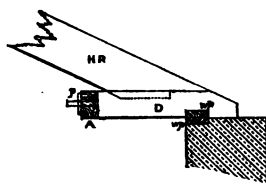


Fig. 400.

These objects are fulfilled by the arrangements shown in Figs. 399, 400. The foot of the hip rafter is tenoned into a mortise in the *dragon beam*¹ D, one end of which is notched into the wall plate W, while the other is furnished with a strong tusk tenon which passes through a hole in the *angle brace* A.

After the hip rafter is fixed it is tightened up by driving a pin into the hole *h*.

Trimming.²—Wherever rafters come across any obstacle, such as a chimney, they must be trimmed in the same way as described in Part I. for floor joists. Thus in Fig. 396 the rafters *tr tr*

¹ Or dragging-tie.

² Sc. *Bridling*.

would be made thicker than the others, and a trimmer, T, framed in between them. The rafters are similarly trimmed in order to leave openings for skylights, etc., as shown at S, Fig. 495.

The roof in Fig. 369 is trimmed to clear the chimney; the trimmer is shown in section at T.

The trimmers are often placed vertically, and sometimes supported in the centre by corbels protruding from the chimney.

Flat-topped Roofs.—Fig. 401 shows a method of forming a very nearly flat top to a queen-post roof.

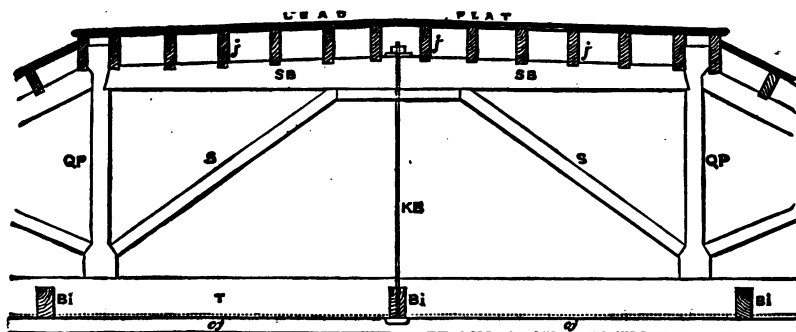


Fig. 401.

The straining beam, SB, is made slightly thicker in the centre, so as to raise the joists, *j j j*, supporting the lead flat, sufficiently to throw off the wet. The rolls for the lead are not shown (see Part I.)

Sometimes rafters at a very flat slope are introduced above an ordinary straining beam to carry the joists.

As a considerable weight comes upon the straining beam, it receives additional support from two struts branching inwards from the feet of the queen posts, and kept asunder by a small straining piece. Fig. 401 shows also binders framed in between the tie beams, as described at p. 250.

Mansard or Curb Roofs were originally introduced in the days of very steep roofs, with a view to diminish their excessive height by cutting off the apex and substituting for it a summit of flatter slope.

This form of roof is condemned by Tredgold as being ungraceful in form, causing loss of room as compared with the original roof of high pitch, and further on account of the difficulty of freeing the gutters from snow. It is, moreover, a dangerous structure on account of its inflammability.

It is, however, much in use at the present time, as it affords an

economical attic story, and is considered by many to be more picturesque than the flatter roofs, while it is certainly much cheaper and less exposed than those of high pitch.

There are several ways of describing the outline of a Mansard roof.¹

Fig. 402 shows Belidor's method,² which is the one most usually adopted. It consists in dividing the semicircle, described on the span 0 5, into five equal parts at the points 1, 2, 3, 4, 5; the highest point r is then marked, lines joining 0 1 and 4 5 form the sides of the true roof, while 1 r and r 4 give those of the false roof or summit.

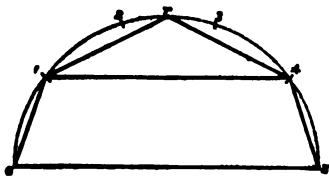


Fig. 402.

Fig. 403 shows an ordinary form of Mansard roof.

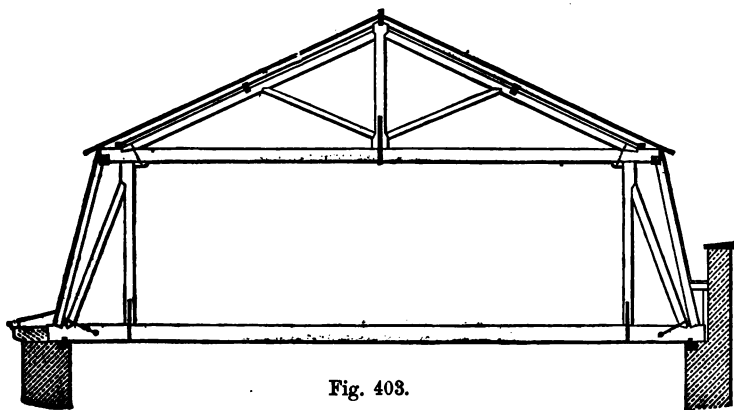


Fig. 403.

Those trusses that come immediately over a partition may be much strengthened if connected with it by prolonging the king post downwards so as to form the centre post of such a partition as that in Fig. 221, Part I.

Tredgold's Tables of Scantling for Roofs 30 to 60 feet span.

—The following tables give the sizes of timbers for roofs of from 30 to 60 feet span.

Those for king-post roofs adapted for spans of from 20 to 30 feet are given in Part I., page 123.

¹ Theoretically the beams should be in equilibrium, and support each other without fastenings: to do this they should be arranged in the form they would assume if loosely connected at the ends, and then inverted and allowed to hang in a catenary curve.

² From Newlands' *Carpenter's and Joiner's Assistant*.

QUEEN-POST ROOFS, such as in Fig. 384.—TABLES of SCANTLINGS of TIMBER for different Spans, from 30 to 46 feet.

| Span. | Tie beam, T. | Queen Post, QP. | Principal Rafters, PR. | Straining Beam, SB. | Struts, S. | Purlins, P. | Common Rafters, CR. |
|--------|-----------------|--------------------|------------------------------|---------------------------|---------------|----------------|---------------------------|
| 32 ft. | 10 by 4½ | 4½ by 4 | 5 by 4½ | 6¾ by 4½ | 3¾ by 2½ | 8 by 4¾ | 3½ by 2 |
| 34 " | 10 " 5 | 5 " 3½ | 5 " 5 | 6¾ " 5 | 4 " 2½ | 8½ " 5 | 3¾ " 2 |
| 36 " | 10½ " 5 | 5 " 4 | 5 " 5¾ | 7 " 5 | 4½ " 2½ | 8½ " 5 | 4 " 2 |
| 38 " | 10 " 6 | 6 " 3¾ | 6 " 6 | 7½ " 6 | 4½ " 2½ | 8½ " 5 | 4 " 2 |
| 40 " | 11 " 6 | 6 " 4 | 6 " 6 | 8 " 6 | 4½ " 2½ | 8½ " 5 | 4½ " 2 |
| 42 " | 11½ " 6 | 6 " 4½ | 6½ " 6 | 8½ " 6 | 4½ " 2½ | 8½ " 5½ | 4½ " 2 |
| 44 " | 12 " 6 | 6 " 5 | 6½ " 6 | 8½ " 6 | 4½ " 3 | 9 " 5 | 4½ " 2 |
| 46 " | 12½ " 6 | 6 " 5½ | 7 " 6 | 9 " 6 | 4½ " 3 | 9 " 5½ | 5 " 2 |

QUEEN AND PRINCESSES ROOFS, such as in Fig. 385.—TABLE of SCANTLINGS of TIMBER for different Spans, from 46 to 60 feet.

| Span. | Tie beam, T. | Queen Post, QP. | Princesses PP. | Principal Rafters, PR. | Straining Beam, SB. | Struts, S. | Purlins, P. | Common Rafters, CR. |
|--------|-----------------|-----------------------|-------------------|------------------------------|---------------------------|---------------|----------------|---------------------------|
| 48 ft. | 11½ by 6 | 6 by 5¾ | 6 by 2½ | 7½ by 6 | 8½ by 6 | 4½ by 2¾ | 8½ by 5 | 4 by 2 |
| 50 " | 12 " 6 | 6 " 6¼ | 6 " 2½ | 8½ " 6 | 8½ " 6 | 4½ " 2¾ | 8½ " 5 | 4½ " 2 |
| 52 " | 12 " 6½ | 6 " 6¾ | 6 " 2½ | 9½ " 6 | 8½ " 6 | 4½ " 2¾ | 8½ " 5½ | 4½ " 2 |
| 54 " | 12 " 7 | 7 " 6½ | 7 " 2½ | 6½ " 7 | 9 " 6 | 4½ " 2¾ | 8½ " 5½ | 4½ " 2 |
| 56 " | 12 " 8 | 7 " 6¾ | 7 " 2½ | 7½ " 7 | 9½ " 6 | 5 " 2¾ | 8½ " 5½ | 4½ " 2 |
| 58 " | 12 " 8½ | 7 " 7¼ | 7 " 2½ | 8½ " 7 | 9½ " 7 | 5 " 2¾ | 9 " 5½ | 4½ " 2 |
| 60 " | 12 " 9 | 7½ " 7 | 7 " 3 | 9 " 7 | 10 " 7 | 5 " 3 | 9 " 5½ | 4½ " 2 |

QUEEN AND PRINCESSES ROOFS, with trussed apex, such as in Fig. 386.—TABLE of SCANTLINGS of TIMBER for different Spans, from 60 to 90 feet.

| Span. | Tie beam, T. | Queen Post, QP. | Prin- cesses, PP. | Principal Rafters, PR. | Straining Beam, SB. | King Post, KP. | Struts, S. | Purlins, P. | Common Rafters, CR. |
|--------|-----------------|-----------------------|-------------------------|------------------------------|---------------------------|----------------------|---------------|----------------|---------------------------|
| 65 ft. | 15 by 10½ | 8 by 7 | 5 by 3 | 8 by 7½ | 10½ by 8 | 5 by 3 | 5 by 3½ | 8½ by 5 | 4 by 2 |
| 70 " | 15 " 11½ | 9 " 6½ | 5 " 3½ | 9 " 7 | 10½ " 9 | 5 " 3½ | 5 " 4 | 8½ " 5 | 4½ " 2 |
| 75 " | 15 " 13½ | 9 " 7½ | 5 " 4 | 9 " 8 | 11½ " 9 | 5 " 4 | 5 " 4½ | 8½ " 5 | 4½ " 2 |
| 80 " | 16 " 13 | 9 " 9 | 6 " 4 | 10½ " 9 | 12 " 9 | 6 " 4 | 6 " 3½ | 8½ " 5½ | 4½ " 2 |
| 85 " | 16 " 13½ | 9½ " 9 | 6 " 4½ | 12 " 9 | 12½ " 9 | 6 " 4½ | 6 " 4 | 9 " 5½ | 4½ " 2 |
| 90 " | 16 " 14 | 10 " 9½ | 6 " 4½ | 13½ " 10 | 13 " 10 | 6 " 4½ | 6 " 4 | 9 " 5½ | 5 " 2 |

N.B.—In these Tables the pitch of the roof is supposed to be about 27°; the trusses 10 feet apart. The covering slates and the timber to be good Memel or Riga fir. Inferior timber will require to be of larger dimensions. The scantlings for the tie beams may be considerably reduced when they do not carry ceiling joists.

TREDGOLD'S RULES FOR SCANTLING OF ROOF TIMBERS.

The following rules laid down by Tredgold will be useful to those who are unable to find the direction and amount of the strains on various parts of a roof; and thus by a more accurate method to arrive at the sizes necessary for the different parts.

The student should observe that though these look like complicated formulæ, they are very simple, being merely letters substituted for words, as in Hurst's Pocket-book, and they require nothing but ordinary arithmetic for their application.

B=Breadth of piece in inches. D=Depth of piece in inches. A=Area of section of piece in inches= $B \times D$. L=Length of piece in feet. S=Span of roof in feet.

Tie Beam.— u = Length of longest unsupported part in feet.

When the tie beam has to support a ceiling only.

$$D = \frac{u}{\sqrt[3]{B}} \times 1.47 \text{ for fir, or } \times 1.52 \text{ for oak.}$$

When there are rooms above, the tie beam must be calculated as a girder (see p. 102, Part I.)

Ceiling Joists 12 inches from centre to centre.

$$D = \sqrt[3]{\frac{L}{\sqrt{B}}} \times 0.64 \text{ for fir, or } \times 0.67 \text{ for oak.}$$

King Post.— $A = L \times S \times 0.12$ for fir, or $\times 0.13$ for oak.

King Bolt.—Diameter in inches = $\sqrt{S} \times 0.2$.

Queen Post.— t = length in feet of part of tie-beam suspended by the queen post.

$$A = L \times t \times 0.27 \text{ for fir, or } \times 0.32 \text{ for oak.}$$

Queen Bolt.—Diameter in inches = $\sqrt{t} \times 0.29$.

Struts and Braces.— r = length of part of principal rafter supported by the strut, in feet.

$$D = \sqrt{L \times \sqrt{r}} \times 0.8 \text{ for fir.}$$

$$B = \frac{1}{16} D.$$

Principal Rafters.—Supported by struts over which the purlins rest.

$$\text{In King-post roof.}—D = \frac{L^2 S}{B^2} \times 0.096 \text{ for fir.}$$

$$\text{In Queen-post roof.}—D = \frac{L^2 S}{B^2} \times 0.155 \text{ for fir.}$$

} The thickness is generally the same as that of the tie beam and king or queen posts.

Purlins.— C = distance in feet that the purlins are apart.

$$D = \sqrt[4]{L^2 \times C} \times 1.0 \text{ for fir, or } 1.04 \text{ for oak.}$$

$$B = \frac{1}{16} D.$$

Common Rafters.— $D = \frac{L}{\sqrt[3]{B}} \times 0.72$ for fir, or 0.74 for oak.

Straining Beam.—In the best form for strength the depth is to breadth as 10 to 7.

$$D = \sqrt{L \times \sqrt{S}} \times 0.9 \text{ for fir.}$$

$$B = \frac{7}{10} D.$$

BEST FORMS OF ROOF FOR DIFFERENT SPANS.

The best form of roof truss or principal to be used for a given span is determined by the following considerations:—

1. The parts of the truss between the points of support should not be so long as to have any tendency to bend under the thrust; therefore the length of the parts under compression should not exceed twenty times their smallest dimension. This will be explained in Part III.

2. The distance apart of the purlins should not be so great as to necessitate the use of either purlins or rafters too large for convenience or economy.

3. The tie beam should be supported at such small intervals that it need not be too large for economy or convenience.

It has been found by experience that these objects can be attained by limiting the distance between the points of support on the principal rafter to 8 feet.

In determining the form of truss for any given span, it is therefore necessary first to decide the pitch, then roughly to draw the principal rafters in position, ascertain their length, divide them into portions 8 feet long, and place a strut under each point of division.

By this it will be seen that a king-post truss is adapted for roofs with principal rafters 16 feet long, *i.e.* those having a span of 30 feet. A queen-post truss would be adapted to a roof with principal rafters 24 feet long, that is of about 45 feet span.

For greater spans with longer principal rafters, roofs such as that in Figs. 385 to 388 must be used.

✓

CHAPTER XV.

ROOF COVERINGS.

General Remarks.—Roofs are covered with different materials, according to the locality, the climate, and the nature and importance of the building.

As a rule, the smaller the pieces in which the covering is put on, the heavier will it be, and the more difficult to keep water-tight, as it will contain a greater number of openings or of joints.

Substances which conduct heat very slowly, such as slate, make better coverings than the metals; the former preserve an equable temperature, while the latter conduct the heat in summer, and the cold in winter, to the interior of the building.

Pitch of Roofs.—The pitch, or inclination of the sides of a roof, is determined chiefly by the nature of the covering.


Thus thatch, which would easily allow wet to penetrate it, must be laid at a steep angle, so as to throw the water off at once; whilst, on the other hand, hard and impervious slates may be laid at a much smaller angle, and sheets of metal may be nearly flat.

The pitch is, moreover, varied greatly to suit different styles of architecture, and also according to climate. Some writers have gone so far as to prescribe an exact pitch for every variation in latitude.

The following remarks by the late Professor Robison are of a more practical character:—

“A high-pitched roof will undoubtedly shoot off the rains and snows better than one of lower pitch; the wind will not so easily blow the dripping rain in between the slates, nor will it have so much power to strip them off;” and further—“A high-pitched roof will exert a smaller strain upon the walls, both because its strain is less horizontal, and because it will admit of lighter covering; but it is more expensive, because there is more of it, —It requires a greater size of timbers to make it equally strong, and it exposes a greater surface to the wind.”

The pitch of a roof is expressed either by the angle which its sides make with the horizon, or by the proportion which its height, in the centre bears to the span.



Thus the roof shown in Fig. 383 may be said to have a pitch of $26\frac{1}{2}$ degrees or $\frac{1}{4}$.

The subjoined table, taken chiefly from Tredgold, gives the inclination for roofs covered in different ways. The weights of various coverings are also given, but these will vary considerably according to the quality and thickness of the material used.

TABLE.

| Kind of Covering. | Inclination of sides of Roof to Horizon. | Height of Roof in parts of Span. | Weight on a square (i.e. 100 square feet) of roofing in lbs. |
|---------------------------------------|--|----------------------------------|--|
| Asphalted Felt . . . | 3° 50' | $\frac{1}{16}$ | 30 to 40 |
| Copper | 3° 50' | $\frac{1}{16}$ | 80 to 120 |
| Corrugated Iron, 16 BWG ¹ | 4° 0' | $\frac{1}{16}$ | 350 |
| Sheet Iron, 16 BWG . . | 18° to 20° | $\frac{1}{4}$ | 250 |
| Lead | 3° 50' | $\frac{1}{16}$ | 550 to 850 |
| Slates (large) | 22° 0' | $\frac{1}{4}$ | 900 to 1100 |
| „ (ordinary) | 26° 30' | $\frac{1}{4}$ | 550 to 800 |
| „ (small) | 30° 0' | $\frac{1}{2}$ | 450 to 650 |
| Slabs of Stone | 39° 0' | $\frac{2}{3}$ | 2380 |
| Thatch (Straw) | 45° 0' | $\frac{1}{2}$ | 650 |
| Tiles (Plain) | 30° 0' | $\frac{2}{3}$ | 1800 |
| „ (Pan) | 24° 0' | $\frac{2}{3}$ | 1200 |
| „ (Taylor's Patent) . . | 30° 0' | $\frac{1}{2}$ | 830 |
| Zinc ($\frac{1}{8}$ in. thick) . . . | 4° 0' | $\frac{1}{16}$ | 150 |
| Boarding ($\frac{3}{4}$ thick) . . . | 26° 30' | $\frac{1}{4}$ | 250 |
| „ 1 „ | 26° 30' | $\frac{1}{4}$ | 350 |

N.B.—The additional pressures to be taken into account in practice are the following:—

Pressure of wind 2500 to 5000 lbs. per square of 100 feet.
do. of snow, in this country 500 lbs. per square.

Slating.—The particulars connected with the different methods of laying slates have been entered upon in Part I., chap. ix., and need not here be repeated.

Tiles of burnt clay are made in several different forms, a few of the more important of which will be described.

They are heavy and rather apt to absorb moisture, and to communicate it to the laths and rafters of the roof, thus rendering the latter liable to decay.

¹ BWG stands for Birmingham wire-gauge—a measure of thickness.

PLAIN TILES are small rectangular slabs of burnt clay, generally about 10 inches long, 6 inches wide, and about $\frac{1}{2}$ inch thick.

They are laid on laths of fir, nailed to the rafters, being hung from them by oak pegs driven through holes near the upper edge of the tiles. Sometimes, instead of using pegs, little projecting cogs are formed on the upper edge of the backs of the tiles, by which they are hung on to the laths.

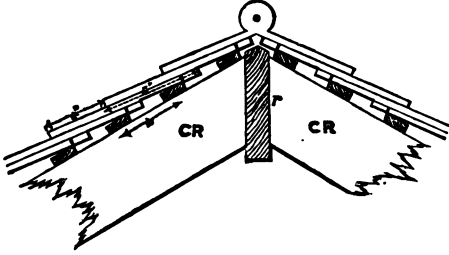


Fig. 404.

The arrangement of the tiles is similar to that of slates—the tail of each rests upon the tile below for a length of about 6 inches, the gauge being 4 inches, and the lap over the head of the tile next but one below about 2 inches.

In exposed places each tile is bedded upon the one below it in hydraulic mortar or cement.

Fig. 404 is the section of part of a roof covered with flat plain tiles, their appearance in elevation will be seen in the four uppermost courses of Fig. 405.

Different forms of ridges are used with plain tiles. That shown in the section, Fig. 404, is of pottery; the lengths are united by oak dowels, inserted in the hole shown in the roll.

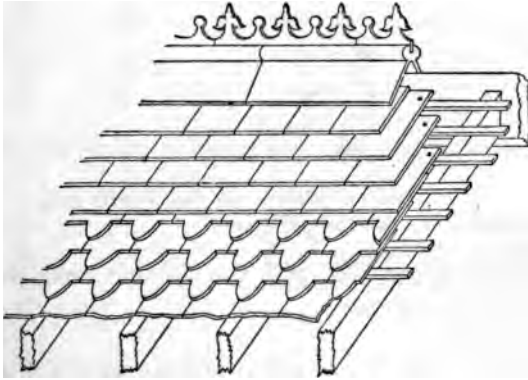


Fig. 405.

Sometimes the roll is omitted, and in other cases it is ornamented by crests of varied patterns (see Fig. 405).

Ornamental flat Tiles are like the tiles just described, except that they are cut into patterns of different forms, in order to improve the appearance of the roof. They are hung in the same way as the plain tiles, but the cutting away necessary to form the ornamental pattern rather reduces the lap afforded by the tiles.

A common pattern is shown in Fig. 405, in which three rows of ornamental tiles and four rows of plain tiles are placed so as to form alternate stripes along the roof slopes.

Fig. 405 shows also the grooved ridge-tile, with detached "*fleurs*," which are fitted into the groove.

Flat tiles are often used for walling. Laths are nailed upon vertical posts or quarterings, and the tiles hung upon them in somewhat the same manner as for roofs,—each tile being bedded in mortar so as to make the covering warm and weather-tight.

PAN TILES form a covering which is sometimes thought to look better than one of plain tiles, but it is not so warm, and is liable to injury from gusts of wind.

The tiles are about 14 inches long by 9 inches straight across the width. Each is hung on to the laths or battens, *b b*, by a tongue which projects from the upper edge of the back of the tile,—shown in section at *x x x*. It should be remarked that this projection is not continuous throughout the width of the tile, but is only about one inch wide.

The tiles have a lap of 3 inches to 4 inches, and the joints on the under sides are pointed with hair mortar.

Pan tiles are well adapted for roofing over workshops where large furnaces are used, as they withstand the heat, and the interstices between them afford plenty of ventilation.

Concave tiles set in mortar, and nailed to the woodwork, are used for the ridges, hips, and valleys. For common work sometimes the tiles themselves are used—the smaller curved portion being cut off,—but special tiles are generally made.

In exposed situations, and where much ventilation is not required, the tiles are bedded on each other in mortar, and the space between the ridge tiles and those in the ridge courses at the top of the slopes are filled in with pieces of flat tiles bedded in mortar.

Glass tiles of this form are made, and may be introduced among the others where light is required. *Double Roll Tiles* are similar to the above, but have a double wave in their width. *Corrugated Tiles* are similar in general form to pan tiles, but they are bent into several narrow curves or corrugations, instead of only two broad ones.

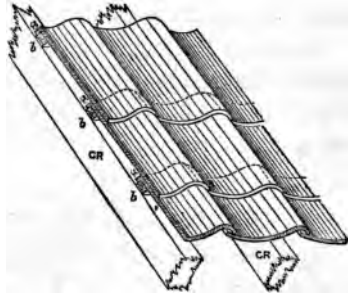


Fig. 406.

ITALIAN TILES are shown in section and elevation in Figs. 407, 408, from which the construction of the tiles is obvious.

These tiles present a handsome appearance, which leads to their use in some cases; but they are not well adapted to the British

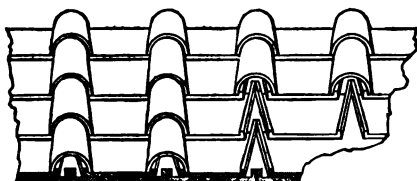


Fig. 407. Elevation.

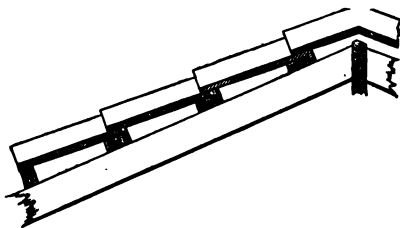


Fig. 408. Section.

climate, as they cause the snow to lodge, and, when it thaws, the water frequently gets through the roof.

TAYLOR'S PATENT TILING is somewhat similar in principle to the Italian tiling just described.

In this case, however, the upper or *capping tiles* are exactly like the lower or *channel tiles*, so that every tile can be used in either position.

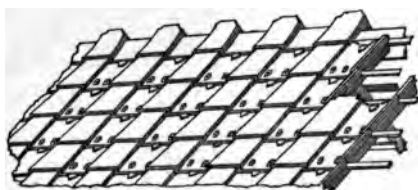


Fig. 409.



Fig. 410.

Fig. 409 shows the general appearance of this kind of tiling, which is very picturesque.

Fig. 410 gives an upper and lower view of the tiles.

Fig. 411 shows a few channel tiles, T T, with one capping tile, U, in position.

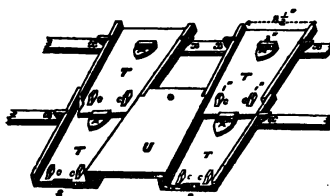


Fig. 411.

The tiles are hung on battens $2\frac{1}{4}$ inches wide and 1 inch thick, laid to about a 10-inch gauge. The channel tiles are first laid in rows along the slope of the roof from eaves to ridge; the narrow end of each tile is pushed into the wide end of the one below until the splay, *s*, fits firmly into the undercut in the shield, *A*, of the lower tile.

There are notches in the sides of the tiles, as shown at *n n*,

Fig. 410; each channel tile is secured by wedge-shaped nails¹ driven in alongside, so as to hold the tile down by these notches as at *x x*.

After the channel tiles are all fixed, the capping tiles are put on. These tiles are turned over, and so placed as to cover the intervals between the channel tiles. They are pushed downwards until the little blocks or cogs, *c c*, rest upon the nail-heads, *x x*, which secure the channel tiles below.

The under side of the corners of the joints between the tiles is pointed with cement mortar.

In ordinary work each upper tile at the eaves and gables should be drilled about 1 inch from the edge, in the middle of the narrow end of the tile, and nailed to the batten, oil putty being dabbed over the nail head; in exposed situations it is thought desirable to drill and nail every third upper tile.

In those courses in which the upper tiles are drilled the supporting battens should be 3 inches wide.

The ridge consists of special upper tiles with flanges turned downwards, and lower tiles with flanges turned upwards, the under ridge tiles being placed upon the channel tiles.

The ridge should be bedded in mortar, and pointed with cement to match the tiles.

Tiles of peculiar shape are used for the hips.

The tiles just described are manufactured by the Broomhall Company, from whose diagrams the above illustrations have been taken.

Glass tiles are cast in the same form, and may be introduced where light is required.

Thatch is made of wheaten straw laid on laths nailed (8 inches apart) to rafters, frequently of a very rough kind. This covering keeps a building warm in winter and cool in summer, but it is very subject to destruction by fire or decay, and generally forms a refuge to insects and vermin.

The pitch should be 45°. If it is less the rain will not run off freely; if more, the straw slips down.

The thatch is sewn down on the lathing in small bundles, until it attains a thickness of from 12 to 16 inches over the roof generally, but it is sometimes thinned down to nothing just at the eaves.

About 3½ cwt. of wheat straw is required per square. It will last in England from fifteen to twenty years,—oat straw about eight years.

Wrought-Iron flat Plates are sometimes used, the longitudinal

¹ Or side-keys.

joint down the slope being formed by bending the two edges of adjacent plates over a roll of wood.

Corrugated Iron plates are much used. They are made in sheets varying in size from 6 feet \times 2 feet to 8 feet \times 3 feet, and in thickness from $\frac{1}{50}$ to $\frac{1}{8}$ inch—that is, from No. 20 to No. 16, Birmingham wire gauge. The sheets of medium thickness (for example, of No. 16 gauge with 5-inch flutes) require to be supported only at intervals of from 6 to 8 feet, and the roof may thus be cheapened by omitting the intervening purlins. Ordinary corrugated iron is so laid that the flutes run down parallel to the slope of the roof. The sheets overlap at the sides, and should be screwed at the top and bottom edges to the roof timbers. The screws should be on the ridges of the corrugations, so that all wet may at once be thrown off them.

Corrugated iron is sometimes laid with the flutes horizontal, so that the sheets span the interval between the principals, and all rafters and purlins can be dispensed with. In such a case the flutes should be of a peculiar angular shape, so as to throw off the water.

Corrugated iron is often galvanised, but if the coating be once pierced it is soon destroyed by the voltaic action between the two metals; it is, therefore, better merely to paint the surface.

It is sometimes protected from atmospheric influences by an external covering of asphalted felt, which is made to adhere to it by means of a composition.

Corrugated iron is frequently used not merely as a covering, but to form the roof itself, the sheets being riveted together and bent into an arched form.

Sheet Lead is used for covering flat roofs, and also for many portions of ordinary roofs, such as the gutters and flashings; the different methods of laying it are described in Part I.

Lead is not adapted as a covering for pitched roofs, owing to its expansion and contraction, by virtue of which it will crawl down a roof. During a warm day it expands, the expansion being assisted downwards by the action of gravity; in the cool night it contracts, the contraction being diminished by the force of gravity acting downwards: the consequence is it contracts each night less than it expanded during the day, and in time gains a considerable distance.¹

Copper is sometimes used in sheets weighing about 16 ounces


¹ The lead on the moderately-inclined roof of Bristol Cathedral crawled down 18 inches in two years.—Tyndall, *Heat as a Mode of Motion*.

per foot superficial. They should be laid on boards in the same manner as those of lead. The coating of oxide formed by the action of the air preserves the surface to a certain extent, but the metal being, for the sake of economy, very thin, soon wears out.

Zinc is laid as a roof covering in several different ways.

Its lightness, as compared with slates, tiles, or lead, enables it to be laid on roof-timbers of much smaller scantlings than those required for the coverings just mentioned.

The method of laying zinc in this country has been greatly improved through the exertions of the Vielle Montagne Zinc Company, from whose beautifully illustrated pamphlet¹ on the subject the figures and most of the information here given have been extracted.

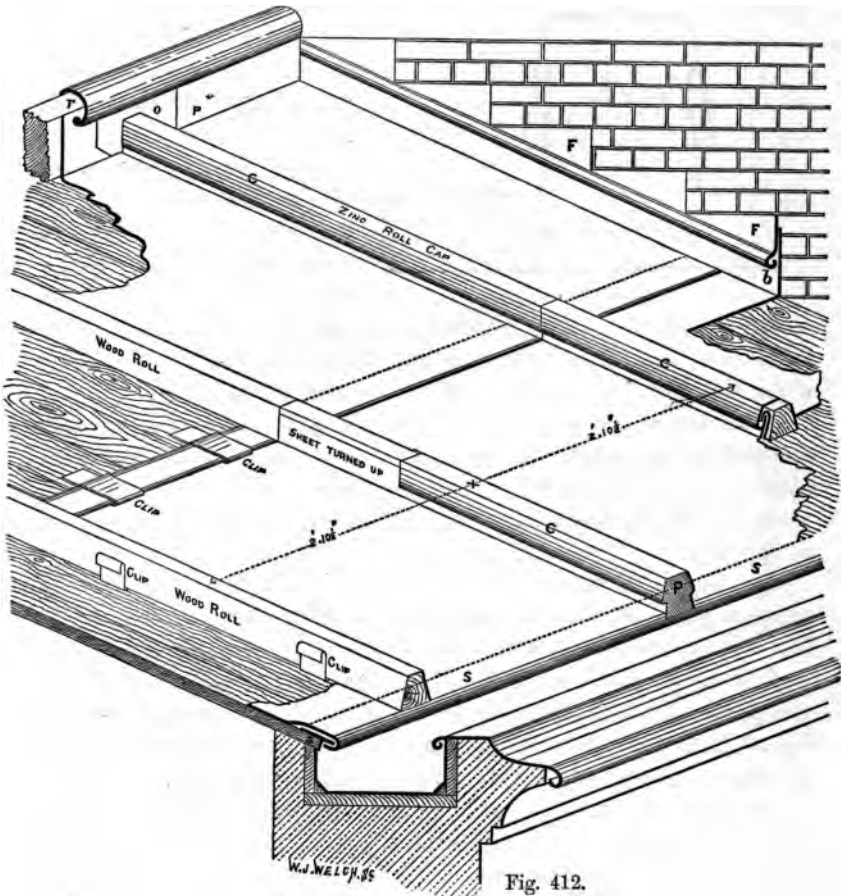

¹ Published by their manufacturing agents, Messrs. F. Braby and Company.

There are several methods of laying zinc on roofs; in all of them the object should be to avoid soldered and rigid connection, and to arrange the joints so that they may be water-tight, but may still allow free play for contraction and expansion of the metal under changes of temperature.

Zinc laid with plain Roll Caps on boarding.—Flat sheets of zinc from 7 to 10 feet long and 3 feet wide, are laid with wooden rolls on boarding very much in the same manner as lead.

Fig. 412 shows a portion of a roof covered in this manner. The sheets run lengthways down the slope of the roof, their side edges being turned up against the rolls, which are placed 2 feet 10 $\frac{1}{2}$ inches apart from centre to centre.

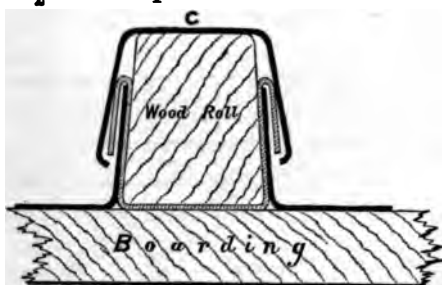


Fig. 413.

A section of one of these rolls, showing the method of securing the zinc, is shown on a larger scale in Fig. 413.

The scored portion of the section shows one of the zinc clips, which are strips about 2 inches wide, fixed about 3 feet apart along the roll. Being doubled over the upturned side edges of the sheets, the clips hold them down, without preventing their expansion and contraction under changes of temperature.

After the sheets are laid and secured by the clips, the rolls are covered by the cap C, also formed of sheet zinc, doubled down as shown. In very exposed situations these clips may be continued so as to turn up again over the sides of the cap C, and be secured at the top.

The cap is secured by "fork connections." These consist of pointed pieces of zinc 2 or 3 inches long by about an inch wide, one end of which is soldered to the inner surface of the cap on each side, the point being free. As the cap slides on to the roll, the points of these forks slip in under the hooked portion of the clip. They thus prevent the clip from flying off, without impeding its expansion and contraction in direction of its length.

Braby's Patent Saddle-piece and Stop-end.—The extreme ends of the roll caps may be covered with a piece soldered on, as shown at O and P; but this plan has been improved upon by merely spreading out the roll cap itself at O, forming what is called a

saddle-piece, and dressing it up against the side of the ridge; and at the end, P, by turning the end of the cap over the end of the roll, and doubling the corners of the sides of the cap under the end—thus, in both cases, doing away with soldered joints, and allowing perfect play under expansion and contraction. There are other patented methods of effecting the same object, which cannot here be described.

WELTED JOINTS.—The sheets having been fastened at the sides by means of the rolls as above described, it next becomes necessary to make a connection between the lower edge of each sheet and the upper edge of the sheet next below it on the slope of the roof (Fig. 412).

This is done by means of the joint shown in section in Fig. 414, and called a *Welt* or *Fold* joint.

In this figure the hatched section is that of a “clip,” or strip of zinc about 2 inches wide nailed to the boarding, and doubled in between the edges of the two sheets to be connected, which are shown in section by the black lines, so as to make a secure joint, and yet to give them plenty of play for expansion and contraction.

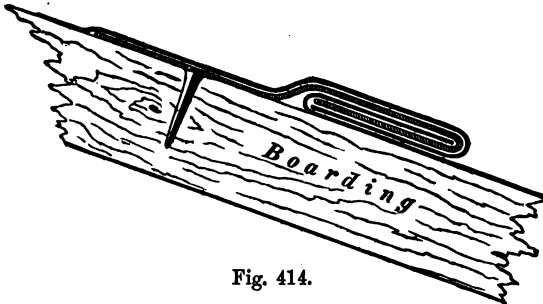


Fig. 414.

Welted joints are used only when the roof has a slope of $\frac{1}{4}$ or more; for flatter roofs drips are introduced.

The lower edges of the sheets nearest the eaves are strengthened where they project over the gutter, by being doubled back so as to form a bead; and further, by a strip of stout zinc (S in Fig. 412), nailed along the edge of the boarding over which the bead is formed.

The ridge is covered by a zinc roll cap turned over it, which latter is strengthened on the lower edges by their being bent round to form beads.

DRIPS.—Zinc may be fixed with rolls on boarding laid upon roofs of any pitch.

When, however, the slope of the roof is flatter than $\frac{1}{4}$, drips

should be formed similar to that shown in Figs. 415, 416, at intervals of from 14 to 16 feet.

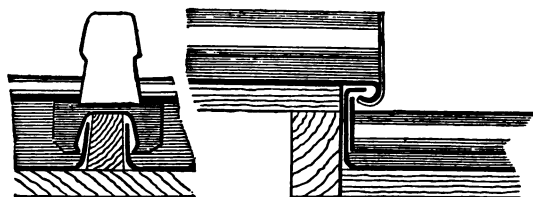


Fig. 415. *End Sectional Elevation.*

Fig. 416. *Side Sectional Elevation.*

The figures show the end elevation and the section of a drip joint over a roll.

The thick lines show the sections of the sheets, the ends of which, it will be noticed, are bent inwards, so that they may be able to expand and contract without danger of any water getting in behind the joint.

The stopped end of the roll cap on the upper level is bent over with the edge of the sheet.

Drips in flats should be $2\frac{1}{2}$ inches deep, and in gutters $1\frac{1}{2}$ inch deep.

Zinc laid with patent drawn Roll Cap.—Another form of roll patented by the Vielle Montagne Zinc Company is recommended as lasting longer than the simple form just described, and as being peculiarly suitable “for terraces or flats of warehouses where weights are stored, or where there is much walking about;” and, as regards appearance, for Mansard or high-pitched roofs.

The method of laying zinc with these rolls is somewhat similar to that with the ordinary rolls; but the loose zinc roll cap is done away with, the zinc being drawn tight over the roll by machinery.

CORRUGATED ZINC ROOF.—When the zinc is required to be laid without boarding—which is, of course, a great saving—it must be strengthened by corrugations—*i.e.* by curved indentations formed along the sheet.

The ordinary corrugated zinc consists of flutes about $3\frac{1}{2}$ inches wide, lying close together.

It is laid in a similar way to corrugated iron (p. 268), the purlins being placed about 2 feet 6 inches apart.

Italian Corrugated Zinc Roof.—In this form of zinc the corrugations are spaced more widely—being 1 foot 3 inches apart.

In Fig. 416 one sheet is shown in section by the thick black line, the ends of the adjacent sheets being scored in section.

The zinc is laid upon rafters, so spaced and shaped as to fit into the corrugations.




Fig. 417.

The sheets are secured to the rafters, as shown in Fig. 417, by screws with mushroom heads fitting down upon a raised and embossed socket, thus effectually preventing the entrance of wet.

Fig. 417 shows in section a portion of a roof covered with Italian corrugated zinc. The zinc rolls or rafters are 1 foot 3 inches apart, and are supported upon purlins, which in large roofs may be 10 feet apart.

The depth of the rolls when they act as rafters, and are laid upon purlins about 7 feet apart, is about 3 inches; but when laid upon boarding they are only 2 inches deep.

Thickness of Zinc for roofing.—The gauges recommended by the Vielle Montagne Company are Nos. 14 and 15 zinc gauge (see Part III.)

No. 15 or 16 for gutters.

Nos. 14 and 15 for flats.

No. 13 is frequently used for roofing where economy is an object.

It must be noted that these are the numbers of the *zinc* gauge, not of the ordinary Birmingham wire gauge.

The corresponding weights and thicknesses of metal will be found in Part III.—(Materials).

Zinc Flashings are very similar to those of lead described in Part I.

An illustration of one is shown at F in Fig. 412.

The edge of the sheet is generally turned up about 6 inches against the wall, and the apron over it is finished and stiffened by being bent round to form a bead *b* as shown.

The ridge roll is covered with zinc in nearly the same manner as with lead, except that the zinc is not worked so much into the angles under the roll. It is secured by forks, similar to those described in page 270.

ZINC GUTTERS.—*Valley Gutters* are formed in somewhat the same manner as those of lead.

For roofs laid with wood rolls the wooden trough is lined with sheet zinc,—the sides of which are turned up, and the upper edges

bent inwards under the bead formed by the lower edge of the sheet at the eaves.

Where Italian corrugated zinc is used the sides of the zinc lining to the gutters are turned up, and the edges bent over the thickness of the wood sides of the trough.

The minimum fall for such gutters should be $\frac{1}{40}$.

*Zinc Eaves Gutters*¹ are made of various forms, very similar to those of cast-iron, and are fixed in the same positions.

Zinc gutters, not being so strong as those of iron, require stays about 1 foot 6 inches apart. These are simply hollow cylinders of zinc—placed across the gutter—through which is passed the screw fixing the gutter to the wood-work. The stay keeps the upper part of the gutter from bending inwards as the screw is driven home.

Glass is very frequently used as a covering for the whole or parts of roofs, such as those of railway stations, manufactories, etc. etc.

In some cases where a maximum of light is required, clear glass must be used; but, as a rule, patent rolled rough plate will admit sufficient light, and it is always much stronger.

The glass is laid upon sash bars of iron or wood. The former may be of cast-iron, similar in section to wooden sash bars, or of wrought-iron of L section. The unequal contraction of iron and glass renders it difficult to keep a tight joint between them.

Asphalted Felt.—This material is, as has already been noticed, often used under slates on account of its being waterproof and a non-conductor of heat.

It is, however, also adapted as a roof covering alone, for temporary buildings, being fixed to boarding by copper, zinc, or iron clout nails (the last being dipped in oil). The felt should be stretched tight, the joints between the pieces overlapped, and the whole paid over with hot tar and lime boiled together, and then sanded.

¹ Sc. *Rhones*.

CHAPTER XVI.

BUILT-UP BEAMS, CURVED RIBS, TIMBER AND IRON GIRDERS.

Built-up Beams, Ribs, and Trussed Timber Girders.—Timber girders are substantial beams supported or fixed at the ends, and generally destined to carry a load throughout the whole or part of their length.

In Part III. will be shown the method of ascertaining the form and dimensions for plain timber beams, intended to support loads concentrated at different points or uniformly distributed.

It will be found that, for spans exceeding 20 feet, the girders to carry even moderate loads will require considerable sectional dimensions.

It is most difficult and expensive to get sound timber of large scantling, and moreover there is a practical limit to the sizes of timber procurable, beyond which it cannot be obtained at all.

These difficulties have led to various expedients :—

1. For building up large beams out of pieces of smaller scantling.

2. For strengthening beams by the addition of iron, arranged with the view of relieving the timber of part of the stress which comes upon it.

Built-up Beams.—When beams are required of such a size that timber large enough for them cannot be procured without danger of defects, they may be built up of smaller pieces, arranged as shown in Figs. 418, 419, which are taken from Tredgold's *Carpentry*.

JOGGLED OR KEYED BEAM.—Fig. 418 shows a simple form of




Fig. 418.

built beam, consisting merely of two pieces of timber bolted together, and prevented from sliding by hard wood keys, having their grain at right angles to that of the timber.

The upper portion may be cut into two, and the halves forced outward by a king bolt with bevelled sides, as shown in Fig. 419.

It is better, however, that no bolt or key should be placed in the centre, as at that point the cross strain is the greatest.

Rule.—The depths of all the keys added together should be more than $1\frac{1}{2}$ of the whole depth of the beam, and the breadth of each about twice the depth.—TREDGOLD.

INDENTED BEAMS.—The sliding may be prevented by indentations, as shown in Fig. 419, instead of keys. The upper layer of the beam is sometimes made in two pieces, a vertical wedge-shaped king bolt being inserted at the centre, with its narrow end downwards, so that by screwing up the nut the parts of the upper layer are forced outwards and the joints tightened.

Rule.—The depth of all the indents added together should equal $\frac{1}{2}$ depth of the beam.—TREDGOLD.



Fig. 419.

When straps are used instead of bolts, the beam should be slightly tapered towards the ends to facilitate driving them on.

When a beam is built up in two layers, the upper may with advantage be of hard wood, as it will be compressed when a transverse strain comes upon the beam. The lower layer should be of tough straight-grained timber, to resist the tension to which it will be subjected.

For very long beams it may be necessary to have two or three pieces in the length as well as in the depth. These should, in the lower layer, be scarfed together as described in Part I.; in the upper layer they may simply butt against one another.

Several elaborate methods of building up such beams of considerable length and scantling are given in old books on carpentry, but these have been to a great extent superseded by the use of iron girders.

Curved Ribs are sometimes obtained from naturally curved timber, sometimes artificially bent (see Part III.), or sometimes built up as follows.

BUILT RIBS are best constructed on a method invented by Philibert de l'Orme (see Figs. 420, 421).

Several layers of plank on edge are placed together so as to break joint, and are united by bolts or wedges passing through them.

If a curved rib be required, the corners *a b c d e* are rounded off.




Fig. 420. Elevation.




Fig. 421. Plan.

A built rib of this sort properly constructed is nearly as strong as a solid rib of the same depth, and of a breadth less by the thickness of *one layer*.—RANKINE.

LAMINATED RIBS are composed of layers of planks placed flatwise, breaking joint and bolted together, as in Fig. 422. They are easily made.



Fig. 422.

Their strength, compared to that of solid ribs, is as 1 to the number of layers of which they are composed.—RANKINE.

Built and laminated ribs are used in some forms of roofs, which, however, do not fall within the limits of this Course.

STRENGTHENING TIMBER GIRDERS.

The strength of timber beams or girders varies directly in proportion to their breadth and to the square of their depth, and inversely as their length (see Part III.)

It is, however, often necessary to strengthen a girder without adding to its dimensions, as, for instance, in a floor where too deep a girder would extend below the ceiling or lessen the height of the room below.

In such a case all extraneous aid afforded to the girder by means of trussing or otherwise, must be kept very nearly or quite within the limits of the wooden beam.

Fitch Beams.—A beam may be improved by cutting it down the middle, reversing one of the halves (called “fitches”), end for end, and bolting them together with the sawn sides outwards, small slips of wood being introduced between the fitches to keep them an inch or two apart, so as to allow a free circulation of air between them.

This arrangement causes the timber to season more quickly and thoroughly, as the pieces are smaller; it also renders the heart of the wood visible, so that any decay can be detected; moreover, the

reversal of the flitches, end for end, makes the beam of equal strength throughout, which is very seldom the case in a long balk, as the top of a tree is generally weaker than the butt.

Iron Flitches.¹—A beam thus cut down the middle is frequently strengthened by placing an iron plate or “flitch,” *x*, between the halves, and screwing the whole together, as shown in the section Fig. 423.

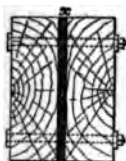




Fig. 423.

A writer in the *Building News* has shown that, when the depth and length of the iron plate is the same as that of the flitches, its thickness, in order that it may be effective, should be at least $\frac{1}{8}$ of that of each flitch.

A rolled girder, such as that shown in Fig. 433, is, in some cases, used instead of the iron plate (see Fig. 600).

Trussed Girders.—*Girders trussed within their own depth.*—Beams have frequently been strengthened by a “truss” constructed within their own depth.

Such a truss may be formed by splitting a balk longitudinally down the centre, and inserting between the flitches two cast-iron struts, *s s*. Along the bottom of the beam is a tension-plate,

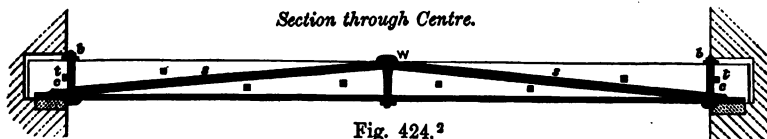Fig. 424.²Fig. 425.² Plan.

supported by a king bolt in the centre, and by a somewhat similar bolt, *b*, at each end, after which the “flitches” are bolted together as shown in Fig. 425.

Fig. 424 is a section through the centre of the iron truss, showing the further flitch and bolt-holes in elevation.

The ends of the struts are secured as follows:—

The bolt *b* passes through the beam and secures the ends of the tension plates by means of the cog *c*; the lower part of the bolt is shaped so as to form an abutment for the struts *s*, and it is supported in the centre by the transverse bolt seen in section at *t*.

The truss adds to the strength of the girder as long as the bolts are screwed up, and all the parts are bearing accurately.

¹ Or Sandwich Beams. ² Modified from Newland's *Carpenter's and Joiner's Assistant*.

A similar truss may be formed as in Fig. 426, with two queen bolts instead of the king bolt.



Fig. 426.

The struts are sometimes formed of oak or other hard wood instead of iron.

Beams may be trussed with tension rods as shown in Fig. 427. The balk is split longitudinally into two, as before described, and the truss inserted between the flitches.

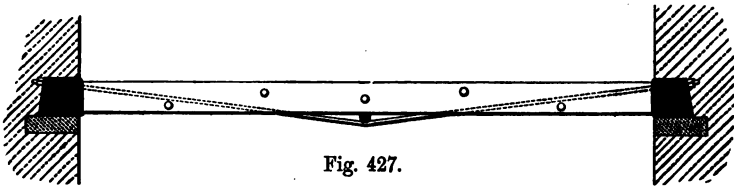


Fig. 427.

Fig. 427 is an elevation of the exterior of such a girder. The ends of the tension rod pass through cast-iron boxes capping the ends of the beam, and are there secured by nuts.

The cast-iron boxes are useful to protect the ends of the beam, especially when the latter are imbedded in masonry, but they are often dispensed with; the upper corners of the beam being cut off at right angles to the direction of the tension rod, and the nuts screwed up against a washer or plate, as in Fig. 428.

The centre of the rod bears against a cast-iron bar attached to the under side of the beam.

It will be seen that a shrinkage in the depth of this beam frees it from the tension rod, which becomes slack and plays no part whatever; it can, however, be again brought into action by screwing up the nuts at its ends.

In the meantime, however, the whole strain has come upon the timber, unassisted by the iron work.

The same description of truss may be used with two bearing joints for the tension rod, as shown in Fig. 427.




Fig. 428.

Sir W. Fairbairn experimented upon beams with 4 feet 6 inches bearing, and 4 inches deep trussed as shown in Fig. 427, and found that the trussed beam was $\frac{1}{5}$ stronger than a simple beam of the same dimensions.

Figs. 427, 428 show the position of the tension rods as they are usually placed, but Sir W. Fairbairn states¹ that "in the con-

¹ P. 350. Application of Iron to Buildings.

struction of truss beams, whether of wood or iron, the truss rod should never be carried to a greater height than the horizontal line passing through the centre of the beam."

Girders trussed within their own depth are objected to because the inevitable shrinkage of the timber slackens the iron work, and throws the whole strain upon the timber; which may therefore become crippled before the truss can be tightened up and the iron brought again into play.

Moreover, from the nature of the construction, especially when the girder is "cambered" in order to gain stiffness, the ends are subjected to great compression, which acting upon a small area is apt to crush the fibres.

This strain may be considerably reduced where there is sufficient depth by increasing the angle of inclination of the tension rods, as in girders of the form shown in Fig. 429, which are not so open to this objection.

The great difference in the nature of the materials composing the truss renders it almost impossible that the parts should act together in performing the work required of them.

Theoretically, they should be so adjusted that the members in compression are on the point of being crushed, at the exact moment that the parts in tension are about to tear asunder. To arrange this would require great skill and nicety in proportioning and fitting the parts; and, even if it were accomplished, slight changes caused by exposure to the atmosphere would soon utterly destroy the adjustment.

For these reasons beams trussed within their own depth are in some disrepute and are seldom used.

Girders with deep Trussing.—Where circumstances do not limit the depth of the trussing, it may be used with great advantage.




Fig. 429.

Fig. 428⁴ shows a form of truss frequently adopted for purlins of great length (see Fig. 389), for beams of long bearing used in gantries,¹ and for travellers. This form of truss is, however, suitable only for a purlin or similar bearer carrying a uniform sta-

¹ See Part III.

tionary load throughout its length ; when it has to carry a moving weight it should be strengthened by cross braces as in Fig. 432.

The extremities of the beam are enclosed in cast-iron boxes. These receive the ends of the tension rods, which pass through them and are secured by nuts.

The bearing surface of the nut should be at right angles to the direction of the tension rod ; this may be effected by casting a patch on the box as shown in Fig. 430, by introducing a bevelled washer of a similar shape to the patch, or by cutting off the ends of the beam obliquely at right angles to the tension rod, as in Fig. 428.

The stays or struts, SS, are generally of cast-iron secured to the under side of the beam ; in very rough work short posts of wood are used instead.

The tension rod may pass through the centre of the beam as shown, or a rod may be used on each side.

In this case the cast-iron boxes have an ear on each side to receive the bars as shown in Fig. 430.

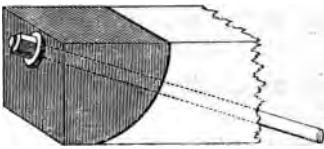


Fig. 430.

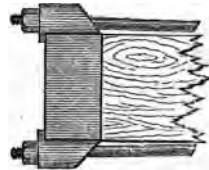


Fig. 431.

For smaller spans only one stay in the centre may be used instead of two as shown in Figs. 429, 432.




Fig. 432.

The truss is sometimes strengthened by diagonal ties, AD, BC, Fig. 432, which come into play when the points AB are unequally

weighted.

This form (Fig. 432) is therefore particularly adapted for the bearers of travellers and others required to carry a moving weight.

IRON GIRDERS.

Girders of considerable length and those required to support a heavy load are generally of iron.

A very slight description of one or two common forms of iron girder will be given here, leaving further particulars, instructions for calculating strength, etc., for Part III.

In all the forms of girder about to be described the vertical portion is called the *web* and the horizontal portions the top and bottom *flanges*.

Cast-Iron Girders are made in several forms—the best section being similar to those given in Figs. 275, 276, Part I.

Small girders are sometimes made of \perp section; in which case the web should be of a good thickness, as the upper portion of it has, in the absence of a top flange, to withstand considerable compression.

Several other forms of cast-iron girders are in use for particular purposes; further particulars with regard to them will be given in Part III.

Cast-iron is easily moulded to girders of any ornamental pattern, and to any dimensions required to fit particular positions; but girders of this material are very heavy, are liable to contain dangerous flaws, are brittle and apt to break without warning, especially when cooled suddenly by water thrown upon them while they are very hot.

This is very likely to happen in a building on fire, and to cause serious accidents.

On account of these objections to cast-iron girders they are not used so much as formerly.

Wrought-Iron Girders.—**ROLLED WROUGHT-IRON BEAMS.**—The manufacture of wrought-iron beams or joists has been so much improved of late years that they can now be rolled to any size that is likely to be required in ordinary buildings.

In section (see Fig. 433) they somewhat resemble girders made of cast-iron, except that both flanges are of the same size.

Rolled beams may ordinarily be obtained of various sections, from 4 to 12 inches in depth, and have been manufactured up to a depth of even 3 feet; but for a greater depth than 12 inches a built-up girder, such as one of those described below, is preferable.

The reason for this is that the number and thickness of the plates used in a built-up girder may be varied at different parts of it so as just to be sufficient for the stresses which come upon those parts; whereas, in a rolled girder, the thickness of the web

and of the flanges is necessarily unvarying throughout, and is, therefore, too thick in those portions where the lesser strains occur.

RIVETED PLATE GIRDERS.—If for any particular position rolled girders cannot be obtained of the necessary form or dimensions, girders may be built up by riveting plates and angle irons together in different ways.

Riveted, or, as they are more usually called, plate girders,¹ may be constructed of sizes far exceeding those of the largest rolled girders.

The best depth for these girders is about $\frac{1}{12}$ the span.

Plate Girder.—The simplest form of riveted girder consists of angle irons riveted to a plate as shown in Fig. 434, the former being the flanges and the latter the web of the resulting girder.



Fig. 434.

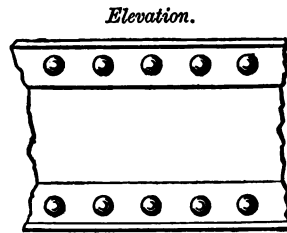


Fig. 435.

Some particulars regarding riveting are given at page 354. In some cases the rivets of the lower or tension flange of the girder are pitched at wider intervals than those in the upper or compression flange.

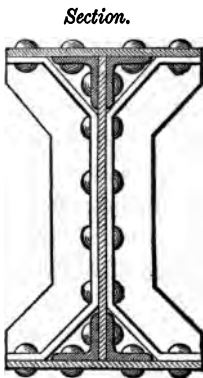


Fig. 436.

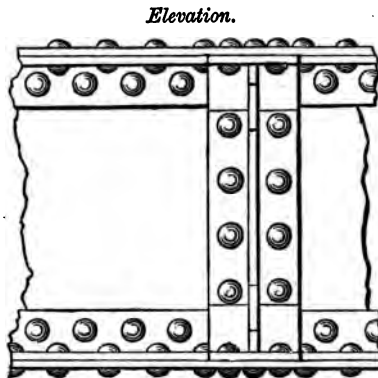


Fig. 437.

Flange Girder.—In larger girders separate plates may be used for the flanges, and are fixed to the web by angle irons riveted as shown in Figs. 436, 437.

¹ This name is sometimes applied to all girders built up with plates and angle irons; sometimes it is restricted to those with a plate in the web only (Fig. 434); those with plates in the flanges being called "flange-girders."

When the web is high, or of slight thickness, it has a tendency to buckle sideways, and requires support.

This may be afforded by stiffeners of T iron riveted vertically to both sides of the web along the girder, at distances varying according to the load, depth of girder, and thickness of web.

Extra stiffeners are also placed under points where heavy loads are expected.

The stiffeners may either be bent outwards at an angle as shown, or they may be "cranked," that is bent close round, over the angle irons of the girder (which latter is a more expensive arrangement), or they may be kept out by means of distance pieces placed under them so as to clear the angle irons. This last arrangement is simple, but adds unnecessary weight to the girder.

In girders to carry great loads several plates are required in each flange, and when the flange-plates are wide, gussets or vertical plates are added; but such heavy girders are not likely to be required in any ordinary building.

"There are in existence plate-girder bridges of almost all possible dimensions, and some of the largest are objects of universal admiration; yet it may be broadly stated that the plate girder,¹ if made beyond a span of 50 feet, loses those advantages which, up to that span, its simplicity affords as against the lightness of other systems."²

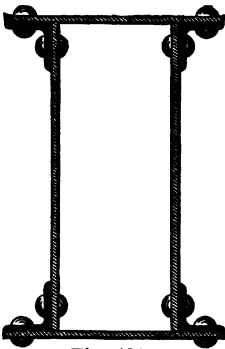


Fig. 438.

Box Girders are made up of plates united by angle irons and rivets into a hollow rectangular box section, as shown in Fig. 438.

Box girders should be large enough to admit a man or boy, so that they can be painted periodically on the inside to prevent corrosion.

When the girder is necessarily too small to allow of this, the plates are made of extra thickness to allow for corrosion; and sometimes the interior of the girder is filled with concrete to protect the iron from the action of the air and to prevent oxidisation.

*Comparison of Plate and Box Girders.*³—The comparative advantages of plate and box girders are summed up by Sir W.

¹ Including flange girders.

² *Works in Iron*, by Ewing Matheson.

³ Sir W. Fairbairn *On the Application of Cast and Wrought Iron to Building Purposes*.

Fairbairn as follows:—"On comparing the strengths of these separate beams, weight for weight, it will be found that the box beam is as 1 : .93, or nearly as 100 : 90.

"This difference in the resisting power of the two beams does not arise from any difference or excess in the quantity of material in either structure, but from the better sectional form of the box beam. The box beam, it will be observed, contains a larger exterior sectional area, and is consequently stiffer and better calculated to resist lateral strain, in which direction the plate form generally yields before its other resisting powers of tension and compression can be brought fully into action.

"Taking this beam, however, in a position similar to that in which it is used for supporting the arches of fireproof buildings, or the roadway of a bridge, when its vertical position is maintained, its strength is very nearly equal to that of the box beam.

"But while the plate beam, in the position thus described, is nearly equal, if not in some respects superior, to the box beam, it is of more simple construction, less expensive, and more durable, from the circumstance that the vertical plate is thicker than the side-plates of the box beam, and is consequently better calculated to resist those atmospheric changes, which in this climate have so great an influence upon the durability of the metals.

"Besides it admits of easy access to all its parts for purposes of cleaning, painting, etc."

General Remarks.—These must be very brief, fuller particulars being reserved for Part III.

The depth of plate girders varies from $\frac{1}{10}$ to $\frac{1}{15}$ the span; $\frac{1}{12}$ is said to be the most economical proportion.

The width of the flange under compression should not be less than $\frac{1}{30}$ to $\frac{1}{40}$ of the span, or it will be liable to buckle sideways.

No plates of less than $\frac{1}{4}$ inch thickness should be used, or they will soon be destroyed by corrosion.

There should be as few joints as possible, especially in the tension flange and web.

Care should be taken to use market sizes of plates and angle irons (see Part III.) as far as possible. Expense is incurred by using extra sizes. It may, however, be cheaper in some cases to use extra lengths, in order to reduce the number of joints.

All parts should be so arranged as to be got at easily for riveting.

The ends of girders should be bedded in lead or felt.

CHAPTER XVII.

CENTRES.

CENTRES are temporary structures of wood, with curved upper surfaces upon which arches are built, and left until they are consolidated and have taken their bearing, after which the centres are removed.

For large arches, such as those of bridges, very elaborate centres are required, with special arrangements for easing and striking them gradually; but in ordinary buildings the centres are very simple; the arches for which they are required being generally of small span and common construction.

Centres for very small and narrow arches may consist simply of a piece of wood cut to the curve of the soffit of the arch, and supported under it by props.

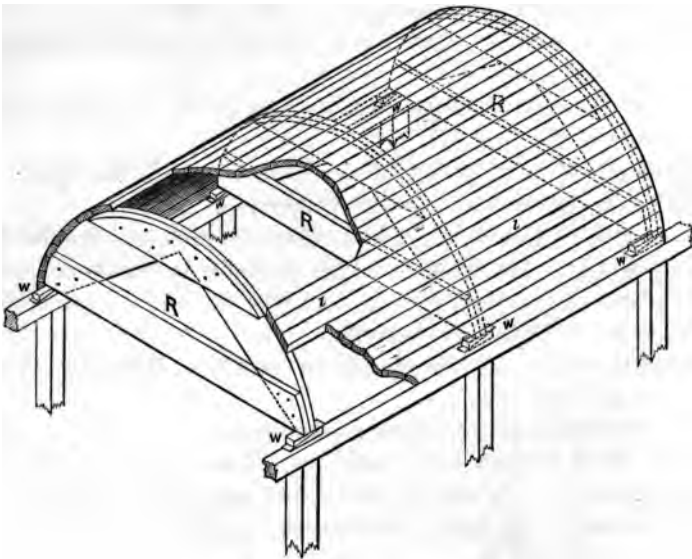


Fig. 439.

For longer arches, such as those of tunnels, sewers, etc., the

centre is composed of several curved frames or "*ribs*," RRR, supporting narrow battens nailed across them, and called "*laggings*,"¹ *lll*, Figs. 439, 440.

For stone arches,² or very rough brick arches, the *laggings* may be of narrow battens placed an inch or more apart, as in Fig. 439; but for superior brick arches they must be of close boarding smoothed off with an adze, so that the courses may be lined out on the surface.

The feet of the props rest either upon the ground or upon the footings of the walls. When the walls are very high, corbels may be introduced to support the props or struts.

Laggings should be fixed with as few nails as possible, in order to save trouble in removing the centering when done with.

When the arches exceed 3 or 4 feet span the centres are made up of pieces nailed together, as in Fig. 439.

As the span increases the form of the ribs becomes more complicated; up to spans of 20 feet, however, ribs like that shown in Fig. 448, *c* will do very well.

They are placed from 2 to 6 feet apart, the interval being regulated by the thickness of the lagging and weight of arch.

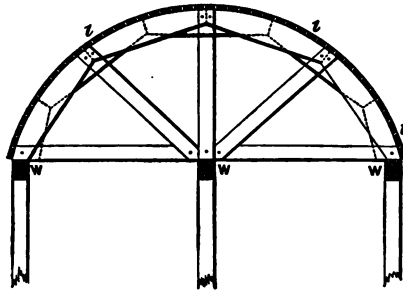


Fig. 440.

More elaborate centres are never required in ordinary buildings, and it will be unnecessary further to advert to them.

Easing.—In building all but the very smallest arches arrangements should be made for *easing* the centre, so as gradually to deprive the arch of its support.

This is done by means of pairs of greased wedges introduced between the heads of the props and the ribs (see WW, Figs. 439, 440).

After the arch has been turned, and the haunches filled in, the points of these wedges are lightly struck so as to drive them outwards from the rib under which they are placed, thus lowering the centre a very little; this causes the whole of the arch to

¹ Sc. *Cleaving*.

² Frequently in arches of large stones there are only one or two pieces of lagging under each stone.

settle slightly and uniformly and to take its bearing, the mortar being compressed in the joints.

The arch is then left until the mortar has set, after which the centres are removed altogether.

Some engineers defer the easing of the centres for a day or two after the arch is built. When an arch is built of very soft stone or bricks it is better not to ease the centering, as the pressure on the edges of the voussoirs is apt to chip them.

In centres for very important stone arches, wedges or screws are frequently placed under *each* "lagging" separately, so that the work may be eased, course by course, and the support replaced if the settlement is too rapid.

Arrangements are sometimes adopted for easing all the wedges at the same time, so that the whole arch may settle uniformly.

CHAPTER XVIII.

JOINERY.

MOULDINGS.

MOULDINGS are required merely for ornament. The most ordinary forms are generally parts of a circle in section; and it is recommended that they should not have much projection, the lines of shade being produced rather by deep grooves.

When a moulding is formed on the edge of a piece of timber in the substance of the wood itself, it is said to be "*stuck*," see Fig. 441.

When it is on a separate slip of wood, and attached to the piece it is to ornament, it is said to be "*laid in*" or "*planted*," see Fig. 447.

These terms are the same as those used for beads and explained in Part I.

In ordinary panelled work the mouldings are as a rule in separate slips, bradded or "*planted*" on to the inner edges of the frames, not on to the panels, as the shrinkage of the latter would draw them away from the frame.

If, however, the moulding is "*stuck*" on the frame, the groove for the panel should be deeper than the moulding, otherwise, when the framing shrinks, daylight will be seen through the open mitred corners of the moulding.

Figures 441 to 446 are sections of some of the commonest mouldings, which are named as follows:—

The Torus (Fig. 441) is a semi-cylindrical projection, surmounted by a flat band called a "*fillet*."

The Double Torus consists of two such semi-cylindrical projections, the upper one being smaller than the other and surmounted by a fillet.

The Ovolo (Fig. 442) is a curved convex projection surmounted by a fillet.

The ovolo shown in Fig. 442 is a quarter-circle in section, but it may be a portion of an ellipse or hyperbola.

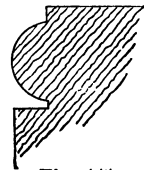


Fig. 441.




Fig. 442.

The *Double Ovolo* consists of two ovolo mouldings opposite to one another, as in the sash bar Fig. 314, Part I.

The *Cavetto* (Fig. 443) is the reverse of the Ovolo, being a concave quadrant.




Fig. 443.

The *Ogee or Cyma Reversa* (Fig. 444) consists of two curves tangent to one another, the upper being concave and the lower convex.

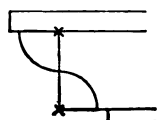


Fig. 444.

The *Reverse Ogee or Cyma Recta* (Fig. 445) is composed of the same parts as the ogee, but reversed, the concavity being in this case uppermost.




Fig. 445.

The curves composing the two last-mentioned mouldings may be either quadrants, as in the figures struck from the centres marked, or the moulding may be varied according to taste, by using flatter curves.

The *Scotia* is a moulding chiefly used for bases and constructed thus:—

In Fig. 446 trisect ab in c and d ; from centre c , with radius ca , describe the circle, $ae d$, a quarter of which forms the upper part of the moulding; draw ce at right angles to ab , cutting the circle in e ; from centre, e , with radius, ef , describe the curve, fb , forming the lower portion of the moulding.

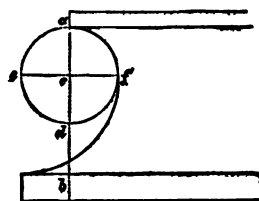
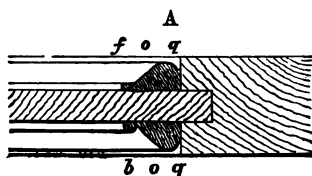
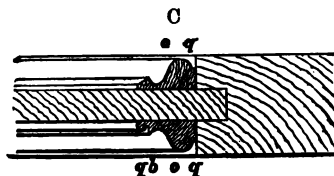


Fig. 446.

When mouldings are formed by a combination of parts of well-known form, they are distinguished by names expressing the combination of those parts.

Thus the moulding at A in Fig. 447 is known as "*Quirk Ovolo and Fillet*," being made up of these three parts, $q o f$.

B
Fig. 447.D
Fig. 448.

The moulding at B in Fig. 447 is a "*Quirk Ovolo and Bead*."

In Fig. 448 the moulding at C is a "*Quirk Ogee*;" that at D is a "*Quirk Ogee and Quirked Bead*."

The above are only a few of the commonest mouldings, the varieties of which are very numerous. At one time they were all formed by hand with the chisel, or by moulding planes; and it was therefore important to know how to construct the various forms, but they are now nearly always made by machinery.

Bolection Mouldings are those which project beyond the face of the framing, as in Fig. 449.

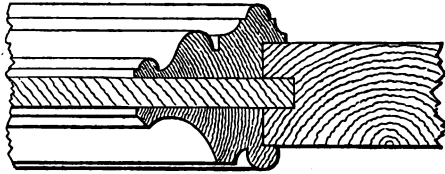


Fig. 449.

They are used in order to give a massive appearance and heavy decoration without increasing the thickness of the framing.

JOINTS.

In this section it is proposed to describe some common forms of joints, which do not form a part of the Elementary Course, and therefore were not referred to in Part I.

The "arrises" or corners of all angle joints in good work should be kept as sharp as possible.

Angle Joints.—**MITRE JOINTS.**—When the length of the joint is not great the pieces are cut to a bevel, so that the plane of the joint bisects the angle; this is called the "mitre."

This joint depends entirely upon the glue unless it is strengthened by a slip feather, as dotted in Fig. 450.

If the boards are of different thicknesses the joint is made as in Fig. 451.

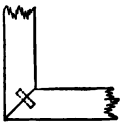


Fig. 450.

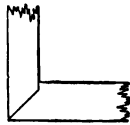


Fig. 451.

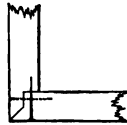


Fig. 452.

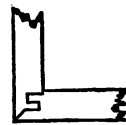


Fig. 453.

Fig. 452 is a modification of the above; it is a good joint for exterior angles, and can be nailed both ways.

This joint is useful for connecting angles such as those of dados or skirtings.

In Fig. 453 the parts are kept together by the form of the joint itself, but it requires a great deal of labour, is very liable to split, and not often used.

Keyed Mitre Joint.—A mitre joint is frequently keyed for strength by inserting thin slips of hard wood covered with glue, as shown in Fig. 454. A keyed mitre is most generally used for joints visible only on the inside, as the keys are unsightly.

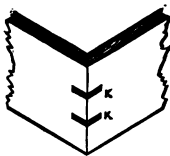


Fig. 454.

BUTT JOINTS.—In mitre joints the shrinkage of the boards in width, as dotted, does not open the external angle of the joint, though the inner angle does open slightly, as shown by the dotted lines in Fig. 455.




Fig. 455.




Fig. 456.

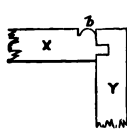


Fig. 457.



Fig. 458.

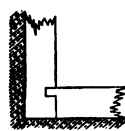


Fig. 459.

When, however, one piece is *butted* against the other, the piece that has its grain parallel to the plane of the joint is drawn away from the other as it contracts, leaving an opening at *o* (Fig. 456).

To hide this opening by its shadow a bead is often "stuck" on to the piece, as shown at *b*, Fig. 457.

Or in angles exposed to injury, such as those of chimney breasts, passages, etc., a bead is formed so as to avoid the sharp arris (Fig. 458).

This forms what is called a *staff bead*.

Interior angles, such as those of dados or skirtings, may be formed with a simple joint as in Fig. 458. In this case the opening caused by shrinkage is not visible (except on the top edge, which is generally mitred as far down as the depth of the moulding), as it is covered by the wall.

The above joints, slightly modified, are all applicable to acute and obtuse, as well as to right angles.

A common joint for uniting the angles of cisterns or troughs is shown in Fig. 460.

When the angles on both sides are seen, one piece may be housed into the other, as in Fig. 461.

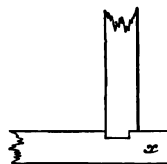


Fig. 460.

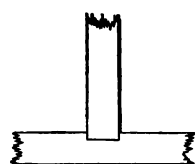


Fig. 461.

If the end, *x*, cannot be left on, the tongue must be made smaller as in Fig. 459, so that sufficient wood may be left on the outside for strength.

DOVETAIL JOINTS.—*The common Dovetail* has already been described in Part I.

The Mitred or Secret Dovetail is chiefly used by cabinetmakers for highly-finished drawers and boxes, when for the sake of appearance it is desirable that the dovetails should not be visible. In this joint not much more than half the thickness of the boards is dovetailed, the outer portion (*s t*, Fig. 463) being mitred as shown, so that the dovetails may not show on the sides of the exterior angle.

In order, further, that the dovetails may not be visible upon the upper surface of the boards to be united, the top of the joint is mitred right through the thickness of the board, *a c*, for a short depth (from *a* to *b*). This may also be done on the lower surface if that is likely to be seen.

Fig. 463 shows only one of the boards to form the angle, but the construction of the other will be readily understood, as it is cut to fit into the projections and indentations of the one shown. The spaces between *x x x* in the figures are the *sockets*, the corresponding projections on the opposite board being called the *pins*.

This joint is not so strong as the common dovetail.

The Lap Dovetail is a joint in which the pins on one board, B, do not extend entirely through the thickness of the board A, but are concealed by a portion of the board which is not cut through. In this case, of course, the pins of the board A only are visible.


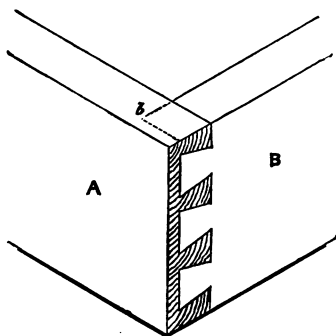


Fig. 464.

This joint is well adapted for the fronts of drawers. The piece, A, which forms the front shows no dovetails, while B forms the side in which their appearance is of no consequence, as it is not seen except when the drawer is open.

KEYS.—When plain surfaces of boarding of considerable extent

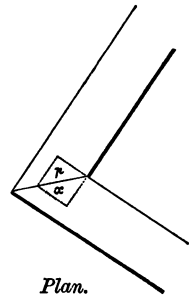

Plan.

Fig. 462.

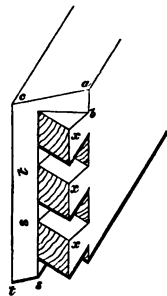


Fig. 463.

are required, as in dados, window backs, wall linings, etc., the boards are generally ploughed and tongued and joined with glue.

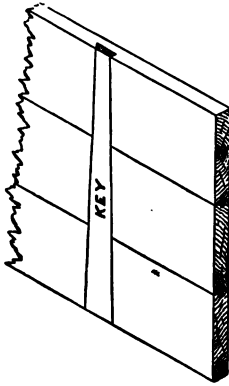


Fig. 465.

Tapering pieces of wood called "keys," very well seasoned, are often let into a wide dovetailed groove across the back, as shown in Fig. 465.

These keys keep the surface of the boards in the same plane, and allow the work to shrink and expand according to the weather.

The edges of boards to be united are sometimes rebated at the back of the joint, and strips of wood are glued in, so as to keep the edges close together. Boards so secured must be very well seasoned, or they

will split.

Double Dovetail Keys are small pieces of hard wood, of double dovetail shape, let in, with the grain, across the joint to be secured.

Hammer-headed Key Joint.

—When a heavy circular-headed frame consists of several curved pieces, the parts are often kept together by keys of hard wood, of the shape shown at H K in Fig. 466, glued in.




Fig. 466.

If the pieces are very wide, a cross tongue, *t*, is put in on each side of the key, and the joint is tightened up by wedges, *w w*.

Screw bolts may be substituted for the keys, the cross tongue still being used.

Clamping.—Boards are sometimes kept tight together at the ends by a "clamp" (C C, Fig. 467) running across them, grooved

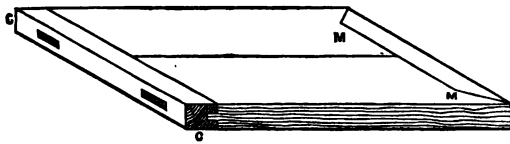


Fig. 467.

on the edge to receive a tongue left on the boards, which are thus free to shrink in width. In the best work tenons are also formed on the ends of the boards, which fit into mortises formed in the clamp.

In some cases the boards are cross-grooved, and the clamp tongued.

Mitre Clamping.—When it is advisable, for the sake of appearance, to conceal the ends of the clamp, they are mitred back, as shown at M M, Fig. 467.

Glued Joints.—When it is required to glue large pieces together, the wood should be thoroughly dry, the edges well warmed at a fire, and clean,—the glue as hot as possible.

While the edges are warm they are covered with a coating of glue, and rubbed together, so that the superfluous glue is squeezed out. In intricate corners, and places hard to get at, this may be sponged off at once, but generally it is better to leave it to get cold, as it excludes the air and enables the glue to set more firmly.

Glue is required principally in putting framed work together, and in panels; but the less of it that is used the better, even in fixing.

Two boards may be glued edge to edge, forming a simple butt joint, or their junction may be strengthened by being grooved and tongued as well as glued.

A considerable surface is often covered with boards so united, as in window backs, dados, etc. In such cases keys are generally grooved in across the back, as shown in Fig. 465. These keep the surfaces of the boards in the same plane, and allow them to shrink and expand with changes in the weather.

Glued and Blocked Joint.—Two boards at an angle may not only have the joint between them glued, but may also be strengthened by a block glued into the angle, as at *bl* in Fig. 468.

Such a construction is called a *glued and blocked joint*. Examples of its use are given at page 337, in Fig. 468. the connections of the treads and risers shown in Fig. 527.

For all sorts of curved surfaces small blocks are glued together, and then covered with a veneer.

Sometimes wood is bent to the form required, and then blocks are glued on to the back to keep it so.



Fig. 469.

as in Fig. 469.

In order to avoid using large pieces of timber, which can never be so seasoned throughout as to prevent splitting, columns and similar constructions are built up with thin staves, *s s*, of dry wood, the required support being afforded by an iron column, *P*, within; and small blocks, *b b b*, are glued inside the joints to strengthen them,

Fixing Joiners' Work.—All joiners' work that is not framed should be fixed so as to be free to expand or contract.

In boarding generally, this may be effected by fixing one edge, and forming the other with a groove and tongue; or the board may be fixed in the centre, with both edges free.

For example, the upper edge of the skirting in Fig. 484 is fixed to the "ground," but the lower edge is free to move, the joint between it and the floor, which would open as the skirting shrinks, being covered by the tongue along the bottom of the skirting which enters the groove formed in the floor. If the skirting board were not thus free to move it would split as it became seasoned.

Again, it will be seen that the frame of the window back (Fig. 484) is free at the lower edge.

The dado in Fig. 473 is also fixed at the upper edge only.

N.B.—In the figures illustrating this section the parts are marked with the following distinctive letters :—

| | | | |
|-----------------|--------------------------------|-------------------|-------------------------------|
| <i>A</i> . . . | Architrave. | <i>il</i> . . . | Inside lining of sash frame. |
| <i>B</i> . . . | Bracket. | <i>l</i> . . . | Laths. |
| <i>b</i> . . . | Batten. | <i>mr</i> . . . | Meeting rails. |
| <i>ba</i> . . . | Backing. | <i>ol</i> . . . | Outside lining of sash frame. |
| <i>bl</i> . . . | Back lining of sash frame. | <i>os</i> . . . | Oak sill. |
| <i>bk</i> . . . | Blocks or blockings. | <i>P</i> . . . | Plaster. |
| <i>br</i> . . . | Bottom rail of sash. | <i>Pp</i> . . . | Pocket piece. |
| <i>bw</i> . . . | Weight to balance bottom sash. | <i>p</i> . . . | Pulley. |
| <i>C</i> . . . | Capping. | <i>pb</i> . . . | Parting bead. |
| <i>c</i> . . . | Cradling. | <i>ps</i> . . . | Pulley style. |
| <i>D</i> . . . | Dado. | <i>psl</i> . . . | Parting slip. |
| <i>f</i> . . . | Fillet. | <i>RA</i> . . . | Relieving arch. |
| <i>g</i> . . . | Ground. | <i>s</i> . . . | Styles. |
| <i>H</i> . . . | Head of sash frame. | <i>SB</i> . . . | Surbase. |
| <i>h</i> . . . | Hinges. | <i>tw</i> . . . | Weight to balance top sash. |
| <i>SS</i> . . . | Stone sill. | <i>WB</i> . . . | Wood bricks. |
| <i>SL</i> . . . | Stone lintel. | <i>wb</i> . . . | Water bar. |
| <i>SF</i> . . . | Solid frame. | <i>wp</i> . . . | Wood plug. |
| <i>sb</i> . . . | Sash bar. | <i>WL</i> . . . | Wood lintel. |
| <i>sk</i> . . . | Skirting. | <i>WiBd</i> . . . | Window board. |
| <i>t</i> . . . | Throating. | <i>x</i> . . . | Wedge. |
| <i>tl</i> . . . | Top lining. | <i>y</i> . . . | Do. |
| <i>tr</i> . . . | Top rail of sash. | <i>zps</i> . . . | Zinc parting slip. |
| <i>ib</i> . . . | Inside bead. | | |

Grounds are pieces of wood nailed to plugs, wood bricks,¹ or slips in the wall, so as to form a firm basis to which the more ornamental portions, such as architraves, linings, etc., may be fixed.

Grounds are used round the margins of openings not only to receive the linings and architraves, but to form a solid finish to the plastering.

¹ Wood bricks, slips, plugs, etc., have been described at page 10, Part I.

Mitred or Splayed Grounds have the side next to the plastering splayed or bevelled as shown in Fig. 470, so as to form a key for the plaster and secure the joint. This term is often used for grounds which are of a splayed form in plan, such as that in Fig. 487.

Grooved Grounds are those which have the inner edge grooved instead of splayed, to answer the same purpose, *i.e.* that of affording a key for the edge for the plaster.

Examples are given in Fig. 471, and several other figures.

When the joint between the ground and the plaster is covered by an architrave, the splay or groove on the edge of the ground is often omitted, as in Fig. 475. It is, however, better to have it, to form a key for and to secure the plaster firmly until the architrave is fixed.

Finished or Wrought Grounds.—In most cases the ground is rough, its surface being flush with that of the plaster on the walls, and concealed by the architrave fixed to it: sometimes, however, either the whole or part of the surface of the ground is exposed to view; it is then said to be “finished,” and is wrought, beaded, or otherwise ornamented.

Fig. 482 shows an example, in which the whole of the ground is visible. In Fig. 486 only part of the ground is seen, which forms the base of an architrave, and is embellished by mouldings attached to it.

Framed Grounds are used as margins for openings in superior work.

They form a sort of rough frame, generally concealed from view, and consisting of two upright sides or posts mortised to receive a head terminating in haunched tenons.

Backing.—In order to form a firm support to the lining between the grounds, cross pieces are dovetailed in between the uprights of the adjacent frames, as shown in elevation in Fig. 478, and in plan in several figures; these are firmly attached to wood bricks, whose edges may be seen in elevation behind them (see Fig. 478).

Common Grounds.—In very common work the grounds consist only of the upright posts or styles, and are not framed into a head at all; in other cases a head is provided, but the styles, instead of being framed, are merely halved or notched into it.

Fixing Grounds.—The grounds should be fixed after the first or rough coat of plaster is laid; they form a “screed” or guide, to which the surface of the second coat is floated (see p. 399).

It is therefore important that the grounds should be solidly and accurately fixed, their surfaces and edges should be perfectly true, and so firm that they will not be easily disturbed by the plasterers.

In fixing grounds the face of the ground should project about $\frac{3}{4}$ -inch from the naked wall, if it is to be rendered or plastered; or the same distance from the battens, if it is to be battened, lathed, and plastered.

The inner edges of grounds for door and window openings should be kept perfectly plumb, and equidistant from the centre line of the opening, the face of the ground being parallel to that of the door or sash-frame.

The width of such grounds will depend upon their finish; also upon the nature of the opening.

If with linings, the grounds may be from 3 to 6 inches wide, the linings being attached to their edges (Fig. 483). If the grounds are wrought, the architrave or fillet covering the junction of the plaster with the ground may lap over about half the width of the ground (Fig. 483). When boxings are used the grounds will be of sufficient width to contain the shutter and back-flaps required, and may be wrought (Fig. 486) or covered with a double-faced architrave (Fig. 487).

Several examples of grounds are given in pages 300 to 312, and there described, so that it will be unnecessary to enter upon them further in detail at present.

Architraves are borders fixed round the openings of doorways or windows for ornament, and also to conceal the joint between the frame and the plastering.

These borders may be of almost any pattern or dimensions to suit the character of the room.

They are sometimes covered with elaborate mouldings, or made in the form of a pilaster.

The mouldings of the architrave may extend down to the floor as in Fig. 474, or they may rest upon blocks or plinths as in Fig. 477.

The architrave should never be fixed until the plastering is completed and quite dry. It should then be placed so as well to cover the joint (see Fig. 480).

Grounds fixed to the wall are generally provided to form a support to the architrave, and are covered by it (see Fig. 480). But in some cases, as already mentioned, the ground itself forms

the face of the architrave, as in Fig. 481, or in common work it may serve all purposes, as shown in Fig. 482.

In order to save labour, and to avoid large pieces of timber, architraves are generally built up in parts glued together. Examples of this will be seen in Figs. 480, 490.

These parts generally consist of a flat portion or base, which is merely a board, beaded, or otherwise ornamented, on edge, and called the face. This is surmounted by mouldings according to taste.

Larger architraves are formed of pieces of different thicknesses tongued together, as in Fig. 475. Those made by machinery may, however, be procured all in one piece.

Double-faced Architrave.—When the base of the architrave is not of equal thickness throughout, but stepped back in the centre, as shown in Fig. 487, it is said to be “double-faced.”

Skirtings.—The *Skirting*¹ is a board from 6 inches to 12 inches wide running round the base of the wall of a room. It is intended to cover the junction of the floor with the walls, and also for ornament.

The skirting board may be square or plain, ornamented by a bead or moulding *stuck* upon it (Fig. 470), or by a detached moulding (Fig. 473) it may be sunk to form a double plinth similar to that in Fig. 471. The skirting may be plugged close up to the wall, or fixed to grounds.

These grounds are rough battens nailed to plugs in the wall, and they should be dovetailed at the angles. A narrow horizontal ground, plugged to the wall, runs close behind the top of the skirting; and, if the latter is wide, blocks, placed about 9 inches apart, extend from the floor to this horizontal ground. Such a skirting is seen in Fig. 470, and another in Fig. 472, where it forms the base of a “dado;” a portion of the skirting is stripped off in order to show two of the blocks supporting it.

The lower edge of the skirting is sometimes housed into the floor, as in Fig. 471, or tongued, as shown in Fig. 473; or it may rest upon it, as in Fig. 470; in either case a fillet, *f*, may be added to cover the joint at the back, though this is not absolutely necessary when it is let into the floor. To save material the fillet may be splayed, *i.e.* made of triangular section (Fig. 470).

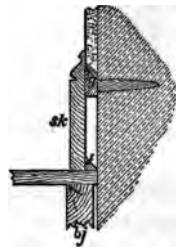


Fig. 470.

¹ Sc. Base, if mouldings are run upon it.
 „ Base plate, „ „ separate.

When the floor is uneven the lower edge of the skirting must be scribed to fit it—that is, a line is drawn upon it parallel to all the irregularities of the surface of the floor, and the lower side of the skirting is cut to this line.

The skirting boards should be tongued (or dovetailed) at the internal angles of rooms and mitred, as shown in Fig. 452, at external angles,—in either case the top edge of the joint is mitred right through. The skirting boards should also be tongued wherever they are pieced in length.

The hollow behind the skirting harbours vermin, and the plastering is sometimes continued down to the floor so as to fill it up (Fig. 472).

The boards of skirtings, as in all joiners' work, should be fixed so as to allow of contraction and expansion without splitting.

This may be done by fixing one side of the board, and tonguing and grooving the joint on the other edge.

Several examples of ordinary skirtings may be seen in the figures illustrating other parts of joiners' work, both in this volume and in Part I., some of which have just been referred to.

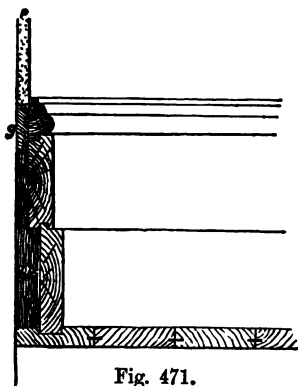


Fig. 471.

A Double Skirting consists of two skirtings, one above the other, as in Fig. 471. The width of both skirtings may be equal as in the illustration given. The lower one is sometimes wider than the other, or it may be narrower, according to taste.

Skirtings are often formed in cement and moulded, but such constructions do not come within the province of the joiner.

Dado and Surbase.—For the sake of ornament, and to prevent the wall from being injured by chairs knocked up against it, a moulded bar, called a “chair rail,” is sometimes fixed at a height of about 3 feet from the floor, and parallel to the skirting.

This rail should be fixed to a narrow horizontal ground, and should be wide enough to cover the grounds and their junctions with the plastering.

The interval between the rail and the skirting is called the *Dado*, D in Fig. 472, and the chair rail, SB, is called the “*surbase*” of

the dado—the skirting forming the “base” B, or, as it is sometimes called, the *plinth*.

The dado may be either panelled, simply boarded, or formed only by the surface of the plastered wall, as in Fig. 472.

Fig. 472 shows a chair rail or surbase, SB, and plastered dado, D, with wooden “base” or “skirting,” B.

The chair rail and the upper moulding of the skirting are nailed to narrow grounds, *g g*, Fig. 472, fixed to plugs inserted in the wall.

A portion of the skirting is

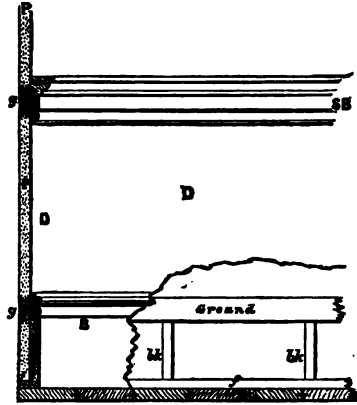


Fig. 472.

broken away to show the blockings, *bk*, supporting it as described at page 299.

The dado illustrated in Fig. 473 is entirely of wood, being formed of wide boards, grooved and feathered, and attached by a thin tongue of hard wood, *j*, to the narrow ground, *g*, which supports the surbase, SB. The boarding is strengthened and kept together by taper keys, *k*, similar to that described at page 294.

The keys may be about 3 feet apart.

The boarding of the dado is thus suspended from the upper “ground,” and is free to expand and contract without opening the joints.

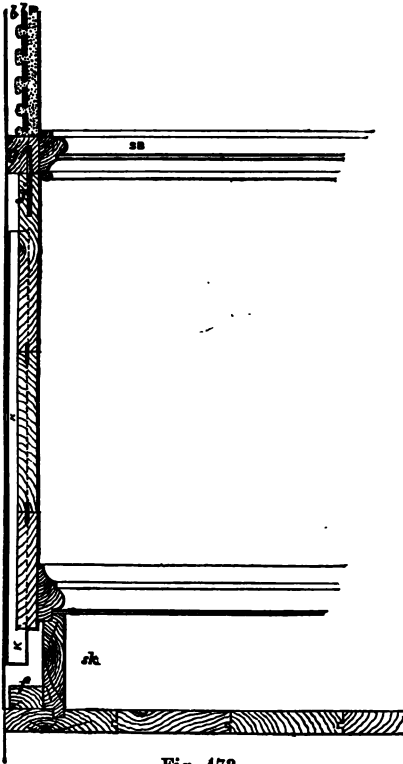


Fig. 473.

LININGS.

Linings are coverings of wood so placed as to conceal or ornament portions of the interior of buildings. There are several varieties of linings, distinguished by technical names denoting the position in which they are fixed.

All linings should be of narrow boards, ploughed or grooved and tongued, or rebated; free to expand and contract, and nailed to battens fixed to the wall about 2 feet apart.

In superior rooms the linings may be framed and panelled as described at page 177, Part I.

LININGS TO DOORWAYS.—*Jamb Linings* cover the sides of the jambs or openings through walls, such as doorways.

Soffit Linings are those which cover the soffit or under sides of the arch or lintel spanning over a door, or the interior of a window opening.

WINDOW LININGS are differently named according to their position.

Breast Linings are those that cover the portion of the wall between the inside ledge or window board and the floor. These are more commonly called "*window backs*."

Elbow Linings cover the splays of the wall when there are no shutters (see Fig. 483).

Back Linings are those at the back of the recesses for shutters (Fig. 486). This name is also given to that side of the boxing in a cased sash frame which is opposite the pulley stile (see p. 198, Part I.)

The Outside and Inside Linings are those forming the outer and inner sides respectively, of the boxings in cased sash frames.

Wall Linings are of the same nature as the above, but cover the whole surface of the walls.

Jamb and Soffit Linings.—In doorways the sides or "*jamb*," J J, and the "*soffit*,"¹ H H, of the opening are generally boarded over or lined for the sake of appearance.

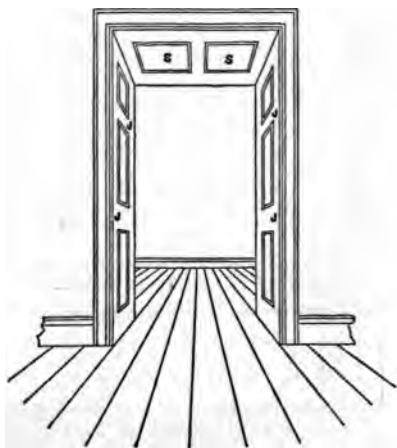


Fig. 474.

¹ Sometimes called *Jamb-head*.

This boarding is called the jamb and soffit linings. These linings serve to conceal the rough sides and soffit of the opening beyond the recess containing the frame. If more than 9 or 10 inches wide they should be panelled, moulded, or otherwise made to correspond in appearance with the face of the door.

Jamb Linings to external Doorway.—It has been mentioned that external doors are nearly always hung in solid frames. If the doorway is in a thick wall, and for any reason it is required to keep the door near the front of the wall, there remains a considerable depth of the opening behind it which may be lined.

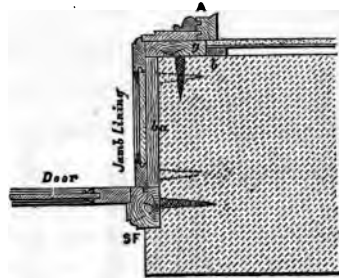


Fig. 475.

Such a case is shown in Fig. 475. The lining in this example is very simple, consisting merely of a 1-inch framed, moulded, and square-panelled lining, flush at back, tongued into the door frame at one end, and at the other butting against the double-faced architrave A. The lining is supported by a rough backing fixed to plugs in the wall.

Solid Frames with Jamb Linings for internal Doorways.—In

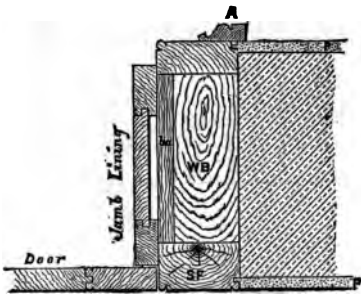


Fig. 476.

this case the jamb lining is kept back from the edge of the frame a space equal to the thickness of the door, thus forming a deep rebate into which the latter may shut.

The lining is fixed as before to a rough backing, *ba*, which is secured to wood bricks or slips in the wall.

This is a very strong way of hanging a door, but it is expensive, and very seldom adopted for interior doors, unless very heavy and substantial work is required.

The solid frame may be beaded or chamfered on both edges and itself form the finish of the doorway, as at SF Fig. 476; or the joint between it and the plaster may be covered by an architrave, as at A on the opposite side.

The lower ends of the frame may be tenoned into the floor, which keeps it very firm.

Jamb Linings with framed Grounds.—This is the most usual way of hanging a door in ordinary work.

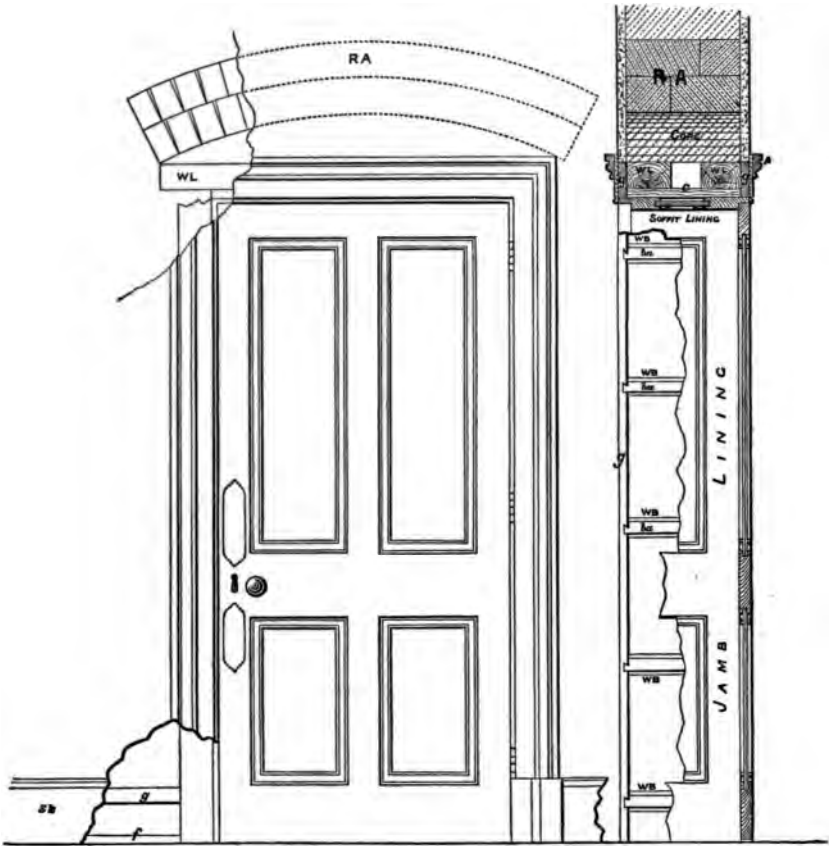


Fig. 477.
Elevation.

Fig. 478.
Section.



Fig. 479.
Plan.

Figs. 477, 478, 479 give an elevation, cross-sectional elevation, and plan respectively, of a four-panelled interior door, with jamb

and soffit lining of this kind. Fig. 480 shows a portion of the plan enlarged.

In this case it will be seen that the door is hung to the jamb lining itself; the latter is attached to a backing *ba* dovetailed in between the framed grounds, and secured to wood bricks in the wall, the edges of which may be seen in elevation in Fig. 478.

In some cases the grounds are tongued into the jamb linings, but this is very seldom done.

The jamb linings go right through the depth of the opening, and on one side of the wall have their edges rebated to receive the door; the edges on the other side of the wall being (in superior work) similarly rebated to correspond.

The soffit lining is secured to cradling or backing, *c*, consisting of rough battens attached to the under side of the lintels over the opening.

Of course the doorway might be spanned by a rough axed arch, or by a concrete beam, without wood lintels, in which case the cradling would be secured to plugs let into the arch or beam.

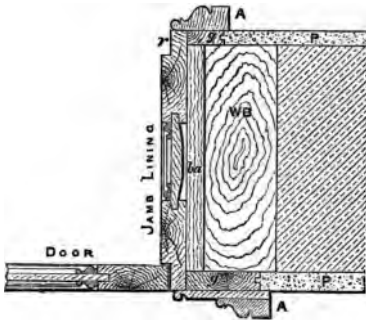


Fig. 480.

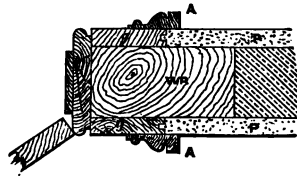


Fig. 481.

The enlarged plan in Fig. 480 differs slightly from Fig. 479, inasmuch as a smaller architrave is shown on the inside of the doorway. The panelling of the soffit lining is often shown in dotted lines upon the plan of the doorway.

Fig. 481 shows the jamb linings, with framed and finished grounds for a doorway in a thin partition wall.

Jamb Lining with finished Grounds.—In common but substantial work—to save the expense of architraves—the grounds may be wrought so as to present a finished appearance, and themselves form an ornamented margin to the opening.

In Fig. 482 *g* is a wrought and chamfered ground secured to the backing *ba*, which is plugged to the wall. It will be seen that *g* acts both as a ground and as an architrave.

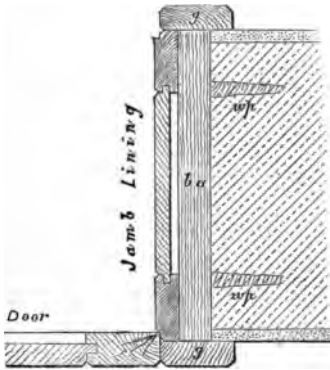


Fig. 482.

Single and Double rebated Linings.—Single-rebated linings are those having a rebate formed to receive the door, but none on the other side of the wall. In superior work there is a similar rebate formed on the opposite side, as at *r* in Fig. 480, and the lining is said to be *double-rebated*.

Window Linings.—Figs. 482, 483 give a half-plan and a section of a window with cased frame and double-hung sashes, furnished with panelled and moulded linings.

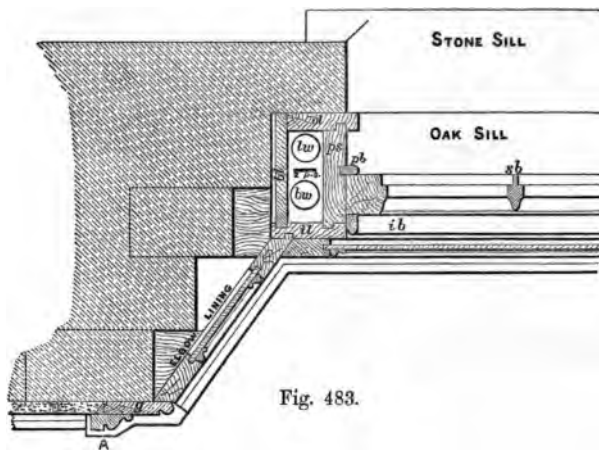


Fig. 483.

It will be noticed that the head of this window is not cased as in the illustrations given of windows without linings (Fig. 317, Part I.), but is solid, being secured to the cradling *c* attached to the under side of the lintels, *WL*, its inner end being grooved to receive the tongued extremity of the soffit lining, the other end of which is nailed to the ground.


The elbow lining is grooved at one end into the inside lining of the boxing, and at the other nailed to the projecting framed and finished ground which forms the face of the architrave.

It is supported by being nailed to the splayed wood brick, WB.

The upper rail of the window back is secured to the oak sill, being surmounted by a capping *c*. The lower rail rests upon the ground *g*, the joint being covered by the moulding of the skirting, so that the expansion and contraction of the window back are not prevented.

The Elbow lining is here shown as finished to look like shutters, sometimes described as "*sham shutters*." When the lining is narrow it is often merely a plain board, tongued if the width requires it, wrought on face, but not framed; when moulded it is made to correspond in appearance with the doors or other panelled work of the room.

The wood brick, WB₁, is inserted in this case, so that the boxed frame may be nailed to it obliquely through the inside lining, *il*, but it is generally considered sufficient to drive a wedge in between the back lining and the wall.

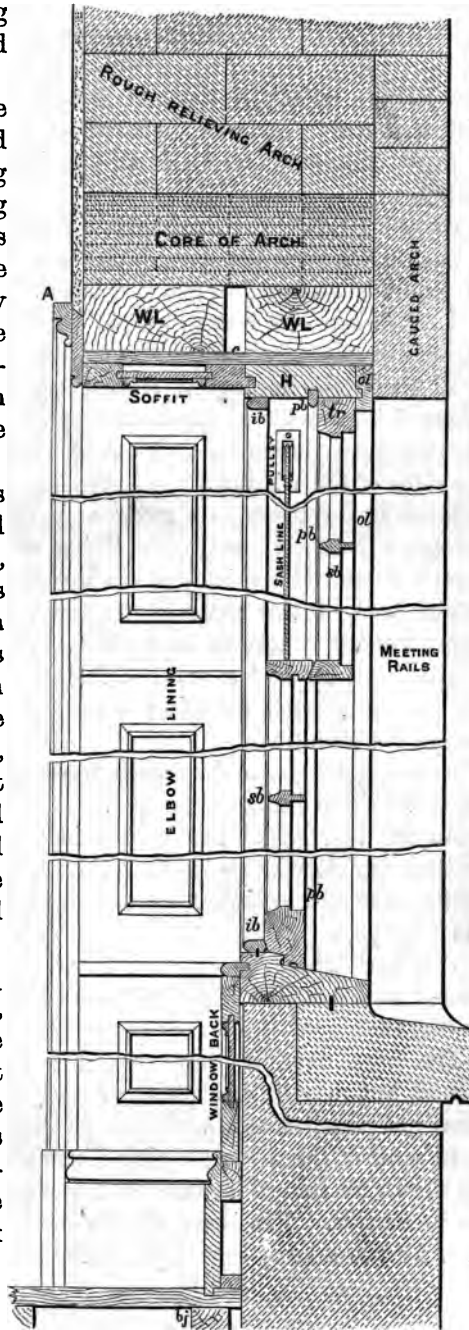

Vertical section through centre of Fig. 482.
Fig. 484.

SHUTTERS.

Windows, especially those of ground-floors, are frequently fitted with shutters for security and warmth at night.

Inside Shutters are fixed on the inner side of the wall of a building.

Outside Shutters are fixed on the outer side of the wall.

Inside Shutters are hung in several different ways, which may be generally arranged under two heads.

1. *Folding*.—In leaves, hinged together and folding back into recesses or "*boxings*" prepared for them.

2. *Sliding*.—In leaves, sliding up and down, and counter-balanced by weights in the same way as sliding sashes; or sliding *laterally* upon rollers in and out of recesses formed for them at the sides of the window.

FOLDING SHUTTERS.—A recess or boxing for these is formed in the space between the inside lining of the sash frame and the framed ground at the back of the architrave.

The back of this recess is plastered in common work, but in better work it is covered by a lining, called the "back lining."

This back lining has one end tongued into the inside lining of the sash frame, and the other housed or tongued into the ground behind the architrave.

In Fig. 486 the architrave is fixed to a finished ground into which the back lining is grooved.

As the interior of the boxing is exposed to view when the shutters are closed, the back of the ground is sometimes covered, for the sake of appearance, by a return lining such as that marked *l* in Fig. 487.

The leaf which is exposed to view during the day may be framed and panelled like the doors of the room, and is called the *shutter*, the remaining leaves are called the *back flaps*.¹

The back flaps, if they exceed 6 or 7 inches in width, are framed, but may be of a plainer description of panelling, or sometimes not panelled at all.

In most of the accompanying illustrations the shutter and flaps are shown as framed square on the outer side and bead flush on the inner side. The inner side is more commonly finished bead flush for the sake of economy; or the flaps are often framed square

¹ See *Backfolds—Closers*.

on both sides, or moulded on one or both sides according to the class of work.

In the very best work, however, the shutters and flaps are all made the same on both sides, so that when closed they will all appear alike, whether seen from the interior of the room or through the glass from the outside.

In hanging shutters the knuckle of the hinges of the front leaf should be about half-an-inch from the inner angle of the inside lining—so that the whole width from one extremity of the shutters to the other, when they are open, is an inch more than the width of the window opening.

The flaps are connected by small “back-flap” hinges fixed as shown, or by butt hinges attached to the edges of the flaps. In the former case the shutters, when folded back, are kept apart by nearly the thickness of the hinge, and there is room for an iron bar or other fastening to hang between them.

Shutter and One Flap.—When the opening is narrow, or the wall of considerable thickness, the shutter may be hung in two leaves, as in Figs. 485, 486.

Fig. 485 is an interior elevation of a window with sliding sashes fitted with shutters hung in two leaves. The shutter and

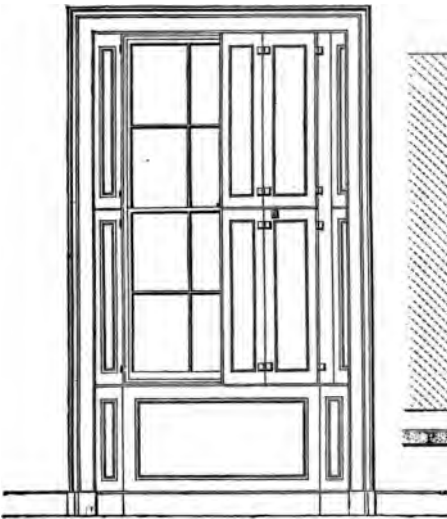


Fig. 485.

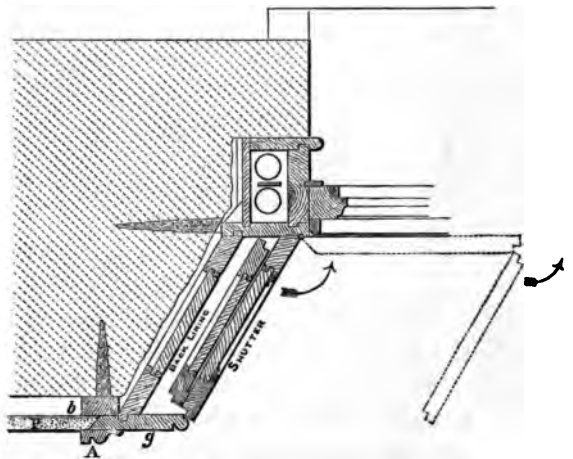


Fig. 486.

flap to the right of the elevation are closed, the other shutter and

flap being folded back into the boxings, as shown in the half-plan Fig. 487.

The shutter is moulded on the side exposed to view during the day; the back of this shutter and that of the back flap (which are seen together on the inside of the room when the shutters are closed) are bead flush, while the front or outer side of the back flap is framed square.

In this and some of the following figures the dotted lines show the position of the shutter and flap while in the act of being closed.

Shutter and Two Flaps.—When a window opening is wide, or the wall in which it is formed is not very thick, there is not so much room for shutters in proportion to their width, and they have to be folded into a greater number of leaves in order that they may take up less room in the thickness of the wall.

Fig. 487 is the half-plan of a window with the same opening as that in Fig. 486, but in a wall only 1 foot 6 inches, instead of 2 feet thick.

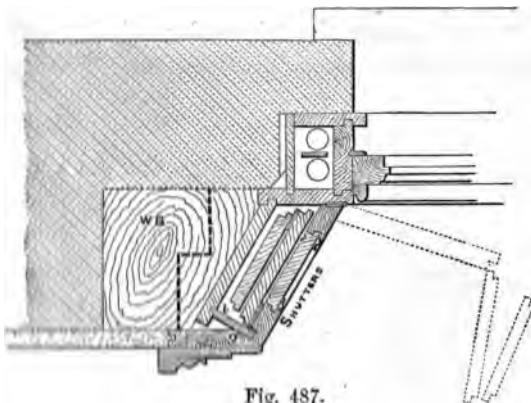


Fig. 487.

The shutter is in this case necessarily folded into three leaves; the two back flaps being very narrow are not framed.

The lining, *l*, at the back of the ground, *g*, is only to preserve a neat appearance within the boxings when they are empty; it may be omitted and the back lining of the boxing prolonged to meet the back of the ground.

There are many methods of arranging folding shutters, which vary considerably according to the length of shutters required—and the space available for them to fold into.

One method of gaining room for shutters is to make the boxings project into the room, as shown in Fig. 488, or when the

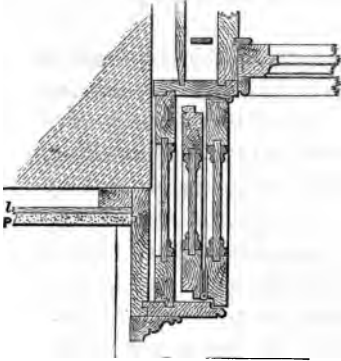


Fig. 488.

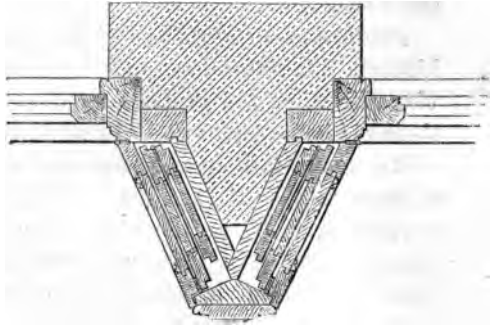


Fig. 489.

windows are separated by very narrow piers, the shutters may be arranged as in Fig. 489.

Where the masonry cannot be made to extend inwards far enough to form a support for the lining at the back of the shutters, such support is afforded by wooden brackets fixed to the back of the pier and extending inwards as far as may be required.

Another arrangement for shutters to cover a window in a thin wall is shown in Fig. 490.

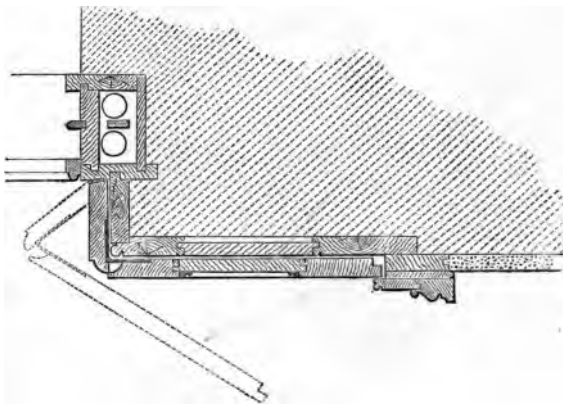


Fig. 490.

In this case the larger flap of the shutter folds back upon the inner side of the wall, and is exposed to view, being connected with the boxing of the window by a short flap which forms the jamb

lining. The elbow of the wall is lined, in order to present a neat appearance when the shutters are closed.

This is rather an old-fashioned arrangement, but very useful in some situations.

Shutters with Cover Flap.—The different forms of folding shutters hitherto illustrated have one disadvantage in point of appearance, viz., that when the shutters are closed the recess formed to receive them is visible, and forms a break in the continuity of the panelling.

To avoid this, in very superior work the recess is covered by a separate flap, X (Fig. 491), which is hinged to the ground supporting it. When the shutters are to be closed, this flap is opened; and after they are shut against the sash the flap is returned, so that the appearance of the lining is preserved intact.

In order to throw the shutters back into the recess sufficiently to clear this flap, various arrangements are adopted.

That shown in the figure simply consists of a hinge, *h*, of peculiar form attached to a heavy moulding fixed to the inside lining of the cased frame. The action of this hinge will be clear upon examining the figure, in which the shutters are shown folded back into the recess, the position of the flap, when partly closed, being indicated in dotted lines.

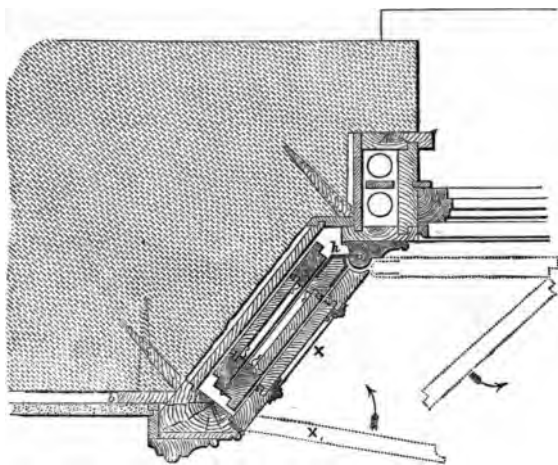


Fig. 491.¹

In some cases the shutter is thrown back clear of the covering flap by inserting a very short flap,² which lies across the ends of

¹ Modified from Plate 54, vol. iii., Laxton's *Examples of Building Construction*.

² A good example of this arrangement is shown in Laxton's *Examples of Building Construction*, Plate 55, vol. iii.

the shutters nearest the sash frame, and answers the same purpose as the peculiar hinge shown in Fig. 491.

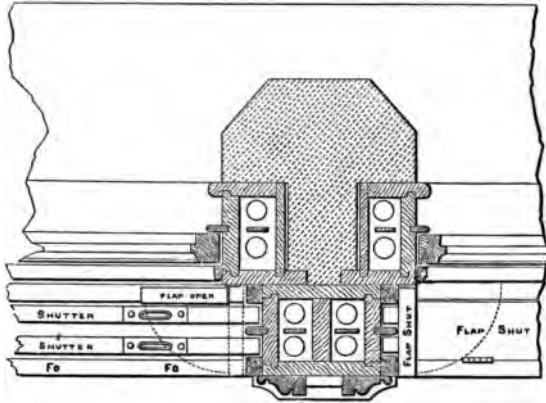


Fig. 492.

SLIDING SHUTTERS may move either vertically or laterally, in the former case they are often called *lifting shutters*.

Lifting Shutters are hung in exactly the same way as sliding sashes; immediately behind the boxed frame of the sash is a similar frame for the shutters (Fig. 492).

The leaves of the shutters slide down into a rectangular well formed for them in the floor, so that their upper rails are nearly level with the window sill.

On the front side they lie close to the inside of the wall, and on the other they are screened by a framed *back* (*Ba* in Fig. 493).

The two leaves of the shutter slide in different and parallel paths,—the upper one, S_1 , between the bead on the front lining of the shutter frame and the parting bead; the other, S_2 , between the parting bead and a bead fastened on to the inside lining of the sash frame.

The shutter nearest to the wall, S_2 , is the lower of the two when they are closed. It is somewhat larger than the other, being of such a height that it will extend from the top of the flap or capping to the upper edge of the meeting rail. The other shutter fills up the space between the upper edge of the meeting rail and the top of the window.

The top of the wall is closed when the shutters are down by a horizontal hinged flap, and vertical flaps conceal the parting bead, etc., when the shutters are not closed.

Sliding shutters are useful when there is not a sufficient thickness of wall behind the sash to receive folding shutters.

Fig. 492 is a plan of part of two adjacent windows separated by a narrow pier or mullion, and fitted with lifting shutters, and Fig. 493 is a vertical section of the same.

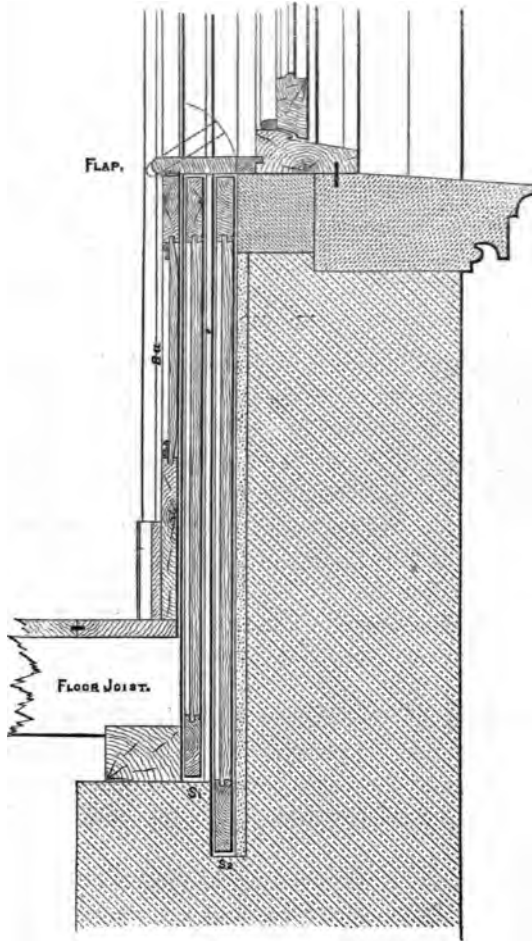


Fig. 493.

On the left of the plan the flap over the well for the shutters is supposed to be standing vertically open along FO FO, so that the upper rails of the shutters are visible with the flush handles for lifting them.

The vertical flap is also open and folded back.

On the right of the figure both flaps are closed.


In some cases the boxing for shutters is so arranged that its outside lining is formed by the inside lining of the cased frame for the sashes, which is a more economical construction than that shown in Fig. 492, but not so convenient.

Sliding Shutters are those in which the flaps slide laterally into recesses formed on each side of the window.

Such an arrangement can only be adopted when there is a considerable space on each side of the window. It possesses no particular advantages, and cannot here be described.

A good illustration of shutters sliding laterally will be found in Laxton's *Examples of Building Construction*, vol. iii., Pl. 37.

Outside Shutters for dwelling-houses are generally hung somewhat like doors—in two leaves, one on each side—which are fixed to the outside lining (or to a fillet plugged to the wall in front of the outside lining) with *parliament hinges*, by which it is enabled to clear the reveal, and fold back upon the wall; see Fig. 494.

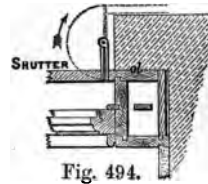

For shop fronts shifting shutters are used, the appearance of which is familiar to all. Any description of them would be beyond the range of these Notes.

SKYLIGHTS AND LANTERNS.

Skylights are windows either fixed in roofs, or themselves forming the roof of a staircase or other building lighted from above.

They are very varied in form, according to the position in which they are fixed.

In many cases the skylight is raised upon vertical or slightly inclining frames filled in with sashes which form its sides (Figs. 498, 499); it is then frequently called a *Lantern*.

The most common form of skylight is perhaps that in which the sash is parallel to the slope of the roof, and slightly raised above the surface of the slating as in Fig. 495.

An opening is formed in the slope of the roof (by trimming the common rafters CR), of the same size as the proposed skylight; a lining is attached to the inner sides of the trimmers TT, and of the trimming rafters, extending a few inches above them. Upon this the sash rests; its styles and rails project over the

frame, and may be rebated to fit it, or a projecting piece may be nailed on, as shown at *c* in Fig. 495, to cover the joint.

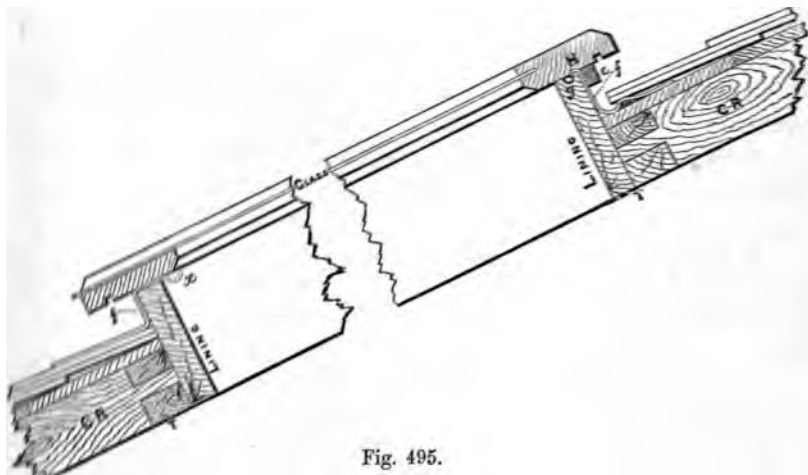


Fig. 495.

Lead flashings, *ff*, are also fixed as shown to prevent the wet from getting in; and any that may penetrate finds itself in a groove *g* cut in the upper surface of the top and side linings, down which it runs, escaping at the lower end of the latter.

The sash bars run down the slope of the roof like rafters, and should be made strong enough to resist the weight of glass and snow, force of wind, etc. The rebates should be grooved so as to carry off any moisture that may pass round the edges of the glass.

The lead apron at the lower extremity of the inside of the skylight should be formed into a sort of gutter, as shown in dotted lines at *a*, to receive and carry away the moisture which condenses on the lower surface of the glass.

The panes should run continuously through from top to bottom of the skylight, without cross bars to interrupt the wet running off the glass.

If it be necessary to have the panes in shorter lengths, they should overlap, as in Fig. 496, and be secured by metal clips, shown in thick black lines, which hang the bottom edge of each pane to the top edge of the pane below it (see page 421).

It is sometimes necessary, for want of space, to obtain more light, or for other reasons, to make the side linings vertical instead of at right angles to the rafters as shown, but the latter is the stronger construction.




Fig. 496.

If such a skylight as that shown in Fig. 495 be required to open it must be hinged at H; and in some cases the joint is protected by a strip of lead fastened round the sash, which hangs down over the lead flashing on the sides of the frame.

The glass in skylights is sometimes secured by means of a capping fixed to the upper surface of the sash bars, which holds the glass more firmly and prevents the wet from penetrating.

Another kind of skylight consists of a pair of sashes fixed above the apex of a roof and parallel to its sides.

Two varieties, surmounting a queen-post roof, are shown in Figs. 497, 498.

The skylight, of which half is shown at A, consists of a pair of sashes similar in construction to that just described, raised a few

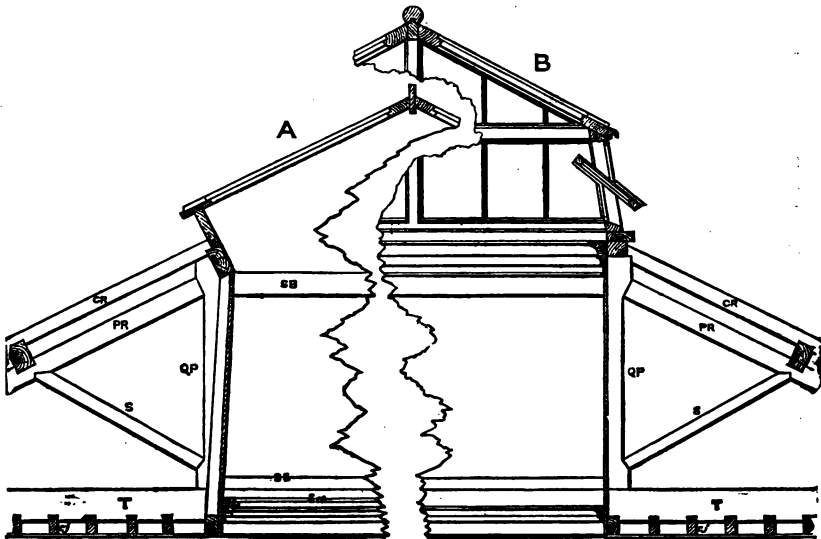


Fig. 497.

Fig. 498.

inches above the surface of the side slopes of the roof by means of linings fixed to the purlins resting upon the queen posts.

The inner sides of the queen posts have backing pieces fixed to them, carrying a lining so as to convert the interval immediately under the skylight into a shaft or boxing.

In some cases, for the sake of appearance, the lower extremity of this shaft is filled in with a sash, *Sa*, called a *counter skylight* or *ceiling light*, containing glass, so as to keep the plane of the ceiling almost unbroken.

The sash of the lantern at B is raised two or three feet above the roof by means of framed sides containing sashes which may either be fixed or made to open by being hinged at the top, or as in Fig. 498, hung on centres.

The sill of the framed sides is fixed to a capping or curb, which rests upon a cross beam supported by the heads of the green posts.

This form of skylight gives more light and ventilation than that at A, but is of course considerably more expensive.

Fig. 500 shows a skylight or lantern over a room covered by a lead flat.

This example is taken from the lecture-theatre of an hospital near London, but it is in many particulars similar to one over the Museum of Economic Geology, and illustrated in *Lambert's Examples of Building Construction*.

The lantern being here very heavy is supported on two sides by cast-iron girders, and Fig. 500a, extending across the room. The other sides are covered by rafters fixed between these girders.

Fig. 500b is a plan showing the arrangement of these girders, and of the rafters and posts supporting the lead flat, the larger portion of which is broken away to show the bearers beneath.

Fig. 499 is a sectional elevation of half the lantern showing the different parts in sufficient detail to render much explanation unnecessary. The moisture condensed upon the inside of the upper portion of the skylight runs down and is caught in a small zinc gutter formed in the upper portion of the moulding at W, and from thence is led through a hole (dotted in the figure) to discharge upon the lead flat outside.

The details of the side sashes hung on centres are similar to those already given for such sashes in Fig. 315, Part I.

It will be noticed that the inside bead, z, Fig. 499, is so fixed upon the sill that the skylight when closed does not shut up against it, but an interval is left, which forms a gutter to receive the condensed moisture from the sash. A groove cut in the sill enables this water to escape.

Such a lantern as that shown in Fig. 499 may itself form the roof of a staircase, in which case the oak sill, forming the base of the sash, would rest upon the coping of the walls of the staircase.

When the side sashes of a lantern are fixed, ample provision should be made for carrying off the moisture which condenses on the inside of the glass, and has a tendency to run down into the room below.

This may be prevented by providing a wide oak sill projecting

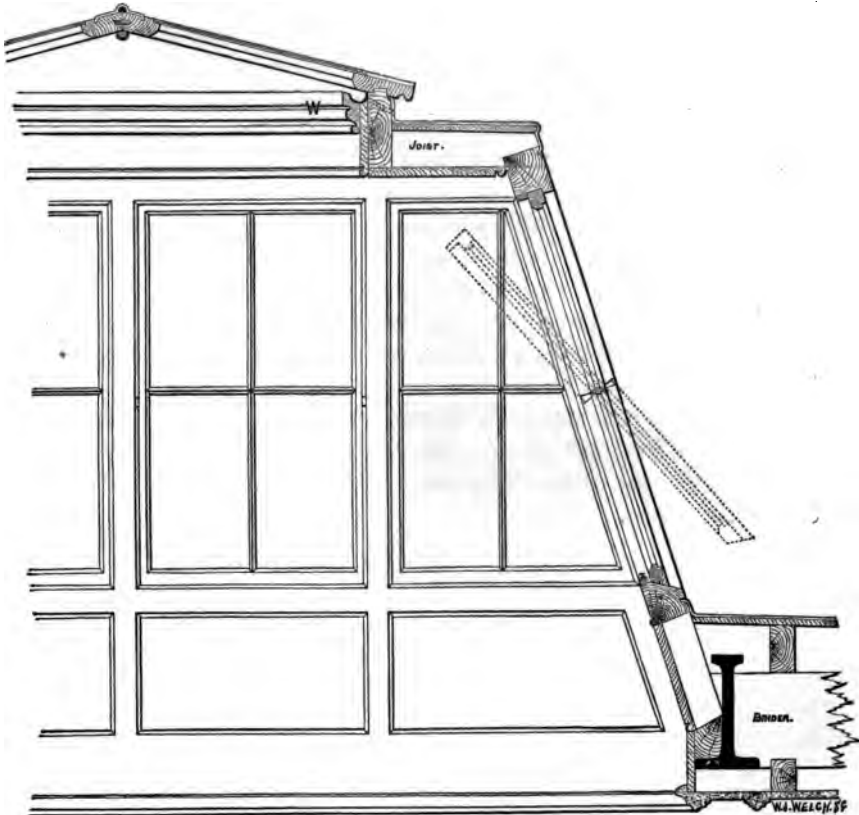


Fig. 499.

inwards an inch or two, so as to give room for a deep groove formed on the inside, into which the condensed moisture runs, and from whence it is led outwards by holes bored through the sill.

Or the inside bead on the oak sill may be kept a little back from those on the sides, so as to form a gutter as explained above and shown in Fig. 499.

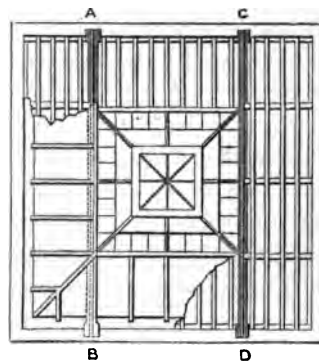


Fig. 500.

Sliding Sash in Skylight.—It is sometimes advisable to con-

struct the slightly inclined sashes of a skylight so as to open by sliding.

In such a case it is important to keep the rain from penetrating between the frame and the sash.

This may be done by arranging as in Fig. 501.

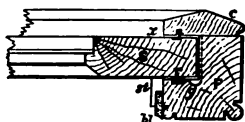


Fig. 501.

The sash, S, slides down the frame, F, upon a little brass friction roller, *r*, fixed in the frame. *st* is a stop on the sash which strikes against the block, *bl*, attached to the frame, and arrests the fall of the sash when it has gone far enough.

c is a capping protecting the upper surface of the joint between the sash and frame. As an additional precaution an angle-iron water bar may be inserted as shown, so as to prevent any water running off the sash from penetrating sideways at the point *x*. If, in spite of this, any water should penetrate, it will find itself in the groove *g*, which leads it off through the lower end of the frame.

CHAPTER XIX.

STAIRS.

Stairs are arrangements of steps for conveniently ascending from one level to another.

They are generally constructed either in stone, wood, concrete, or iron.

The consideration of iron stairs does not come within the range of these Notes.

The terms common to all stairs will first be mentioned, and also a few general principles universally applicable; after which the construction of stone and wood stairs respectively will be considered more in detail.

The following are terms used in connection with all stairs, whatever may be the material of which they are constructed.

The Staircase is the chamber or space which contains the stairs.

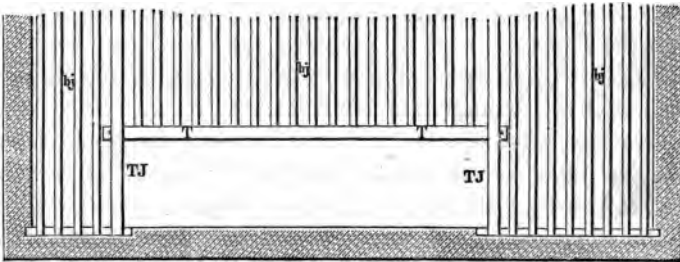


Fig. 502.

This may be a room of the exact size required, the walls of which closely surround and support the steps, as in Fig. 535, or the stairs may be in a large apartment, such as a passage or hall, openings being left in the upper floors so as to allow headway for persons on the steps, and to furnish communication between the stairs and the different stories of the building.

In such a case the stairs are generally, though not necessarily, placed against a wall, as shown in Fig. 502, and the opening is trimmed round in the manner explained at page 91, Part I.

Tread is the horizontal upper surface of the step upon which the foot is placed.

Rise is the vertical height between two treads.

*Riser*¹ is the face or vertical portion of the step.

Nosing is the outer edge of the tread. In most cases it projects beyond the face of the riser and is rounded or ornamented by a moulding, being known, accordingly, as a "rounded" or "moulded" nosing.² (See Figs. 504, 523.)

Fliers are the ordinary steps of rectangular shape in plan.

*Winders*³ are the steps of triangular or taper form in plan, required in turning a corner or going round a curve. The small ends of winders are sometimes called the *quoins*.

A *Curtail Step* is described at p. 346.

A *Flight* is a continued series of steps without a landing.

A *Landing*⁴ is the flat resting-place at the top of any flight.

A *Half Space* is a landing extending right across the width of the stair.

A *Quarter Space* is a landing extending half across the width of the staircase.

The Going of a Stair is the distance from riser to riser.

This term is, however, sometimes taken to mean the width of the stair, that is, the length of the steps.

The Going of a Flight is the distance from the first to the last riser in the flight.

The Line of Nosings is tangent to the nosings of the steps, and thus parallel to the inclination of the stair.

Newels are posts or columns used in some kinds of stairs to receive the outer ends of steps. The name "newel" is sometimes applied to the final baluster on a curtail step.

If the steps are pinned into the wall and there is no post, the staircase is said to have an "open newel."

The Handrail is a rounded rail, parallel nearly throughout its length to the general inclination of the stair, and at such a height from the steps as to be conveniently grasped by a person on the stairs.

Balusters are slight posts or bars supporting the handrail.

Dimensions of Stairs.—The dimensions of staircases and steps are regulated by the purposes for which they are intended.

Length of Steps.—Sometimes spiral staircases are constructed in very cramped positions, with steps only 1 foot 9 inches long; but, as a rule, steps should not be less than from 3 to 4 feet long,

¹ Sc. *Breast*. ² Sc. *Bottled* or *Bottle-nosed step*. ³ Sc. *Wheeling steps*. ⁴ Sc. *Plat*.

so as to allow two people to pass, and in superior buildings they are very much longer.

The stairs in the illustrations given with these Notes are necessarily shown narrow for want of space.

Tread and Rise.—The angle of ascent for a stair will depend upon the total height to be gained between the floors, and the space that can be afforded in plan.

The wider the step the less the rise should be, as steps which are both wide and high require a great exertion to climb.

Authorities differ slightly as to the proportion between the tread and riser; the following table is given by Mr. Mayer in Newland's *Carpenter's and Joiner's Assistant*.

| Treads, inches. | Risers, inches. | | Treads, inches. | Risers, inches. |
|--------------------|--------------------|--|--------------------|--------------------|
| 5 | 9 | | 12 | 5½ |
| 6 | 8½ | | 13 | 5 |
| 7 | 8 | | 14 | 4½ |
| 8 | 7½ | | 15 | 4 |
| 9 | 7 | | 16 | 3½ |
| 10 | 6½ | | 17 | 3 |
| 11 | 6 | | 18 | 2½ |

The following rule is often adopted for steps of the dimensions ordinarily required in practice, *i.e.* those with treads from 9 inches to 14 inches wide:—

Width of tread \times height of riser = 66 inches.

Thus with a tread of 12 inches riser would be 5½ inches; with a riser of 6 inches the tread would be 11 inches.

The rule adopted in France, where they have given great attention to the subject, is as follows:—"Inasmuch as on the average human beings move horizontally 2 feet in a stride, and as the labour of rising vertically is twice that of moving horizontally, the width of the tread added to twice the height of the rise should be equal to 2 feet."

The proportion that the tread and riser bear to one another cannot always in practice be fixed by rule, but is regulated by the space—as regards both plan and height—that can be afforded for the staircase.

The tread of a step should, however, never be less than 9 inches in width, even for the commonest stair; while, for first-class houses and public buildings, the stairs may have treads from 12 to 14 inches wide.

Flights should, when possible, consist of not more than 12 or

13 steps, after which there should be a landing, so that weak people may have a rest at short intervals.

Two consecutive flights ought not to be in the same direction (see p. 349).

DIFFERENT FORMS OF STAIRS.

N.B.—In the Figures connected with stairs the handrail is drawn in the elevations and sections in order more clearly to show the direction of the steps, but omitted from the plans so as not to obscure them.

A Straight Stair is one in which all the steps are parallel to one another and rise in the same direction—thus a person ascending moves forward in a straight line.

Figs. 506, 507, 528, 529, show plans and sections of straight staircases, the former in stone, and the latter in wood; these are described at pages 327, 338.

Such a stair is, for some reasons, very convenient, but can only be used when there is a considerable length of space available for the staircase compared with the height to be gained.

When this is not the case, the flights of steps are made to run in different directions, so that they are doubled up into a shorter space.

Flights running alternately in opposite directions are found to be a great relief in ascending a considerable height, and therefore a very long straight stair is objectionable.

A Dog-legged Stair¹ is so called from its being bent or crooked suddenly round in fancied resemblance to a dog's leg.

In this form of stair the alternate flights rise in opposite directions, as indicated by the arrows in Figs. 508, 511, and 531.

The ends of the steps composing each of these alternate flights are in the same plane with those of the other flight, so that there is no opening or well hole between them.

It is evident that—putting landings out of consideration—dog-legged stairs require only half the length of staircase that would be occupied by an equal number of steps of the same size arranged as a straight stair. On the other hand, the dog-legged stair requires twice the width of the straight stair.

Figs. 508–510 show a dog-legged stair in stone with a half-space landing. Figs. 530, 531 show a similar stair in wood.

¹ This term is generally used with reference to wooden stairs, but there is no distinct name for stone stairs of similar form. Stairs with rectangular well holes, such as those in Figs. 516, 533, are sometimes called *dog-legged*.

In Fig. 511 there is no landing, the whole space being taken up with winders.

It will be noticed that all the winders converge to a point in the stair itself, so that they are very narrow near this end, and most inconvenient to ascend. This is a great drawback to the dog-legged form of stair, which, indeed, should never be used when winders are required, if there is room for a well hole between the flights.

A Geometrical Stair is one in which there is an opening or well hole between the backward and forward flights.

Such a stair requires of course a little more width, but only about the same length of space as a dog-legged stair.

The effect of the well hole is that the winders converge to a point between the flights, and have a certain amount of width even on the verge of the well hole. At a short distance inwards, where the person ascending places his foot, the winder is so broad as to afford a very convenient tread.

Figs. 513-515 show a geometrical stair in stone without landings, the space being occupied entirely by winders. Fig. 535 shows a similar stair constructed in wood.

Circular Stairs are composed of steps contained in a circular or polygonal staircase, towards the centre of which they all converge.

All the steps are necessarily winders.¹

A CIRCULAR NEWEL STAIR is one in which the converging steps are supported by a newel at the centre of the staircase.

This newel may be either solid or hollow (see page 332).

A CIRCULAR GEOMETRICAL STAIR is in form the same as the last described, but that there is no newel. The steps converge as before, but rise round an open well hole instead of resting upon a newel (page 333).

STONE STAIRS.

Stone Stairs have an advantage over those of wood, inasmuch as they are much simpler in construction, and are not so rapidly destroyed by fire;² but the steps are heavy and require substantial walls for their support; moreover they become smooth under the friction of continued wear, and then are slippery and dangerous.

Stone Steps are generally solid blocks, and should be worked on

¹ Sc. *Wheeling steps*.

² The destruction of stone steps by fire, though not so rapid, is quite as effectual as if they were made of wood.

the tread and rise, the former being slightly weathered, or the stone set with a slight inclination outwards.¹ In superior buildings the soffit also is worked, and the nosing may be moulded,² as shown in Fig. 504.

Steps and landings that cannot be got out in one stone must be of pieces jointed, joggled, and plugged together; in some cases it is necessary to support the landings on girders. Stone steps are sometimes formed with thin flags forming treads and risers, similar to those of wooden steps. Such steps require no further description. The following remarks refer to solid steps.

SQUARE STEPS are rectangular in section, as shown in Fig. 503.

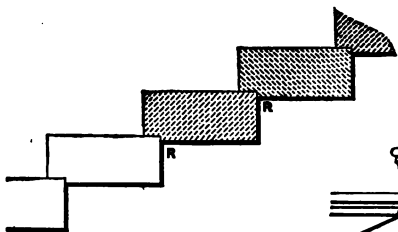


Fig. 503.

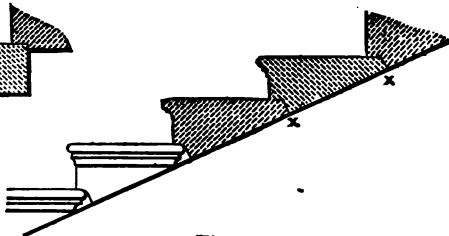


Fig. 504.

The hatched portion of these figures is in section, the remainder in elevation.

SPANDRIL³ STEPS have the lower side cut away so as to form a raking soffit, as in Fig. 504; this is sometimes useful where headway is required under the stairs, it also makes the steps lighter, and is considered to have a better appearance.

FIXING STONE STEPS.—Stone steps may in some forms of staircase be supported at both ends by walls; in other cases one end only of each is built into the wall; these latter are called *hanging steps*.

The lowest step of a stair is sometimes sunk slightly into the ground to prevent it from sliding on its bed.

Steps supported at both ends are of most simple construction. The stone is rectangular in section, of a height exactly equal to the rise, and in width a little more than that of the tread (Fig. 506).

They are about 12 inches longer than the width of the stair, so that a length of 6 inches at each end is built into the adjacent walls.

When, however, these walls do not rise higher than the sides of the stair, the steps are of a length exactly equal to the width of the stair, and the ends are supported by walls built underneath them.

¹ Sc. this inclination is called the *kilt* of the stone. ² Sc. *Bottled* or *Bottle-nosed*.

³ Sometimes called Feather-edged steps.

Hanging Steps are each fixed at one end only; the outer end projects and is without support other than that afforded by the steps below it.

The fixed ends of hanging steps should be let into the wall about 9 inches, and very solidly and firmly built in.

As each step is supposed to depend to a certain extent on the support of the step below it, the joint between the two is so made that the pressure may be transmitted from one step to the other, and the parts in contact may be kept from slipping.

In square steps this is often done by cutting a rebate (R R, Fig. 503) along the lower edge of the front of each step, into which fits the upper edge of the back of the step above, or a deeper rebate may be formed along the lower edge of the breast of each step, and the back-joint cut off at right angles to the soffit, as shown at Y Y in Fig. 505.

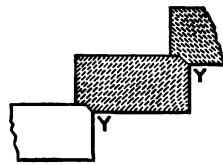


Fig. 505.

If the ends of the steps are securely built into the wall the steps cannot slide, and the rebate is of very little use; in fact, in the very best work it is sometimes omitted, unless the steps have a low rise, and would otherwise be too thin to bear the weight upon them, in which case their thickness can be increased by introducing the rebate.

A plain chamfered joint at right angles to the soffit, like that in Fig. 505 but without the rebate, is sometimes used.

Hanging steps may be built in as the wall is carried up; or, to avoid risk of damage to the steps, indents about 9 inches deep may be left in the walls, and the steps inserted afterwards; they should be pinned in with cement, and iron backing of hoop iron, pieces of old saws, etc.



Sometimes about 12 inches of the walling above and below the steps is built in cement.

Different Arrangements of Stone Stairs.—STRAIGHT STAIRS.—Figs. 506, 507 show a straight stair composed of square steps supported at each end by being built into the side walls.




Fig. 507 is a horizontal sectional plan (looking downwards) through step No. 12.

The steps have 9 inches tread, and 7 inches rise, and between the flights (each consisting of 9 steps) is placed a landing.

¹ Sc. Piend-Check.

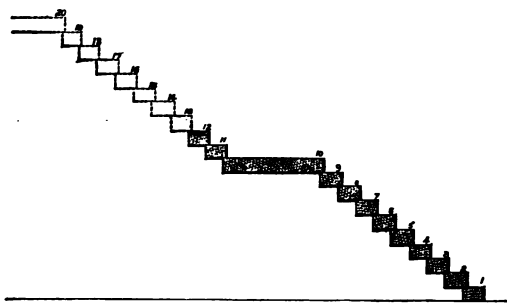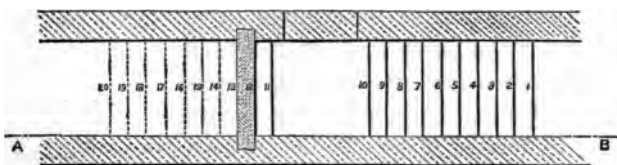Fig. 506. *Section.*Fig. 507. *Plan.*

DOG-LEGGED STAIRS in stone¹ are generally composed of hanging steps, the inner ends of which are firmly built into the walls

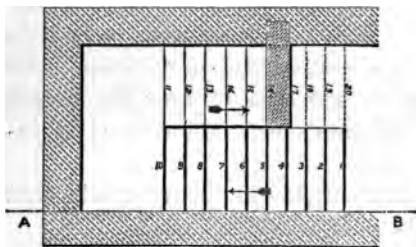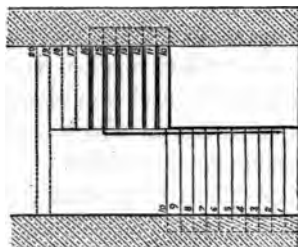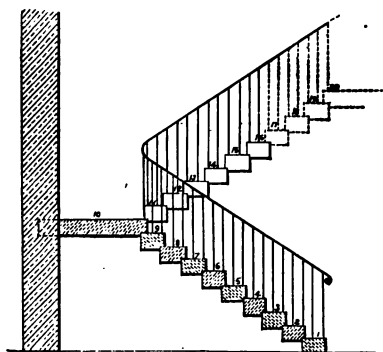Fig. 508. *Plan.*Fig. 510. *Elevation.*

Sectional Elevation on A B.

Fig. 509.

of the staircase, while the outer ends of one flight are in the same plane as those of the other flight.

Fig. 508 is a sectional plan (looking downwards) on the sixteenth step. Fig. 509 is a sectional elevation on the line A B, through the lower flight; and Fig. 510 is a front elevation of the stairs, showing the front of the lower flight and the back of the upper flight of steps.

¹ See Note, page 324.

The stairs in Fig. 508 are shown with a half-space landing; but if the same height has to be gained when there is a smaller space available for the staircase, winders may be added so as to have only a quarter-space landing, similar to that in Fig. 533, or the whole space may be occupied by winders as in Fig. 511.

Winders would be necessary also in case a greater height had to be gained, without increasing the area of the staircase.

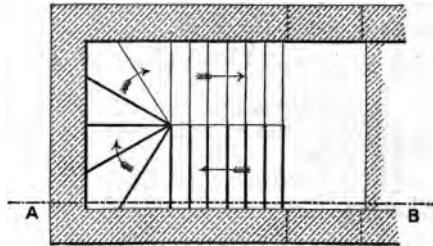


Fig. 511. *Plan.*

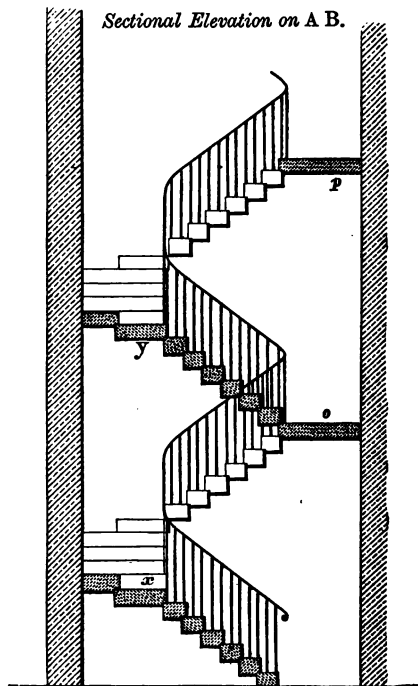



Fig. 512.

Figs. 511, 512 show a dog-legged stair with winders com-


municating between three floors, These figures make clear the importance of having a sufficient headway between the flights running in the same direction (see *x y*), and also between the landings (see *o p*).

A GEOMETRICAL STAIR in stone consists entirely of hanging steps, the outer ends of which are built into the walls of the staircase, while the inner ends abut upon the well hole of the stair, having no support but that derived from their successive connection, until they reach the floor.


Figs. 513, 514, 515 give illustrations of a geometrical stair

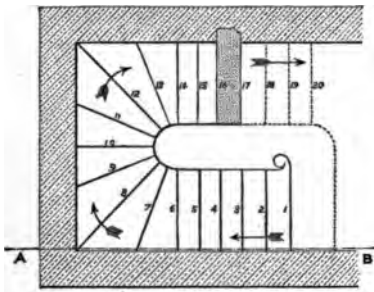

Plan.
Fig. 513.

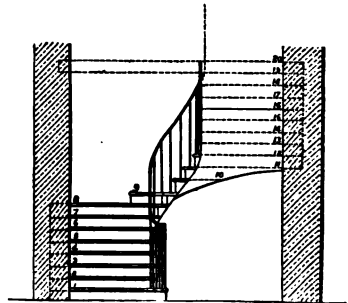

Elevation.
Fig. 515.

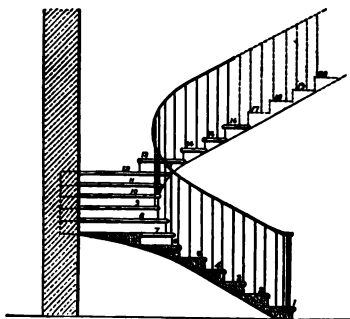

Sectional Elevation on A B.
Fig. 514.

in stone, with a narrow well hole, having a semicircular end. Fig. 513 is a sectional plan made through the sixteenth step looking downwards; Fig. 514 a vertical section through the lower flight, and elevation of the upper flight beyond; and Fig. 515 a front elevation of the staircase, showing the faces of the risers of steps of lower flight, and the backs of the steps of the upper flight.

The stair is constructed with spandril steps, and without a landing, except at the floors, the space being entirely filled with winders, the improved form of which, as compared with the triangular winders of the dog-legged stair, will be evident upon comparing Fig. 513 with Fig. 511.

Fig. 516 shows a geometrical stair adapted for a large and wide staircase.

This stair consists of three flights and two quarter-space landings, besides a large and wide landing (to which the stairs lead) on the level of the floor above.

The position and direction of the steps will be easily under-

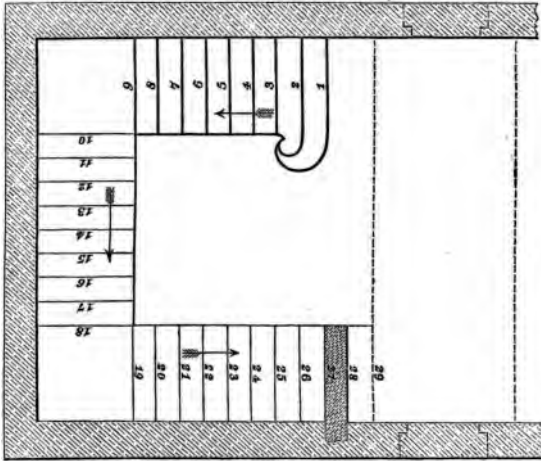


Fig. 516.

stood from the plan, without elevations, sections, or further explanation.

In some cases the inner corners of the quarter-space landings abutting on the well hole are cut off and made in plan of a quadrant shape, by which the curve of the handrail is improved at these points.

Such a stair takes up a great deal of room, and is only suitable for large and imposing buildings, when sufficient space can be afforded for the staircase.

In Fig. 516 a landing of the whole width of the staircase is shown at the level of the 29th step. Of course, if the arrangements required it, a quarter space landing at this point would be sufficient; from it would lead a flight parallel to steps 10 to 18, and running in the opposite direction.

CIRCULAR STAIRS in stone may be composed either of steps supported at both ends, or of hanging steps converging toward a well hole; in either case, of course, all the steps are winders.

CIRCULAR NEWEL STAIRS consist of square steps supported by the wall at one end, and at the other end by a "newel" or column of masonry, toward which they converge in the centre.

This newel may be either hollow or solid.

Fig. 517 shows an example of a circular stair with a hollow newel, consisting of a brick cylindrical shaft into which the inner


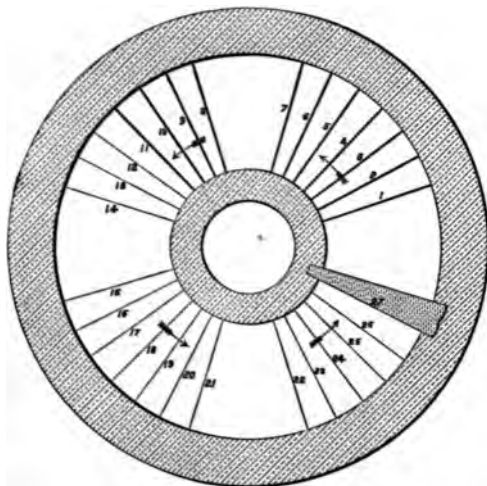


Fig. 517.

ends of the steps are pinned, the other ends being built into the outer wall of the staircase.


In some cases a thin wall is built round the centre newel, and also round the inside of the external wall, to support the ends of the steps, instead of building them in.

A very common construction, especially for circular staircases of small diameter such as those in turrets, is shown in Figs. 518, 519.

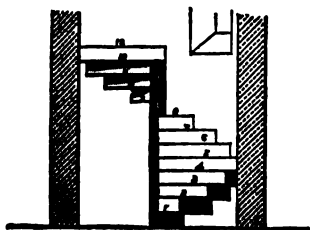

Section on A B.

Fig. 518.

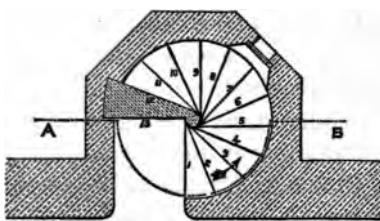

Sectional Plan.


Fig. 519.

Each step is worked in the form shown by the horizontal

section of No. 12, with a circular portion on the inner end, having a diameter equal to that of the intended newel.


As the steps are built up the outer ends are secured in the wall of the staircase, while the circular portions at the inner extremity, being laid one upon another, give the step the required support, and form the newel of the stair.

CIRCULAR GEOMETRICAL STAIRS consist entirely of hanging winders built into the outer wall of the staircase, and converging toward an open circular well hole down the centre.

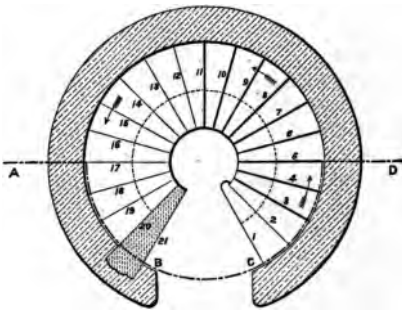

Plan.

Fig. 520.

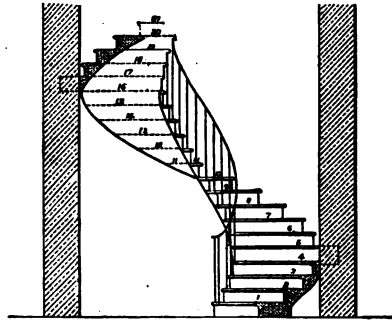

Sectional Elevation on A B C D.

Fig. 521.

Figs. 520, 521 show illustrations of such a stair. Fig. 520 being a sectional plan on No. 20 step, and Fig. 521 a sectional elevation.

The steps are of spandril section, except No. 1, which is necessarily square or it would have a very narrow base to rest upon.

WOODEN STAIRS.

Wooden Steps are lighter than those of stone, and do not require such strong supports. They are also more elastic, and do not become so smooth under wear as to be dangerous.

On the other hand, they are subject to decay, they may be more rapidly destroyed in case of a fire, and may thus cut off all exit from the upper floors.

Letters of reference in the figures connected with wooden stairs :—

| | | | |
|------------------------------------|-----------|------------------------------------|-----------|
| Apron lining | <i>al</i> | Laths | <i>l</i> |
| Balusters | <i>B</i> | Outer strings | <i>OS</i> |
| Bearers | <i>b</i> | Pitching piece | <i>P</i> |
| Blocks | <i>bl</i> | Plaster | <i>pl</i> |
| Brackets | <i>Br</i> | Riser | <i>r</i> |
| Bridging joists of floor | <i>bj</i> | Rough brackets | <i>rb</i> |
| Cross bearers | <i>cb</i> | Rough strings | <i>RS</i> |
| Fillets | <i>fi</i> | Soffit joists | <i>sj</i> |
| Furrings | <i>f</i> | Tread | <i>t</i> |
| Glued block | <i>gb</i> | Trimmer | <i>T</i> |
| Handrail | <i>HR</i> | Trimming joists of floor | <i>TJ</i> |
| Joists of landing | <i>j</i> | Wall strings | <i>WS</i> |

N.B.—The handrails are shown in the elevations in order to make the direction of the steps more plainly evident; but they are omitted in the plans for fear of rendering them obscure. The skirtings are also omitted from the plans. The plaster of the wall is also omitted from both plans and sections of the figures on a small scale.

Parts of Wooden Stairs.—STRINGS¹ are thick boards or pieces of timber placed at an inclination to support the steps of a wooden stair.

Cut Strings.—Wooden stairs of the commonest description are thus constructed.

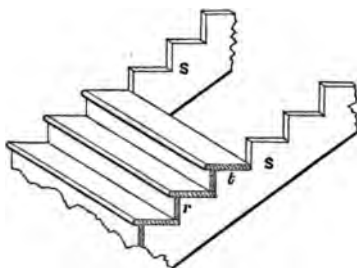


Fig. 522.

Two "*strings*," *SS*, are fixed at the slope determined upon for the stairs; in these rectangular notches are cut, each equal in depth to the rise, and in width nearly equal to the tread of a step: upon these boards are nailed, forming the treads, *t*, and risers, *r*.

Cut and Mitred Strings.—In stairs of a better description the

¹ *Sc. Stringers.*

outer strings are cut as above described; but the ends of the risers, instead of coming right through and showing on the outer surface of the string, are mitred against the vertical part of the notch in the string, as shown at *aa* in Fig. 524, the other end of the step being, as before, housed into a groove formed in the wall string.

The outer extremity of the tread is also cut and mitred, as shown in Fig. 524, to receive a return moulding, forming the nosing of the end of the step.

BB show the mortises for the balusters, which are frequently dovetailed into the treads.

Housed Strings.—In many common staircases the strings, instead of being notched out to receive the steps, are left with their upper surfaces parallel to the lower, and grooves are cut into their inner sides to receive the ends of the treads and risers; these grooves are called "*housings*," and the steps are said to be "*housed*" into the strings.

Fig. 526 is an elevation of the inner side of a housed string, showing the sinkings or housings formed to receive the steps.

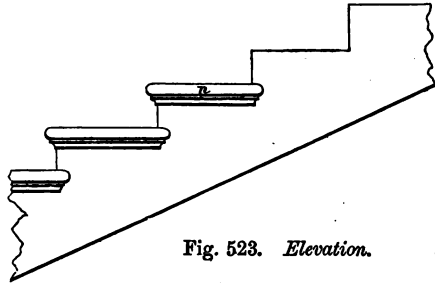


Fig. 523. Elevation.

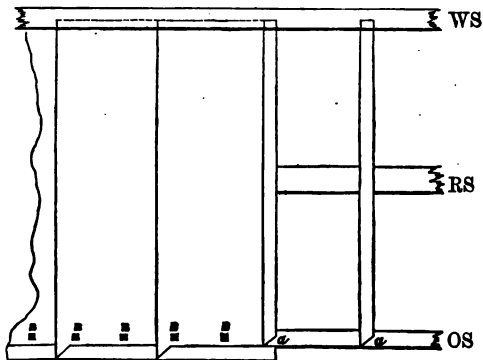


Fig. 524. Plan.

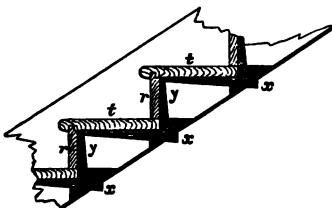


Fig. 525.

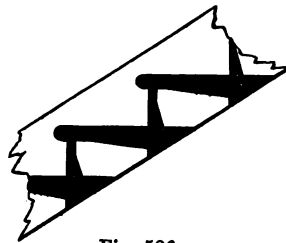


Fig. 526.

Fig. 525 is a sectional elevation through the steps, showing the

treads, t , and the risers, r , in position. These are secured by means of wedges, x y , which should be well covered with glue before insertion.

The treads are sometimes formed with two tenons at each end, which fit into mortises cut through the string.

Open Strings are those, such as the cut strings, or cut and mitred strings, described above, which are cut so as to show the outline of the steps.

Close Strings have their upper and lower surfaces parallel, the steps being housed into them as above described (see Fig. 525).

Wreathed String is one formed in a continuous sweep round the well hole of a geometrical stair.

The Wall String is the string up against the wall, and plugged to it. WS, Fig. 532.

The Outer String is the string at the end of the steps farthest from the wall. OS, Fig. 532.

Rough Strings.—With stout treads and risers the two strings above mentioned are sufficient for stairs of 3 or 4 feet in width.

For wider stairs, however, the steps require additional support, and this is afforded by means of one or more "rough strings," or "*carriages*," fixed in the interval between the wall string and outer string, already described.

Two rough strings are shown in Fig. 529, for the sake of illustration, but one only would be necessary in so narrow a staircase; one rough string is shown in Fig. 531.

The scantling for rough strings may be about the same as those for bridging floor-joists of the same length (see p. 101, Part I.)

The rough strings sometimes have small notches on their upper surfaces to receive the back edge of the tread, and their ends are attached to trimming joists TJ (see Figs. 528, etc.), or into pitching pieces P (Fig. 535), or trimmers T (Fig. 529), where trimming joists are not available.

WOODEN STEPS are formed of boards, as shown in Fig. 527.

The risers are united to the treads by joints, which may be grooved and tongued, as in steps 5, 6—feathered as in step 4—or rabbeted, as No. 3; in every case the joint is glued. The riser often has only its upper end tongued, the lower butting upon the tread below. This is not so good a construction as that shown at 3. A common practice is to house the lower edge of the riser into the tread below, as at x . The tread is sometimes tongued into the riser, but that is not a good construction.

The joint between the tread and riser is strengthened by small

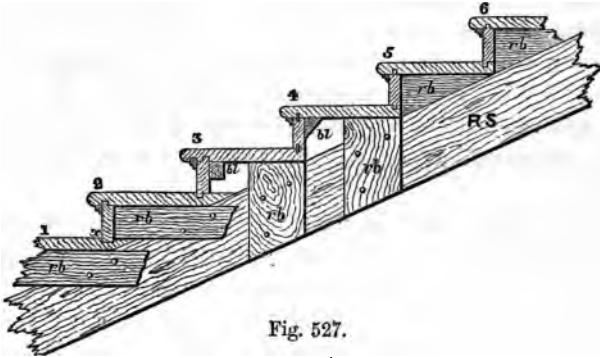


Fig. 527.

blocks glued into the inner angle, as shown in steps 3 and 4; these may be either rectangular or triangular in section.

The inner ends of the treads rest upon the rough strings, RS (if any), and they are frequently further supported by rough brackets, *rb*, attached to the rough strings or carriages.

These brackets may be pieces nailed alongside the string, as in steps 1, 2, 3, 4, or triangular pieces fixed to its upper surface, as in 5 and 6.

Occasionally vertical brackets are made of a width equal to that of the tread of the step, as at *xy* in Fig. 530.

In some cases a board is notched out like a cut string and nailed alongside the rough string, to answer instead of the rough brackets (see Fig. 534).

The treads project over the risers and are finished with a rounded or a moulded nosing, the projection of the nosing being generally equal to the thickness of the tread. When a moulded nosing is adopted with an open string, the moulding is returned at the end of the step, being mitred at the angle, as shown at Fig. 524.

The mouldings are generally planted on under the rounded nosing of the tread.

The treads should be of oak or other hard wood, and may be $1\frac{1}{8}$ inch thick for steps 4 feet long—the thickness being increased by $\frac{1}{8}$ inch for every 6 inches added to the length of the step.

In very common stairs the risers are sometimes dispensed with.

In some cases, especially in geometrical stairs of a high class,

the upper edges of the risers are dovetailed to the treads, and the back of the treads screwed up to the lower edge of the risers.

Different Forms of Wooden Stairs.—STRAIGHT STAIRS.—In very narrow, stairs of ordinary construction, with a wall on one side only, the following is the arrangement usually adopted.

Two grooved strings, OS and WS, Fig. 529, are placed at the required slope, and at a distance apart equal to the length of the steps.

The wall string, WS, is fixed by being plugged to the wall. The ends of the treads and risers are keyed into the housings or grooves worked in the inner and outer strings.

The upper and lower ends of these strings are framed into newel posts, and so are the outer ends of the first and last risers of each flight. When the flight of steps extends uninterruptedly from the lower to the upper floor, these newels are attached to trimming-joists, TJ, provided in the floors to receive them.

When the flight is broken by a landing, additional newel posts are provided on each side of the landing, and extending the full depth between the floors, as in Fig. 528.

To these are secured the trimmers, T, fixed and wedged into the wall, and projecting from it to carry the landing.

As already mentioned, the two strings are sufficient for stairs with stout treads and risers up to a width of 3 or 4 feet.

For wider stairs, however, additional support to the steps is necessary, and this is afforded by one or more rough strings (RS, Fig. 529) or carriages placed in the interval between the strings already described.

The ends of these rough strings are framed or housed into the trimming-joists provided to receive them in the floors, between which the stairs extend.


When there is a landing the upper ends of the rough strings are fixed to the special trimmers which carry the landing.

The treads are further supported by rough brackets *rb*, Fig. 528, secured to the rough strings.


The landing itself is formed like a floor, of boards laid upon joists framed in between the trimmers just mentioned.

When there is a wall on each side of the steps, of course the newels are not required.

When the floor is continued under the lowest flight of a stair, the space between the soffit of the stairs and the floor is called the *spandril*.

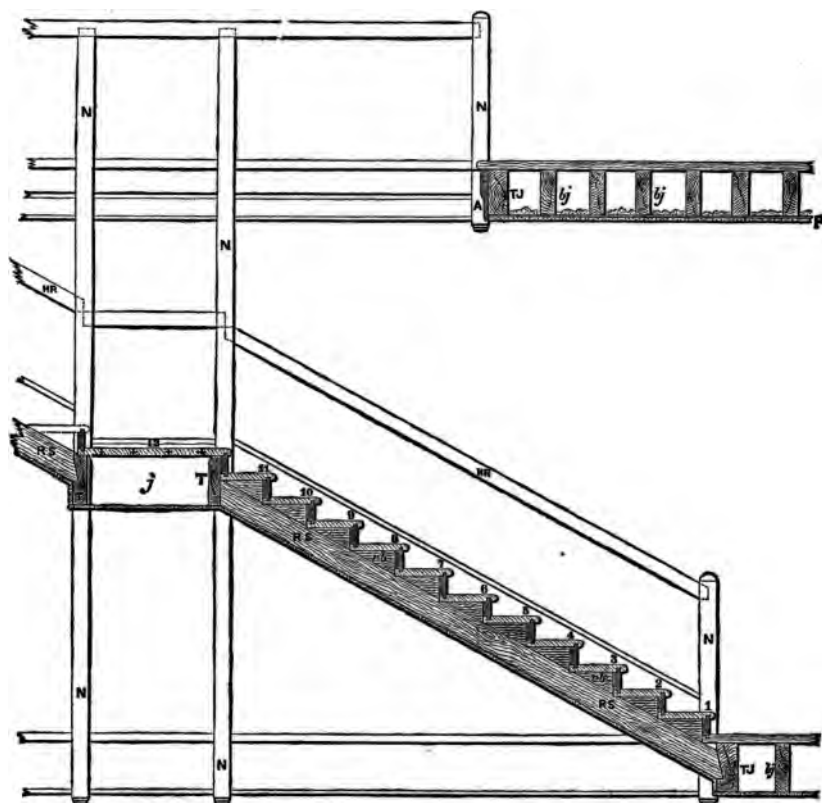

Section on A B.
Fig. 528.

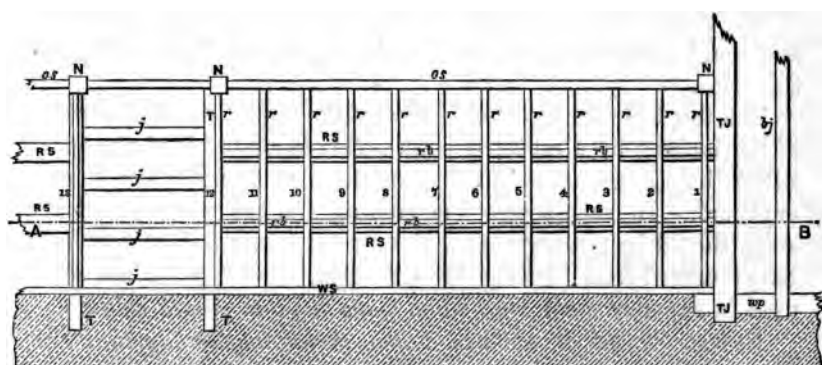

Plan (with treads and boarding removed).
Fig. 529.

This space is often utilised as a cupboard by enclosing it with a panelled front (containing a door, and sometimes a window), known as the *spandril framing*.

DOG-LEGGED STAIRS.—Fig. 531 is the plan of a dog-legged stair with a half-space landing. The treads of the steps in the lower flight are omitted, so as to show the strings and risers. A portion of the steps of the upper flight is broken away in order to expose to view the construction of the flight below.

In this stair the wall string, WS, and outer string board, OS, are constructed as before, with intermediate rough strings if necessary.

The outer strings are tenoned into the newels, and so are the first and last risers of the flight.

The outer string of the upper flight and that of the lower flight are in the same vertical plane, so that if the plan of the upper flight were complete the outer string of the upper flight would overlap and hide the outer string of the lower flight.

In the same way, if the number of steps in each flight were the same, the newel, N_u, of the upper flight would in plan exactly cover the newel, N, of the lower flight, being immediately over it.

The handrail in the plan is omitted as before.



Fig. 530 gives the elevation of the upper flight, and the section of the lower flight of the stairs shown in Fig. 531; but no portion of the elevation is broken away, and the treads of the lower flight are shown in section, though omitted from the plan.

The newels are fixed to trimming joists TJ, provided in the floors, and to trimmers T across the staircase at the landing.

The rough strings, RS, are framed in between these trimmers, and rough brackets, *rb rb*, are nailed alongside of them to support the steps.


The tread of the top step is frequently united to the boarding of the landing by a rabbeted joint. This is advisable if the space below the steps, known as the spandril, is to be made use of as a cupboard. In such a case the landing and the parts of all the steps should be put together with tongued joints, so that dust may be prevented from getting through them. Such joints are often used in superior work even when there is no cupboard below.

NEWEL STAIRS is another name given to dog-legged stairs, because the newels form a conspicuous part of the structure.

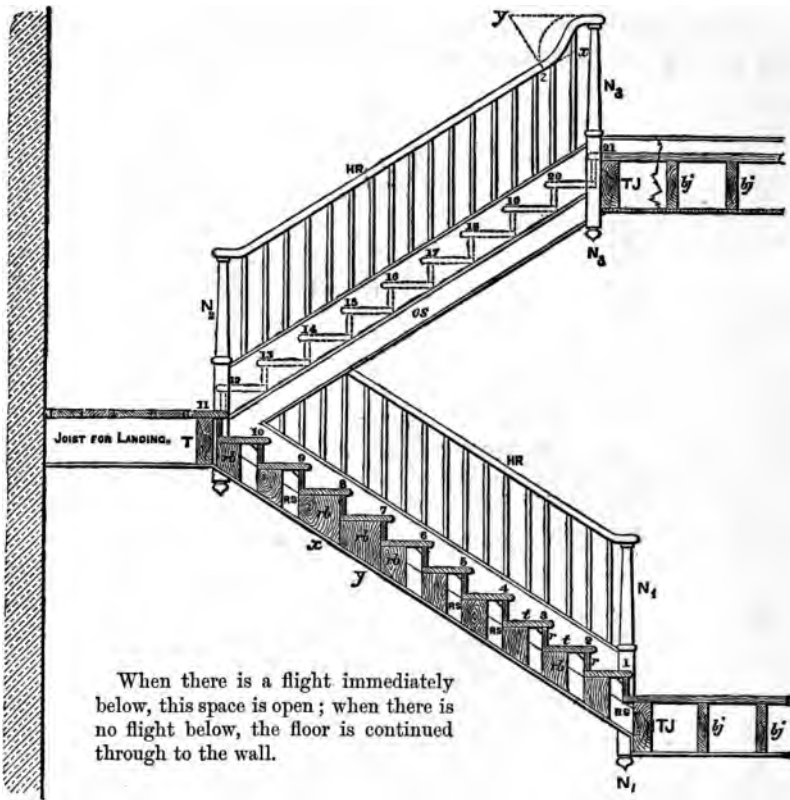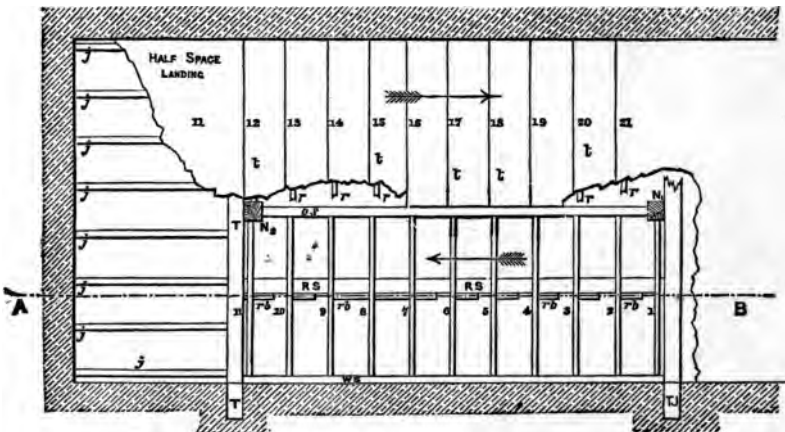Fig. 530. *Sectional Elevation on A B.*


Plan.
Fig. 531.

OPEN NEWEL STAIRS have newels arranged round an opening or well hole in the centre between the flights of steps.

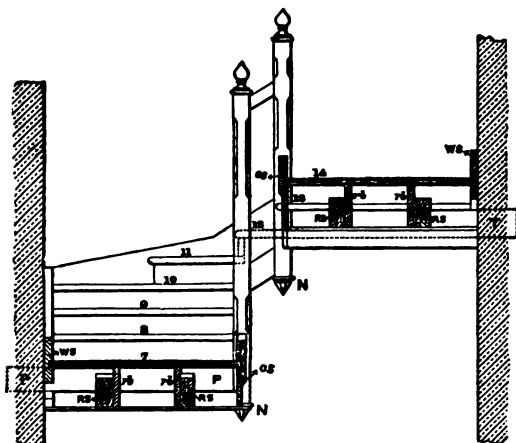

Sectional Elevation on A B.

Fig. 532.

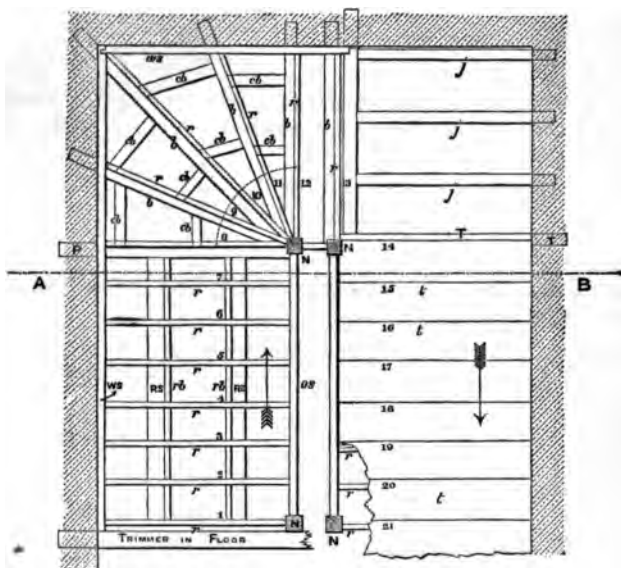

Plan.

Fig. 533.

Fig. 533 shows the plan of such a stair, with a quarter-space landing.

The boarding of the landing and the treads of the lower flight are omitted on plan, in order to show the construction below.

Fig. 532 is a sectional elevation on A B. The treads of the lower flight are shown in elevation though omitted from plan.

The construction of the straight portion of the stairs is similar to what has already been described. The winding steps are constructed as follows :—

Bearers, *bb*, carrying the risers, *rr*, are framed into the newels, their outer ends resting in the wall of the staircase. Between them are fixed cross bearers, *cb*. These would not be necessary in a narrow staircase, but are inserted in Fig. 533 for the sake of illustration.

In this example four winders are introduced to show the defects of such an arrangement as pointed out at page 351.

In Figs. 533, 535 the skirting is omitted in that portion of the plan where the treads are shown.

GEOMETRICAL STAIRS have no newel posts. The flights are arranged around a well hole in the centre—sometimes called an “*open newel*”—and each step is secured by having one end housed into the wall string, the other end resting upon the outer string, but partly deriving support from the step below it.

The handrail is uninterrupted in its course from top to bottom.

The treads for geometrical stairs should be substantial.

The string may be greatly strengthened by a flat iron bar screwed to its under side.

Figs. 534, 535 give a plan and sectional elevation of a geometrical stair with winders.

The portion of the staircase shown in Fig. 535 consists of six fliers, then eight winders, then seven more fliers, making 22 steps, leading to a half-space landing on the floor above; from this the stairs again rise, commencing with the step marked 23, the remainder being broken off to show the first flight.

The treads of the lower flight and winders are also omitted, in order to show the supports below.

The steps are formed in the way described at page 337, with (in this case) feather-tongued joints between the treads and risers.


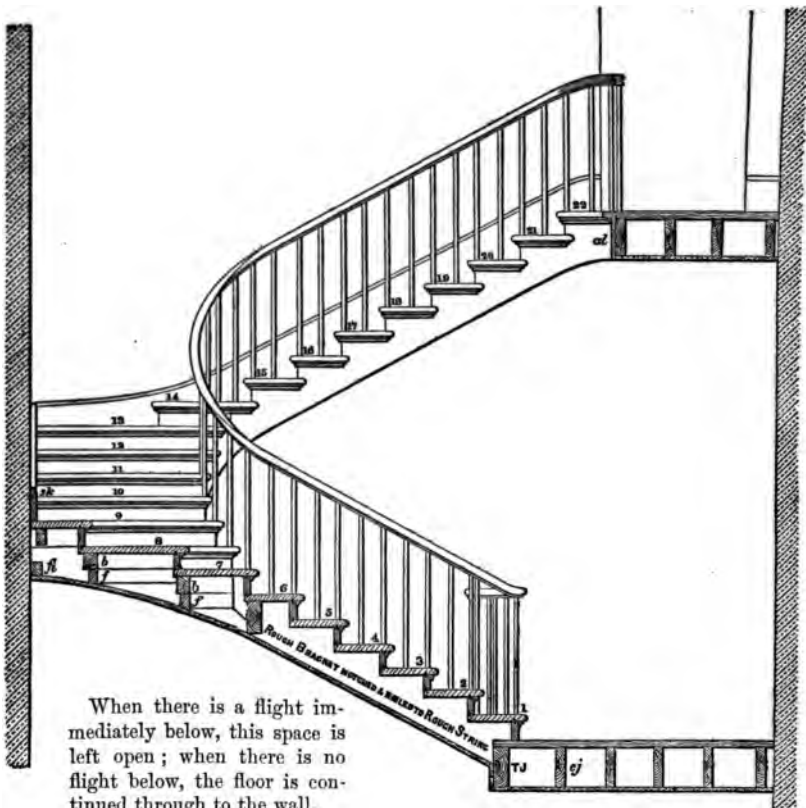


Fig. 534. *Sectional Elevation on A B C D.*

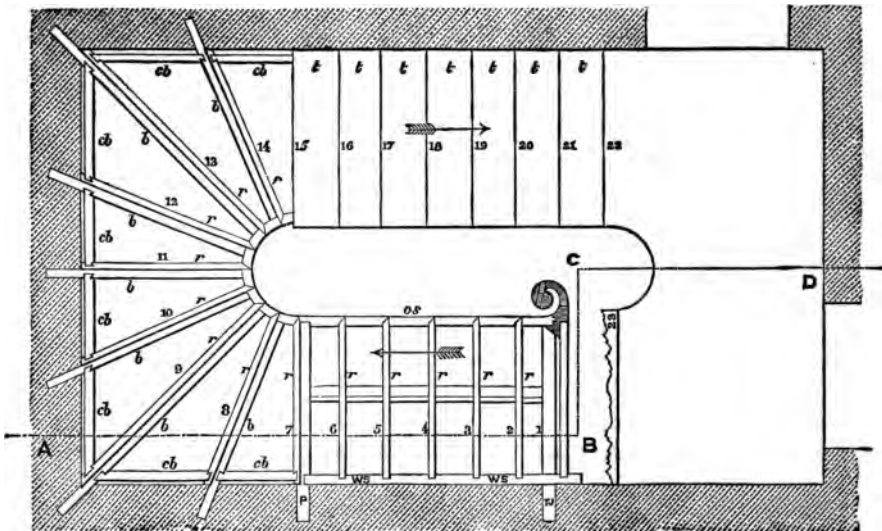

The handrail has, as before, been omitted from the plan for the sake of clearness.

The treads and risers are housed into the wall string, the outer ends resting upon a cut and mitred string, and intermediate support is afforded by a rough string, to the side of which is nailed a rough notched bracket, cut to fit the under side of the steps, and to serve instead of brackets.

The strings themselves are framed in between the trimming joists provided in the floors, and *pitching pieces*, PP, projecting from the wall at the level of the first and last winders; one of these latter is shown at PP, but the other is covered by the fifteenth step.

The trimming joist just below No. 1 step extends of course right across the staircase—but it is in the plan (Fig. 535) supposed to be broken off just under the outer string in order to avoid confusing the plan of the curtail step.

The winders are supported throughout their length by bearers, *bb*, the inner ends of which are built and wedged into the wall of the staircase, the outer ends being tenoned into the circular or wreathed portion of the outer string.

The risers are nailed to these bearers, and the widest ends of the steps are supported by cross bearers dovetailed in between the risers and the longitudinal bearers above mentioned.

The lowest step of this staircase is formed with a curtailed end which, when the tread is on, in form somewhat resembles that shown in the stone staircase, Fig. 516.

In this illustration, however, the tread of the curtail step has been omitted in order to show the construction of the riser below, which is built up in a curved form, terminating in a circular block, which forms the base to support the last baluster.

The inner side of the staircase is finished and embellished by a skirting notched on the under side to fit the steps, and secured to narrow grounds plugged to the wall.

In some cases two cross bearers are provided for each winder, one being framed in between the longitudinal bearers in the centre as well as that at the wide end, as in Fig. 533.

If very thick treads are used, the bearers and rough strings may be omitted altogether, the steps being wedged into the wall and projecting without further support till they reach the outer string.

Fig. 536 is a portion of a stair similar to that in Fig. 534, but with different descriptions of joints between the treads and

risers, enlarged in order to show the plaster and other details,

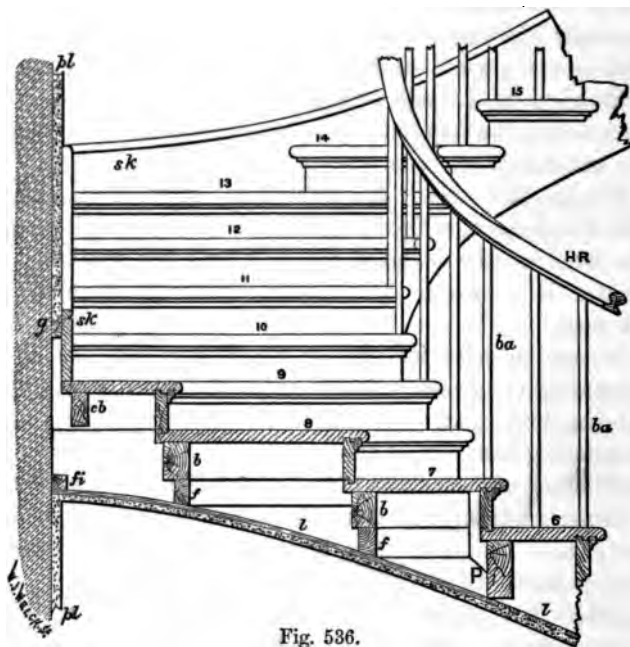


Fig. 536.

which could not be made clear upon a very small scale.

Solid steps, like those of stone, are sometimes formed in wood for geometrical staircases, and make strong but expensive work.

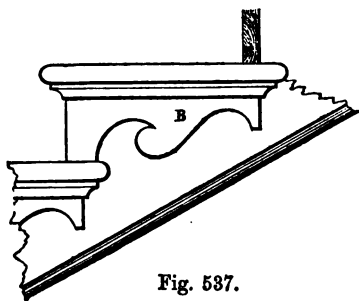


Fig. 537.

A BRACKETED STAIR is one which has ornamental brackets, B, (Fig. 537) fixed on to the end of each step above the outer string and mitred to the outer end of the riser.

They are put on merely for the sake of appearance, and play no part in supporting the steps.

A *Curtail Step* is one of which the end is projected or curved (as shown in Fig. 513) to receive the newel balusters that support the scroll terminating the handrail.

It is not unusual, especially in stone stairs, to make the last two steps of curtail form, as shown in Fig. 516; in some cases three or more steps are curtailed.

When the end of the step is circular it is called a *round-ended step*.

Carriages is a general name applied to the rough timbers, such as strings, etc., used for supporting a stair.

To avoid framing in bearers for every winding step, two or three carriages are sometimes fixed, as shown in Fig. 540, across the staircase, parallel to the fliers; to these carriages are attached rough brackets for support of the winders, wherever the latter happen to cross them.

HANDRAILING.—The height of the handrail should not be uniform throughout, but varied slightly within the limits of a few inches, so as to secure a graceful line at the changes of inclination.

The handrail should be higher on the landing, where the person using it is erect, than on the steps, where he will be inclining either forward or backward, according as he is ascending or descending the stairs.

[The height from the treads (at the nosings) to the upper surface of the handrail should be 2 feet 7½ inches; to this there should be added at the landings the height of half a riser.—*Newland.*]

For winding stairs regard should be had, in adjusting the height of the rail, to the position of the person using it—who may be thrown farther from it, not only by the narrowness of the treads, but by the oblique position of the risers.

The handrail should not be raised over winders, especially those of a steep pitch.

Nicholson recommends that the upper surface of the handrail should have a diameter of 2¼ inches; but the sizes vary greatly—3 or 3½ inches by 2 or 2½ deep being common dimensions, while, for very important staircases, the handrail may be 6 × 4 inches, or even larger.

The different sections of handrails are distinguished by peculiar names, according to their shape, such as “Mopstick handrail,” a nearly circular form; “Toad’s back,” which has a flattish, curved upper surface, etc. etc.

The handrail is generally secured to the balusters by means of a flat bar of wrought iron about ¼-inch thick, and in width equal to that of the top of the baluster.



Fig. 538.

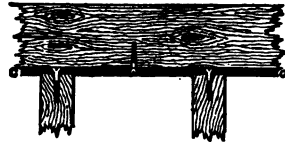


Fig. 539.

This bar, C in Figs. 538, 539, is called a “core,” and it is screwed down upon the heads of the balusters, and up to the under side of the handrail, as shown in the figure, which represents a piece of the horizontal portion of the handrail to a landing.

The balusters supporting the inclined handrail over the steps have their tops splayed to fit the lower surface of the rail. In common work the balusters are nailed to the handrail direct, without the intervention of a core.

A Wreathed Handrail is one which ascends in a continuous curve round a circular well hole, as in Fig. 521.

A Ramp is the concave sudden rise made by a handrail where it is stopped, as against the newel in Fig. 530.

A Knee is the convex part of the sudden rise in a handrail, as in Fig. 530.

A Swan Neck is a ramp and knee combined, being concave in one part and convex in another; see Fig. 530.

The method of setting out the handrailing for different forms of stairs is quite a science in itself, and is fully treated upon by Mr. Mayer in Newland's *Carpenter's and Joiner's Assistant*, whence many of the above hints have been taken, and to which the student must be referred if he should wish to pursue the subject farther.

BALUSTERS are intended to support the handrail and to prevent any one from falling over the ends of the steps.

They should not be more than about 5 inches apart.

They are sometimes vertical wooden bars, square, turned, or carved, according to the class of work.

An iron baluster of the same pattern as the wooden ones should be introduced at intervals (generally about 1 in every 10) to strengthen the whole.

Iron balusters are frequently used throughout.

Wooden balusters should be dovetailed into the treads of the steps, and secured to the handrail as above described.

The balusters are sometimes fixed to the outer string, being bent or knoed so as to clear the ends of the steps, in order to give as much width as possible to the stairs.

Generally there are two balusters fixed on the end of each step—one flush, or as nearly as possible flush, with the face of the riser, the other midway between the risers.

On each of the narrow ends of winders one baluster only is required.

General Remarks on planning Stairs.—Before planning or laying out a stair, the following particulars are required to be known, and are generally determined by circumstances.

1. The height of the stairs, that is the vertical distance between the surfaces of the floors to be connected by the stair.

2. The position of the first and last risers. These must be conveniently arranged in connection with the approaches, doorways, etc., leading to and from the stairs.

3. The width and length of the staircase available.

4. The position and dimensions of doors, windows, etc., surrounding the staircase, and clear of which the steps must be kept.

These particulars being known, the description of stairs to be adopted can be determined upon, the choice being further influenced by the class of building in which the stairs are to be erected.


Thus, in small common houses or cottages with a very narrow space for the staircase, a straight stair may be necessary. In a slightly better class of house there may be just sufficient width for alternating flights, and a dog-legged stair will be suitable. In buildings on a larger scale, with spacious staircases, a geometrical or open newel stair may be constructed, the well hole increasing in width with that of the staircase.

Circular geometrical stairs with solid or open newels are required in towers, and stairs such as those in Fig. 519 are necessarily made use of in a turret.

The description of stair having been decided upon, no general rule can be laid down for the arrangement of the steps. Some ingenuity and contrivance will be required in order to proportion and arrange them so as to fulfil all the conditions of a good stair fitted to the peculiarities of the position.

Such a stair will consist of flights running alternately in opposite directions, and each containing not more than 10 or 12 steps. All sudden alterations in the length of flights, especially single steps introduced here and there, should be avoided. The landings between the flights should be of a length and width at least equal to the length of the steps. Winders should be avoided as much as possible, and the steps should have the rise and tread carefully proportioned to one another, as directed at page 323. Care must also be taken that when one flight passes under another, or below a landing, there should be plenty of headway; and also that the steps are clear of all doors and windows in the staircase. The stairs should be well lighted throughout their length, more especially at the approaches.

The light may be furnished by windows in the sides of the staircase above the landings, or by a lantern at the top, the latter giving the best and most equally diffused light.



Laying out the plan of Stairs.—*Straight Stairs.*—The planning of a straight stair is a very simple matter.

The height of the storey being known, a convenient height for the risers, appropriate to the class of staircase (see page 323), is assumed *pro tem*.

The total height to be gained, divided by this dimension, gives the number of risers, the number of treads will be one less (see page 328); and the proper width for each tread (in proportion to the height of the riser) will be found in the table, page 323. If there is room in the staircase for the required number of treads of this width, with the necessary landings, well and good; if not, a steeper rise must be assumed, requiring narrower treads and fewer of them, for which there will be room.

Thus, in the staircase, Figs. 506, 507, the height to be gained is 11 feet 8 inches: assume 7 inches for height of risers, $\frac{140 \text{ inches}}{7 \text{ inches}} = \text{number of risers} = 20$. The width of the tread proportionate to such a riser (see page 323) is 9 inches, the number of treads 19. The total length of staircase required for the treads will be $19 \times 9 \text{ inches} = 14 \text{ feet } 3 \text{ inches}$; thus, without a landing, a staircase 14 feet 3 inches long will be sufficient, but with a landing 4 feet wide, substituted for one of the treads ($14 \text{ feet } 3 \text{ inches} + 4 \text{ feet} - 9 \text{ inches}$) = 17 feet 6 inches, will be required for the length of the staircase.

The risers must be equal throughout the stairs, none higher or lower than the rest should be introduced to make up an awkward dimension in the vertical distance. Thus, in the case just given, if the height to be gained had been 11 feet 6 inches, the number of 7-inch risers required would have been $\frac{138}{7} = 19\frac{5}{7}$: it would not do to have nineteen 7-inch risers, and one 5-inch riser; but 20 risers would be used, each $\frac{138}{20} = 6\frac{9}{10}$ inches in height, thus equally dividing the vertical distance to be gained.

Laying out Dog-legged Stair.—The number of steps to be introduced is ascertained in the same way as for a straight stair. Thus, in the Fig. 509, a height of 10 feet 10 inches has to be gained, there are 20 risers each $6\frac{1}{2}$ inches high, and the steps have a proportional breadth of 10 inches. The stair is in two flights, each containing 10 steps, and separated by a half-space landing.

The length of staircase required for the width of treads is $9 \times 10 \text{ inches} = 7 \text{ feet } 6 \text{ inches}$; and for the landing (equal to width of stairs) 3 feet 6 inches, or 11 feet altogether.

When, however, the area of the staircase is more limited in proportion to the height to be gained, the landing must be made smaller or done away with, and winders introduced; the steps also may be made steeper, so that fewer of them are required, and they take up less room, as the proportionate tread for each is less.

Suppose, for example, that the staircase has a length of only 8 feet, and that the height to be gained between two floors is rather more than before, viz. 11 feet 1 inch (see Fig. 512).

In this case the landing shown in Fig. 508 has to be sacrificed and winders introduced, while the steps are made steeper, so that 19 only are required; the height of each of these is $\frac{13.3}{19}$ inches = 7 inches,¹ the corresponding tread being 9 inches, the total length taken up by the steps being 6×9 inches = 4 feet 6 inches for the fliers—in addition to 3 feet 6 inches (the space containing winders)—altogether 8 feet.

Winders.—In laying out winders it should be remembered that when a person on the stairs is using the handrail he places his foot on the steps about 18 inches in from the balusters; each winder should, therefore, at a distance of 18 inches in from the handrail, have a width equal to that of the treads of the fliers,² otherwise (the fliers being properly proportioned) the winders will at this point be too narrow in proportion to their height.

This cannot always be accomplished in dog-legged stairs; for instance, if it were absolutely necessary to introduce three winders into a quarter-space of the landing of the stair shown in Fig. 508, these could only have a width of $9\frac{3}{4}$ inches at 18 inches in from the handrail, whereas the fliers have a width of 10 inches.

For a similar reason *four* winders should be avoided as much as possible in dog-legged stairs. It will be seen in Fig. 533 that the width of treads at 18 inches from the newel can never be more than 7 inches. Thus the treads of the winders must be narrower than those of the fliers, and therefore inconvenient.

Four winders are, however, very frequently introduced as shown, for they are often absolutely necessary in order to gain the height required within the space available.

¹ If the height to be gained were the same as in Fig. 509, viz. 10 feet 10 inches, the rise for the steps would be $\frac{13.3}{19} = 6\frac{1}{4}$ inches.

² If the staircase be narrower than 3 feet, the width of treads should, of course, be laid off along the centre of the winders. It is sometimes considered better to have three or even five winders than four; because when there are four there is a riser of needless length running into the angle of the staircase (see Fig. 533).

As it is difficult to follow these rules under all circumstances, they are often infringed, and in common staircases it is considered quite sufficient if there is a proper width of tread in the centre of the length of the winders.

"Balanced" or "Dancing" Steps.—In consequence of the inner ends of winders having such narrow treads, while their height is the same as that of the other steps, the inclination of the line of nosings of the winders is much steeper than that of the fliers—which gives a sudden and ungraceful change to the inclination of the handrail above them.

To avoid this, and in order to gain some additional width at the inner ends of the winders, they are in some cases made to "dance,"—that is, they are drawn so as not to converge to the same point, but so that each is directed upon a different point—found in a manner too intricate to be entered upon in this Course.

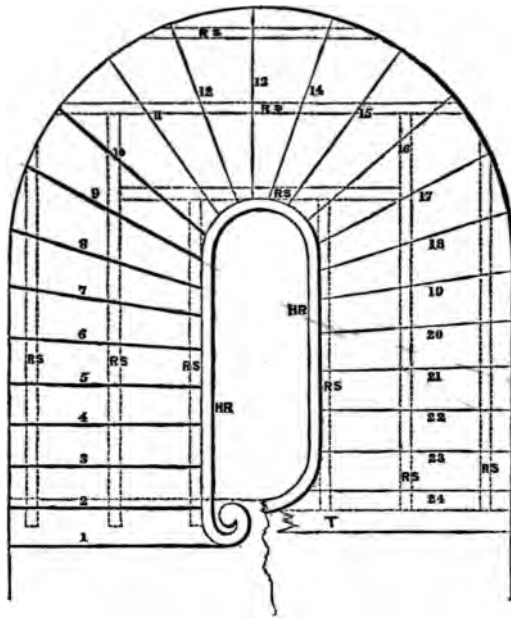


Fig. 540.

In Fig. 540 the first four and the last four steps are parallel—but the remainder are "balanced" or "dance," as above described.

Geometrical Stairs.—In laying out geometrical stairs the steps are arranged on the same principles as those above described.

The well hole in the centre is first laid down and the steps arranged round it.

In circular stairs with an open well hole, as in Fig. 520, the handrail being on the inside, the width of tread proportioned to the rise of steps should be set off along the dotted line, 18 inches in from the handrail, for the reasons above mentioned.

In stairs with a newel, such as that in Fig. 517, when the handrail, if any, might be on the outside, it will be sufficient if the steps have the proper width of tread in the centre of their length.

When laying out stairs practically on the building itself, the height to be gained is carefully marked out upon a "*story rod*," on which are marked divisions corresponding in number and height to the risers: a similar rod is marked so as to show the treads; and from these rods the steps should be carefully marked upon the walls of the staircase.

A rod should also be prepared having marked upon it the exact width of the staircase, the length of steps, the position and size of newels, and also the size of the wall and outer strings, showing the thickness and the depth of the housings.

CHAPTER XX.

RIVETING.¹

RIVETS are small fastenings made of the best wrought iron either by hand or by machinery, and before they are fixed consist each (see Fig. 541) of a small spindle or shank surmounted by a head, which may be pan-shaped as in Fig. 543, or formed like a cup or button as in Fig. 542.



The tail end of the shank of the rivet is slightly tapered.

When the rivet has been made red-hot, and put through the hole it is to occupy, the tail end of the shank is formed into a button or point of the shape required, which Fig. 541. differs in the various kinds of rivets, as described at page 357.

Rivets are chiefly used to connect plates of iron. They are preferable to small bolts, because, being hammered close to the face of the plate, they hold more tightly, and the shanks of rivets are not so likely to become oxidised as those of bolts; moreover, as rivets are nearly always fixed when hot, they contract in cooling, and draw the plates together with great force.

They are much used in connection with building for uniting the parts of plate-iron girders, also for the sides of iron tanks and boilers.

Hand-riveting.—The actual handiwork connected with different processes in building has not, as a rule, been described in these Notes, because they can generally be seen by the student, and thus better understood than by any written description,—but with riveting the case is different. A student connected with ordinary building work is in many instances not likely to see riveting actually going on, and some knowledge of the process is necessary in order to understand the precautions which should be observed in good work.

The process of hand-riveting will therefore be briefly described.

A riveting gang consists of three men and two boys. The latter heat the rivets; the men insert and clench them.

The heating is generally effected in a portable smith's forge by

¹ This subject is not mentioned in the Syllabus, but is included here because questions upon it have been given in the Science Examinations.

placing a few rivets in a plate bored with holes, so that their tails stick through the holes into the heart of the fire, while their heads upon the upper side of the plate are comparatively cool.

When the men require a rivet, the hottest is selected and handed to them by means of pincers.

Of the three men, two, the "riveters," stand on one side of the plate, and the third, the "holder-up," on the other side.

The riveters are armed with riveting hammers, two or three tapering steel punches, an iron "*snap*," *i.e.* a short bar having its end hollowed out to form a cup that will fit the point (when finished) of the rivet, and a heavy sledge-hammer with which to strike this snap, called a "cupping hammer."

The holder-up has a heavy bar, or holding-up iron, the end of which is also hollowed out to fit the rivet head, or a heavy hammer fitted upon a long stave may be used for the purpose.

The operation is as follows.—The riveters drive a punch through the holes for the rivet about to be inserted, so as to make those in the several plates coincide with one another.

The holder-up knocks the punch back out of the hole, picks up a red-hot rivet and places it in the hole with its red-hot tail sticking out toward the riveters, and places his iron upon its head.

The riveters then hammer the iron immediately round the rivet, so as to bring the plates close together. If this is not done, the rivet, when hammered, will bulge out between the plates, and keep them apart.

They then hammer down the tail of the rivet neatly, so as to form a point of the shape required.

This last operation should be performed with heavy hammers having flat ends; and by it not only should the end of the rivet be formed, but the whole shank should be "upset," that is, squeezed up and made thicker, so as to fill the hole completely.

When the rivet is to be formed with a convex point, it is generally finished with the snap.

After the point has been neatly formed by the hammers, and is just losing its red heat, the snap is held upon it by one of the riveters, and struck by the other with the cupping hammer (the holder-up pressing his hammer against the head of the rivet on the other side), so that the point formed is made smooth and even, and all superfluous metal round the edges is cut off.

Machine-riveting is done with rivets of the same form as those clenched by hand,—generally with snap heads and points. The

rivets are inserted red-hot, and the points clenched by means of a die which moves forward and presses it into shape.

In some machines there are two dies, so that both ends of the rivet are formed at the same time.

Some of the largest machines are worked by hydraulic power; these not only hold the plates tight together, but bring a pressure of 50 or 60 tons upon the head of the rivet.

The ordinary machines can only be used to rivet such work as can be brought to them, but there are also machines which are adapted for riveting up girders *in situ*.

Comparison of Machine and Hand-riveting.—Machine-riveting is cheaper and better than that done by hand. The steady pressure brought by the machine upon the rivet not only forms the head, but compresses and enlarges the shank, so that it is squeezed into, and thoroughly fills up all the irregularities of the holes.

The superiority of machine-riveting is strikingly shown when rivets have to be taken out.

After the head is cut off, a hand-clenched rivet may be easily driven out, but a machine-clenched rivet must, as a rule, be *drilled* out.

Rivets clenched by machines can generally be easily distinguished from those done by hand; the latter are covered with marks caused by the shifting of the snap during riveting; while on a machine-riveted head there is generally a burr like the peak of a jockey's cap, caused by the die having caught the rivet a little out of the centre.

Cold riveting.—Very small rivets for boiler work or in positions where it would be impossible to heat them may be clenched cold. The process is a quick one, but the iron used must be of very superior quality.

Caulking is a process adopted when it is found that the head or point of the rivet is not quite close to the plates, or that some opening exists between the plates themselves.

This process consists in knocking down the edges of the plates with a blunt steel caulking tool, so as to bring the edges together and to close the opening. In the case of rivets, the edges of the head or point are beaten down until they indent and slightly penetrate the surface of the plates, and thus completely close the opening.

Different Forms of Rivets.—There are various names given to rivets, according to the shape to which the point is formed.

Snap rivets are those of which the points formed while the iron is hot are finished with a tool containing a nearly hemispherical hollow, which shapes it as shown in Fig.

542.

That figure represents a snap rivet in a punched hole. This form of rivet is very frequently used in the best girder work.



Fig. 542.

Button or cup-ended rivets.—These are names sometimes applied to snap rivets.

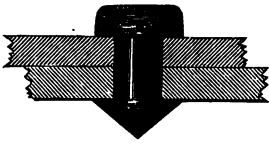


Fig. 543.

Hammered rivets have points finished, by hammering only, to a conical form as in Fig. 543, which shows such a rivet in a drilled hole.

They are more liable to leak than those with button points, but are used for rivets of large size, which, if finished with snap points, would require very large hammers in order that the points might be beaten down quickly enough.

Rivets with conical points are sometimes called *staff rivets*.

The rivet in Fig. 543 has a *pan head*, a shape often used in girder work.

Countersunk rivets are those in which the head is flush with the surface of the plate, as in Fig. 544.

This is necessary wherever a smooth surface is required, free from the projection that would be caused by ordinary rivet heads.




Fig. 544.

The countersinking is drilled, and may extend right through the plate.

It is frequently the practice, however, to have a shoulder at the upper edge of the lower plate, as shown at *a*, so that the countersink does not extend right through the plates.

The sides of the countersunk portion may be directed upon the centre of the rivet hole at the edge of the plate, as in Fig. 544, or in many cases they are not inclined so much as shown.

STEEL RIVETS are generally distrusted, as their heads are apt to fly off upon receiving a sudden jar. They require to be rather larger, in proportion to the thickness of the plate, than iron rivets, and should be very carefully heated, and their points knocked down as quickly as possible.¹

¹ Reed.

Proportions of Rivets.—The aggregate section of the rivets in any joint must be determined by the stress that will come upon them, but the diameter of the individual rivets in punched holes will depend upon the thickness of the plates through which they pass; for in punching holes it is advisable, in order to avoid breaking the punch, that its diameter should be greater than the thickness of the plate.

The proper diameters for rivets passing through punched holes in plates are given by Sir William Fairbairn as follows:—

For plates less than $\frac{1}{2}$ inch thick the diameter of the rivet should be about double the thickness of the plate.

For $\frac{1}{2}$ inch and thicker plates the diameter of the rivet should be about $1\frac{1}{2}$ time the thickness of the plate.

When holes are *drilled* they may be smaller in proportion to the thickness of the plate.

When plates of different thicknesses are joined, the rivet is proportioned with reference to the thickest of the plates.

The hole is generally made $\frac{1}{16}$ of the diameter larger than the cold rivet, to allow for the expansion of the latter when heated before insertion.

Professor Unwin's rule for the diameter of the rivets joining several plates is as follows:—

Diameter of rivet = $\frac{1}{8}$ thickness of plates + $\frac{5}{8}$ inch.

The height of the head of a rivet should be about $\frac{2}{3}$ of the diameter of the spindle, and the diameter of the head should be from $1\frac{1}{2}$ time to twice that of the spindle.

The length of the rivet before clenching, measuring from the head = sum of thicknesses of plates to be united + $2\frac{1}{2}$ times the diameter of the rivet.¹

Pitch of Rivets.—The "*pitch*" of rivets is their distance from centre to centre.

This distance varies according to the nature of the stress upon the joint and with the number of rivets necessary to be inserted in a given space.

A very common pitch in girder work is from 3 or 4 to 6 inches, *i.e.* about 4 or 5 diameters of the rivets.


No punched rivet hole should be nearer to another than 1 or $1\frac{1}{2}$ diameter (between the edges of the holes) otherwise there is danger of breaking the two holes into one; nor should any hole be allowed nearer to the edge of the metal than its own diameter.

If the holes are drilled they may be closer together.


¹ Rankine.

RIVETED JOINTS.

LAP JOINTS are formed by riveting together plates that overlap one another, as in Figs. 545 to 548.

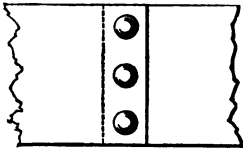

Figs. 545, 546.

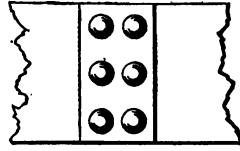


Figs. 547, 548.

The overlap should not be less than $3\frac{1}{4}$ to $3\frac{1}{2}$ times the diameter of the rivets in single riveting (Fig. 545), or $5\frac{1}{2}$ to 6 diameters in double riveting (Fig. 547).

There are formulæ for finding the length of the overlaps, so that the joints may be of equal strength throughout; but the above rules will be a sufficient guide in ordinary cases.

FISH JOINTS are those in which the ends of the plates meet one another, the joint being "fished" either with a single "cover plate," as in Fig. 550, or with one on each side.

When a single cover plate is used it should be of not less thickness than that of the main plates to be united.

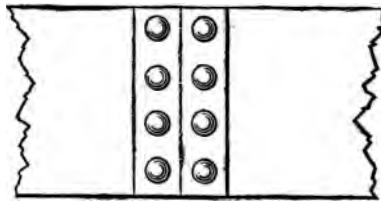

Figs. 549, 550.

When two cover-plates are used each of them should be of not



Fig. 551.

less thickness than half the thickness of either of the plates to be united.

BUTT JOINTS is the name given to fished joints that are in compression, so that the ends of the plates butt evenly against one another.

This seldom occurs in practice, for the very process of riveting draws the plates slightly apart, and the edges are generally caulked to conceal the gap.

Sometimes the gap is filled with cast zinc run into the interval.

If, however, the plates are carefully planed square at the edges, and brought very carefully into close contact throughout their width, the joint is called a "*jump joint*." When this is done the rivets in the covers need not be calculated so as to transmit the whole thrust, for it is transmitted by the plates themselves; short cover plates, with one or two lines of rivets to keep them in position, are all that is required.¹

SINGLE RIVETING consists of a single row of rivets uniting plates in any form of joint, as in Figs. 545, 546, 549, 550, 551.

DOUBLE RIVETING is that in which the plates are united by a double row of rivets, as in Figs. 547, 548, 552.

Double riveting may be either "*chain*," as in Fig. 547, or "*zigzag*," as in Fig. 552.




Fig. 552.




Fig. 553.

TRIPLE AND QUADRUPE RIVETING are formed by 3 or 4 rows of riveting respectively.

CHAIN RIVETING is formed by lines of rivets in the direction of the stress, parallel to one another on each side of the joint, as in Fig. 553.

ZIGZAG RIVETING consists of lines of rivets so placed that the

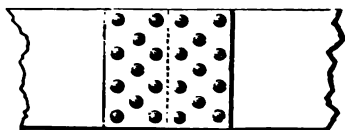


Fig. 554.

rivets in each line divide the spaces between the rivets in the adjacent lines, as in Figs. 552, 554.

¹ Stoner.

Comparative Strength of different kinds of Riveted Joints.

—The relative strength of the different forms of joint, as compared with that of the solid plate, has been found to be as follows.

| | | | |
|--|---|---|-----|
| The strength of the solid plate being ¹ | . | . | 100 |
| That of the single riveted joint is ¹ | . | . | 56 |
| " double ¹ " " | . | . | 70 |
| " chain ² " " | . | . | 85 |

Joints in Tension.—*Lap Joints.*—Fig. 555 shows the arrangement of rivets generally adopted for lap joints which are to undergo a tensional strain.

The object of so arranging the rivets is to keep the strength of the joint as nearly equal to that of the original plate as possible.

In this case the strength of the joint is equal to that of the cross section of the plate, less one rivet hole.

It is true that the weakest section of the plates themselves is at A B, where they are pierced by three rivet holes; but before either plate could break at this line, the three rivets, *o p q* or *r s t*, within the line must be shorn in two.

Thus, before the upper plate can tear at A B, *o p q* must be shorn; and before the lower plate can give way at A B, the rivets *r s t* must be shorn.

In a joint of this form proposed by Mr. J. Barton, the following were the dimensions. Centre rivets along A B, each 1 inch diameter; *o q r t* each $\frac{3}{4}$ inch diameter; *p* and *s* each $\frac{1}{2}$ inch diameter.³

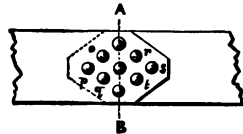


Fig. 555.

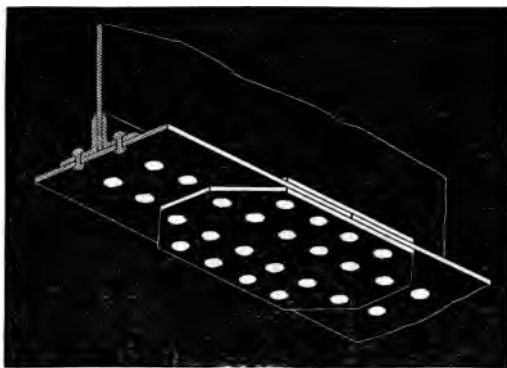


Fig. 556.

BUTT JOINTS.—The same principle may be applied to a joint with cover-plates, as shown in Fig. 556. The arrangement is

¹ Fairbairn's Experiments.

² Unwin.

³ Minutes of Proceedings of Institution of Civil Engineers, vol. xiv.

similar to that in Fig. 555, but with an equal number of symmetrically placed rivets on each side of the joint.

Fig. 557 shows another form of the same kind of joint, not

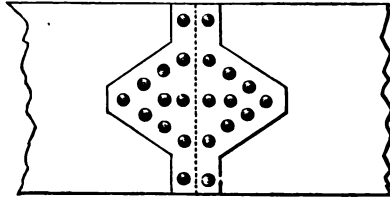


Fig. 557.

often adopted for girder work, but shown in Mr. Reed's¹ work on iron shipbuilding.

In the case illustrated the plates united were $\frac{1}{8}$ inch thick, and the covering straps each $\frac{3}{16}$ inch thick, the rivets being 1 inch in diameter, and all the rivet holes a diameter clear of the edges and butts.

The several ways in which this joint might possibly give way are all investigated by Mr. Reed in his book above mentioned,—the first being the case in which the plate gives way by tearing at the point where it is pierced by the leading rivet,—and he then shows that “in all the various modes of fracture except the first (just mentioned) the breaking strength is greater than the strength of the unpunched tie plate, and that the strength of the butt is, consequently, less than the strength of the tie by one rivet hole only.”

The riveted joints of tension booms of girders are very commonly arranged in plan, as shown in Fig. 556.

Joints in Compression.—It was at one time thought that for a butt joint under compression very few rivets were necessary; that the whole strain was communicated by the end of one plate to the other upon which it pressed; and that the rivets would be required only to keep the plates in their places.

Experience has shown, however, that in practice we cannot depend upon the plates being so closely butted against one another as to transmit the thrust direct (see p. 360).

“Very slight inaccuracy of workmanship may cause the separation of the butting plates, and then the whole thrust is transmitted through the rivets and through the cover plates.”

¹ *Iron Shipbuilding.*

"For the best bridges it is now assumed that all the joints shall be of sufficient strength to take the whole strain, if necessary, through the rivets."

"The only way in which compression joints may safely differ from tension joints is, that the rivets may be more closely spaced across the plate, the quantity punched out in any section not affecting the strength of a compression joint as it does that of a tension joint."¹

Grouped Joints.—The joints that occur in the plates of riveted girders are generally formed with cover plates.

When there are several layers of plates, as in the booms of a large girder, the joints may with advantage be collected into groups, so that several may be covered by one pair of plates, as shown in Fig. 558.

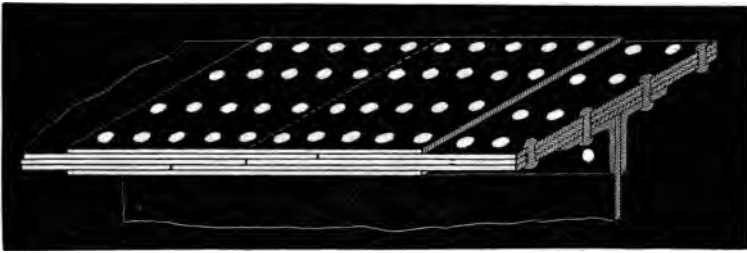


Fig. 558.

Fig. 558 shows the joints in the three plates of the boom of a heavy girder collected under a pair of cover plates. The joints may be chain or zigzag riveted in plan; or in some cases the cover-plates are cut off obliquely, so as to have triangular ends, and the rivets are arranged somewhat as in Figs. 555, 556.

The corresponding joints in the tension and compression boom of a girder are generally made similar to one another.

Essentials of Good Riveting.—**RIVET HOLES.**—The holes in plates to be riveted may be either punched or drilled.

In whichever way they are formed, it is important that they should be cut clean and true, and should fit exactly over one another. If they do not, an irregular cavity is formed, which has to be forcibly straightened by a steel pin or "drift punch" before the rivet is inserted, thus injuring the plate, enlarging the hole, and causing the rivet to fit loosely.

¹ Unwin—*Iron Bridges and Roofs*.

Some difference of opinion has existed as to whether punched or drilled holes make the best work.

Punched Holes.—The punched hole is slightly conical in shape; thus the rivet filling the hole in two plates is of a double conical shape. It is, of course, important that the hole should be punched so that the narrow part of the cone is on that side of the plate which meets the other plate. Such rivets "have been known to hold the plates together even after the heads have been removed by corrosion."

This is a great advantage in shipbuilding and boilermaking, but in girder work rivets are seldom subject to a strain in direction of their length.

In practice the conical shape is often destroyed and its advantages lost by the insertion of the drift above referred to.

The process of punching is, however, not so accurate as drilling; it tears and injures the plate round the edges of the holes, especially when the iron is not of good quality.

Drilled Holes.—On the other hand, drilled holes may be accurately formed without the slightest injury to the plate, and of a diameter smaller than the thickness of the plate. When there are many plates to be united, so that multiple drills can be used, the cost is not greater than that of punched holes; and the advantage gained in the work coming together properly, and the rivet holes being fair, is very great.

The sharp edges of drilled holes have been found by experiment to expedite the shearing of the rivets. To prevent this the edges of the holes have in some cases been rounded, which has been found to increase the resistance of the rivet by about 10 per cent.¹

Cases in which Drilled Holes and Punched Holes may respectively be used.—To sum up, we may say that in really first-class work, when several layers of plates have to be riveted together, or when the rivet holes are of a diameter less than the thickness of the plates, it is desirable that the holes should be drilled.

When the quality of the iron is inferior, drilled holes become a necessity.

Holes for ordinary work, those in thin plates, and those of a diameter greater than the thickness of the plates, may be punched.

Sometimes the holes are punched smaller than required, and the rough injured edge afterwards drilled out.

¹ Sir William Fairbairn. *Proceedings of Royal Society*, 24th April 1873.

Heating.—Rivets should be heated uniformly throughout their whole substance; not raised above a dull red (by daylight); not twice heated.

The heating should be effected in an air furnace, the rivets being kept clear of the fuel.

An ordinary fire heats the rivets partially, and so quickly that they are frequently burnt.

The usual plan is to arrange the rivets in a flat plate full of holes, through which their tails protrude. This plate is placed upon the fire, and thus the tails become very hot—sometimes white hot—while the heads remain comparatively cool.

For riveting by hand, however, it is desirable that the head of the rivet should be even hotter than the point, otherwise the blows which are sufficient to expand the rivet and make it fill the hole near the point will not have so much effect at the other end, and the rivet will not quite fill the hole near the head.

It is of the utmost importance that rivets should not be overheated, otherwise the iron will lose its ductility, and the rivets will become weak and brittle.

If proper attention be not paid to this point, much injury may be done by too large a number of rivets being put into the fire at once to save trouble, and consequently left there too long.

Arrangement.—All rivets should be arranged in such positions that both ends can be got at during construction.

Causes of Failure.—Riveted joints are liable to fail in different ways, according to their form and the nature of the stress brought upon them.

Among the causes of failure are the following :—

The rivets themselves may fail by their heads being shorn off, by the pins being ruptured under a tensional stress (though rivets should, as a rule, be subjected only to shearing stress), or by the pins being cut in two by a shearing stress.

Any plate may fail either by the inability of its “effective section” (that is, the section of the plate left after the rivet holes are cut out) to resist the stress, or by the rivets shearing through the portion of plate beyond them. In some cases also, where the rivet has not sufficient bearing area, it indents and crushes the plate round the edge of the hole, or again the plate may indent and injure the rivet, and causes a loose joint.

For important work it is necessary carefully to calculate the

stresses which will come upon a joint, and to arrange the number, size, and position of the rivets, their distances apart, and the dimensions of the plates accordingly. Such calculations are, however, beyond the province of these Notes, and will not here be entered upon.

CHAPTER XXI.

FIREPROOF FLOORS.

GENERAL REMARKS.—Fireproof floors are of great service in preventing flames from spreading throughout a building.

A wooden floor will resist a considerable action of fire if the woodwork is well imbedded in mortar, but such a covering leads to its premature decay.

Timber may be rendered partially fireproof by the application of certain chemical substances mentioned in Part III.

The materials found to be best able to resist the attacks of fire are brickwork, burnt clay in any form, plaster, and concrete.

Stone is a very bad material for fireproof structures; when subjected to great heat it suddenly cracks, and gives way without warning.

For this reason, arches of fireproof construction should never rest upon projecting stone corbels.

Artificial stone, composed of Portland cement and breeze or slag, has been found to withstand heat very successfully.

Iron at one time held a very high place as a fireproof material, but it has of late years been found to be untrustworthy.

Cast iron is a very treacherous material, as it cracks and gives way suddenly, especially when it is subjected to great heat and then suddenly drenched with cold water. This, of course, is likely to occur during a fire.

This dangerous propensity has been the cause of many accidents, and has led to the introduction of wrought iron in fireproof structures.

Wrought iron, however, has also failed, for it is found to warp and twist into the most extraordinary shapes under the influence of great heat.

All ironwork in fireproof structures should therefore be imbedded in concrete, or protected by fireclay shields (see page 369).

GIRDERS AND BRICK ARCHES.—Among the earliest forms of fireproof floors were those consisting of brick arches of small or moderate span, supported by cast or wrought iron girders.

Such constructions are still in use for mills, warehouses, sugar

factories, and other buildings, where great weights have to be stored.

Fig. 559 is a transverse section of part of a floor composed of brick arches resting upon cast iron T girders, G G.




Fig. 559.

The girders may be placed from 4 to 12 feet apart; the arches turned from one to the other; the spandrls filled in and levelled up with concrete, and covered with a floor of any material.

The springers of the arches are generally moulded to the exact form required.

A tension rod, *t t*, unites the girders, and prevents their yielding under the thrust of the arches. The nearer the tension rod is to the springing of the arch the better, but it is frequently kept high up within the arch in order that it may not be visible.

The tension rod is often used only for the outer arches of a series; these, being thus prevented from yielding, form an abutment for the others.

In arches of a larger span the thickness of the brickwork may be increased toward the haunches, as shown in Fig. 560.

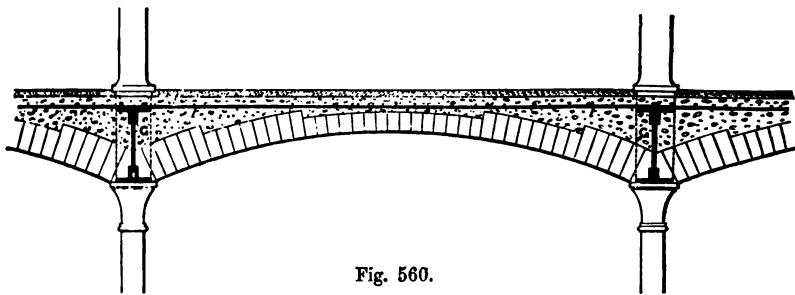


Fig. 560.

This increase of thickness is useless unless the extra rings are bonded in with the others, or built with bricks the full depth of the arch, which amounts to the same thing.

Sir W. Fairbairn recommends that the rise of such arches should be $\frac{1}{10}$ the span for floors of mills, and $\frac{1}{8}$ the span for warehouse floors to carry heavy weights.

Fig. 560 shows an arch of about 10 feet span, carried by

wrought iron plate girders, with angle iron flanges. These girders run at right angles to the arches, their ends rest upon the heads of columns, and the girders are laterally tied together by flat iron bars, *t t*, secured to their upper flanges.

WHICHCORD'S FIREPROOF BLOCKS.—It will be seen that in the systems above described the lower surfaces of the iron girders are exposed to the direct action of fire.

To prevent this, Mr. Whichcord imbeds them in fireclay blocks, which protect them from fire, and, at the same time, form skew-backs for the arches.

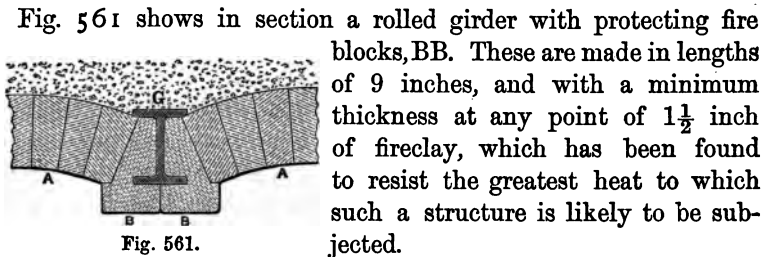


Fig. 561.

Where ceiling joists are used, they may be supported on the lower ledges of the fire blocks.

Disadvantages of Arched Floors.—Arched floors are complicated and heavy. The arches depend greatly upon one another, and if one gives way it may lead to the failure of the whole floor.

These disadvantages have led to the adoption of simpler forms of fireproof flooring.

BUNNETT'S SYSTEM consists of hollow bricks of a peculiar shape laid in a flat arch from wall to wall, resting on angle irons held together by a tension rod passing through the bricks. The bricks are so arranged and formed laterally that each receives the support of six adjoining bricks. The under sides of the bricks are dovetail grooved to afford a key for the plastering.

TILE FLOORS consist of arches formed with flat tiles resting upon girders, in the same way as the brick arches above described. When the centering is fixed, the first course of tiles is laid dry, and then covered with cement; upon this a second, third, and fourth course are laid in the same manner. The spandrils are filled in with concrete, and the floor finished with joists and boarding, pavement, or in any way that may be desired.

GIRDERS WITH CAST IRON PLATES.—Fig. 562 is the sectional elevation of a floor formed as follows:—

Wrought iron rolled or built-up girders, *G*, span the room at from 10 to 15 feet central intervals.

Running at right angles to these, and resting upon them, are rolled joists, *J J*, about three feet apart. Upon the upper flanges of these joists are laid cast iron plates shown in section at *C*, the



Fig. 562.

joints being so shaped as to overlap one another. The under side of these plates may be cast to a pattern, so as to form an ornamental ceiling.

Another row of cast iron plates may, if required, be placed on the lower flanges of *J J*. The space between the two sets of plates may be left hollow so as to contain a stratum of air for coolness, or it may be filled with deafening composition or concrete.

The cast iron plates are, of course, an objection to this system.

GIRDERS WITH WROUGHT IRON PLATES.—Some years ago Sir W. Fairbairn recommended fireproof floors constructed with wrought iron plates of arched form riveted to the lower flanges of the girders, and filled up to the level of the floor with concrete, thus forming concrete arches of some 10 or 12 feet span with a wrought iron lining to the soffit, supported at intervals by T iron ribs.

For smaller spans Mallet's buckled plates (see Part III.) have been used, their edges being riveted to the lower flanges of the girders upon which they are laid.

FOX AND BARRETT'S FLOORS consist of wrought iron girders placed about 20 inches apart, at right angles to which, and resting on their bottom flanges, are laid rough fillets or strips of wood 1 inch or $1\frac{1}{4}$ inch square, and about $\frac{1}{2}$ inch apart. Concrete is then filled in between the joists—being supported by the fillets—which form a key to the plastering of the ceiling below.

In order to avoid all inflammable material, small earthenware drain pipes have been used instead of wooden fillets.

Fig. 563 shows a transverse section, and Fig. 564 a longitudinal section, of such a floor.

G G are the wrought iron girders, *ff* the fillets, *P* the plaster of the ceiling below.

The surface of the floor in the example shown is covered with boards laid upon the joists, *j j*, which are imbedded half their

depth in the concrete, and cut to a dovetail section to keep them firm.

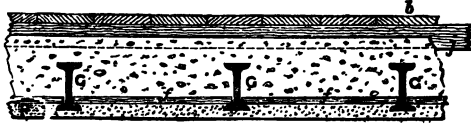


Fig. 563.

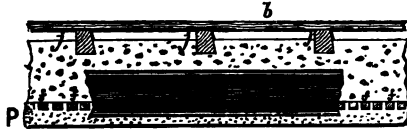


Fig. 564.

Sometimes the concrete is filled in only up to the upper surface of the girders, and floor joists or paving laid upon it.

The concrete used for fireproof flooring of this kind should be of a quick-setting lime or cement, for until it has set its full weight comes upon the girders, but when it is solid it forms a series of flat arches between the girders and strengthens the floor.

If the concrete is thick, it should be applied in two layers to hasten its drying.

Care must be taken that the floor has a good abutment on each side, or is well tied together.

When the lower flanges of the girders are so wide that they would interrupt the key of the plaster and prevent its adherence, light ceiling joists are sometimes secured to the under side of the fillets at right angles to them. These are lathed and plastered in the usual way.

MEASURES' PATENT FIREPROOF FLOORING.—Fig. 565 shows a modification of Fox and Barrett's system, patented by Messrs. Measures and Co., which has been extensively used.



Fig. 565.

The girders, *G*, are placed 3 to 4 feet apart, and instead of wooden fillets, \perp iron fillets, *t t t*, 9 inches apart, are placed at right angles to the girder resting on the lower flanges.

Cement concrete is filled in between the joists flush with the bottom of the girders, and upheld by temporary centering until it is sufficiently set to be plastered.

The advantages claimed for this system are that there is no wood introduced, the plaster is of the same thickness throughout, the girders are protected by the cement from oxidation, and the floor is of great strength.

MORELAND'S SYSTEM consists of wrought iron girders spanning the walls, and parallel to one another. At right angles to them, and resting upon their lower flanges, are "bow and string lattice girders," the upper surface of which is curved. Upon these curved girders is laid corrugated iron, and upon the iron, concrete is laid, filling in the spandrils, and forming a level surface. Over this are fixed joists and boarding to form the floor, and ceiling joists may be added below if a lath and plaster ceiling is required.

DENNETT'S FIREPROOF FLOOR consists of concrete arches supported when they abut upon the walls by projecting courses, and at intermediate points by rolled or riveted iron girders, as shown in Fig. 566.

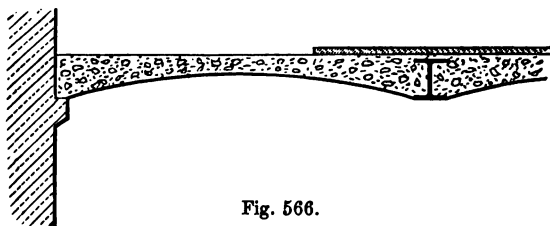


Fig. 566.

The arches should have a minimum rise of 1 inch to every foot of width up to spans of 10 or 12 feet, and are sustained by centering until they are thoroughly set.

The concrete used has sulphate of lime (gypsum) for its matrix. It has been proved that this substance does not lose its cohesive power even when it is raised to a white heat and then drenched with cold water.

The floor above the arch may be formed by simply bringing the

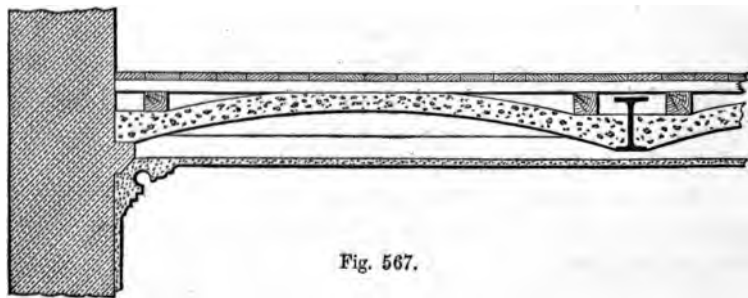


Fig. 567.

concrete itself to a smooth surface. Joists may be nailed to fillets laid upon the concrete, in a similar manner to that shown in Fig. 567, or the surface may be paved as in Fig. 566.

The soffit of the arch may be finished at once with the setting coat of plastering; or, if a flat ceiling is necessary, joists must be fixed to the lower flanges of the girders to carry the lath and plaster. The laths are not shown in Fig. 567.

Figs. 566, 567 are taken from Messrs. Dennett's pamphlet.

ALLEN'S SYSTEM consists of Portland cement concrete strengthened by iron bars. Bars about 3 inches by 1 inch are placed on edge across the building, 2 feet apart, and built into the walls on either side; across these are placed $\frac{1}{2}$ -inch iron rods, also 2 feet apart, thus forming a network with meshes 2 feet square. A temporary scaffold is formed underneath the network, and the concrete—composed of 1 Portland cement to 4 of clinkers, slag, etc.—is thrown in to a depth of 4 inches; when it is set the scaffolding is removed.

HORNBLOWER'S SYSTEM is a modern fireproof construction which has not long been introduced.

The object proposed to be attained is stated by the inventor to be "the production of a floor with the minimum amount of inflammable material and the greatest amount of carrying power, the inflammable material to be so placed in the mass that it should be protected from the chance of contact with fire, and at the same time be composed of a substance which should be subject to the least disturbance by the action of expansion and contraction."

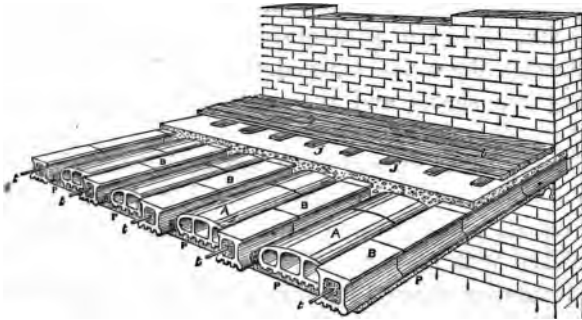


Fig. 563.

The simplest form of this system is given in Fig. 568, which shows the construction recommended by Mr. Hornblower for a light floor.

A A are large hollow fireclay tubes ; B B are smaller tubes of the same material filled with fine Portland cement concrete, gauged 4 to 1 ; concrete is also packed in between and over the tubes ; *t t* are iron tension rods $\frac{5}{8}$ -inch diameter, which pass through the smaller tubes, and are secured by rivets at the ends in the walls ; P P is the plaster ceiling below, the key for which is afforded by indentations or grooves formed on the lower side of the tubes.

The upper surface of the floor may be formed with boarding, *b*, laid upon battens, *j j*, as shown in the figure, or finished with asphalt, cement, paving, or any other material that may be desired.

It will be seen that the construction amounts to a series of small fireclay arches, A A A, resting upon girders, B B, which consist of iron rods protected from fire by concrete and the fireclay casing.

In larger floors, and those to bear heavy weights, the principal girders are built-up iron beams, surrounded and protected by fireclay tubes and concrete. The smaller girders are a combination of fireclay tubes with concrete and sheet iron.

Where iron columns are necessary to support the girders they are surrounded by vertical hollow fireclay tubes of about 1 inch internal diameter imbedded in a solid ring of concrete, which surrounds the iron column and is cemented externally.

Mr. Hornblower proposes to form both walls and roofs of a fire-proof structure on the same principles.

The fireclay tubes for the roofs are square in section ; they are left hollow and imbedded in concrete, the necessary strength being afforded by the use of sheet iron on both sides of the tubes.

The purlins consist of parallel sheets of iron, kept apart by laths passing through the centre (shaped, therefore, like the letter H, the sides being the sheets, and the cross line the bolts), the whole imbedded in concrete.

The fireclay tubes for the walls are of hexagonal section, and are placed horizontally one above another, being imbedded in concrete on all sides, covered with sheet iron as before, and the inside finished with plaster.

The advantages claimed for this system of construction may be summarised as follows :—

1. Great cheapness.
2. Large carrying power.
3. Less iron (and that carefully protected) being used in the construction, and the other materials used being perfectly unflammable.

4. The girders and columns can be placed farther apart than in the ordinary constructions; and in this system, instead of being left unprotected, are carefully encased with fireproof material.

French Systems.—Wrought iron girders were adopted for fireproof floors in Paris some time before they were known in England, and any notice of the different systems of fireproof flooring, however brief, would be incomplete without a reference to some of the plans originated in France.

Though these are not commonly adopted in this country, some description of them may be useful in suggesting ideas for new systems, which may be arranged and modified in accordance with more recent experience.

THUASNE'S SYSTEM consists of I-shaped wrought iron girders slightly arched, with a rise of about $\frac{1}{200}$, and placed at about 3 feet 3 inches central intervals. At right angles to them, and also

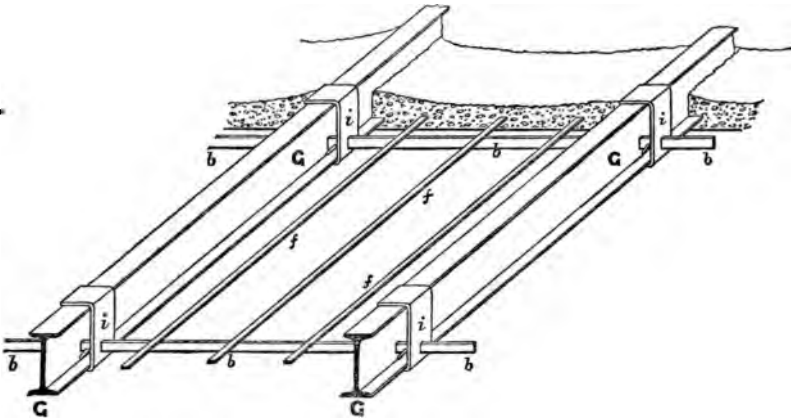


Fig. 569.

3 feet 3 inches apart, are laid flat iron bars or *interties*, *b b b*, whose ends pass through slits in wrought iron bands, *i i i*, which embrace the girder at intervals of 3 feet 3 inches. The ends of the interties are secured by a pin passing through them on the farther side of the iron band.

Crossing the interties at right angles are light iron rods called "*fautons*," *f f f*; these are generally about $\frac{1}{2}$ inch square (not flat as shown in Fig. 569), placed about 9 inches apart, and bound to the interties with wire.

A flat centering or boarding is placed under this network, and

coarse plaster of Paris is poured in upon it to a thickness of about 3 inches. This soon becomes hard, and serves not only to stiffen the floor but to form the ceiling, a fine coat being required on the under side as a finish to superior work.

The girders are tied into the walls at each end by iron straps secured to vertical bolts in the wall.

Small square wooden joists are laid over the girders, and boarded in the usual way.

In some cases cast iron chairs are used instead of the wrought iron straps to carry the ends of the interties.

TABLE showing SIZES and WEIGHTS of JOISTS and FLOORS.

Thuasne's System.

| Bearing in feet. | Depth of Joist. | Depth of Floor. | Weight per Square. |
|------------------------|-----------------|------------------|--------------------|
| | inches. | inches. | lbs. |
| 10 to 11 | 4 | 7 $\frac{1}{8}$ | 370 |
| 11 $\frac{1}{2}$ to 13 | 4 $\frac{3}{4}$ | 7 $\frac{7}{8}$ | 420 |
| 13 to 16 | 5 $\frac{1}{2}$ | 8 $\frac{1}{8}$ | 465 |
| 16 $\frac{1}{2}$ to 20 | 6 $\frac{1}{4}$ | 9 $\frac{1}{2}$ | 570 |
| 20 to 23 | 7 $\frac{1}{8}$ | 10 $\frac{1}{4}$ | 605 |

In another French system commonly adopted, the ends of the interties, instead of being secured in the saddles or straps, pass up the side of the girder, and are bent over it so as to form a hook, which grasps the upper flange.


In a modification of the system last mentioned the ends of the interties rest upon the lower flange of the girders, and are turned up against the web, but do not grasp the upper flange. This is a very simple arrangement, but there is no lateral tie between the girders.

In another French system the girders are placed about 3 feet apart, and each pair is united by round iron bolts, also 3 feet apart, and $\frac{6}{10}$ inch diameter, passing through holes at the neutral axis of the girder, and riveted up at each end.

Small square bars are hung on to these tie bolts, their extremities being bent up into hooks of such a length as to permit them to hang nearly level with the bottom of the girders, to which they are parallel.

The floor and ceiling are formed in the same way as for Thuasne's system above described.

FER TUBULAIRE is the French name for a girder of peculiar form invented by M. Zorés and shown in Fig. 570.



Cross Section.
Fig. 570.



Longitudinal Sectional Elevation.
Fig. 571.

Floors of this kind were exhibited in the Paris Exhibition of 1857, and have been used for warehouses in this country.

They are thus described in the official report on civil construction.

"The 'fer tubulaire' may be described as being in section of the form of a capital A without the small triangular top. Those exhibited are said to be for a bearing of 20 feet, and are of the following dimensions—viz. $4\frac{3}{4}$ inches high, $2\frac{3}{8}$ inches wide at top, 4 inches wide at bottom exclusive of a small flange of $\frac{3}{4}$ inch projection on each side. The sides of the girder are $\frac{3}{16}$ ths of an inch in thickness, and the top and flanges $\frac{7}{16}$ ths. These girders are placed at a distance apart of 2 feet 8 inches from centre to centre, and are tied together at intervals of three feet by flat bar iron ties of $\frac{3}{4}$ inch by $\frac{3}{16}$ inch bolted to the bottom of the flanges, and the flooring finished according to one of the following methods:

"Method No. 1.—Flat arches of hollow brick between the girders, with joists of 'fer à coulisse' (hereafter described) or of wood and wooden flooring, or for passages with the spandril filled in with plaster, and floored over with tiles ceiled underneath to soffit of flat arch.

"Method No. 2.—The spaces between the girders filled in with hollow blocks of plaster 4 inches deep. Flooring and ceiling as in No. 1.

"Method No. 3.—Wooden flooring as in No. 1, with ceiling on small iron laths hollow between floor and ceiling.

"Method No. 4.—Wooden flooring without ceiling."

The girders of this Λ section (G G in Fig. 570) are said to possess the following advantages over those of the I form, commonly used:

"First, With equal weights they give a strength or resistance nearly double.

"Second, A floor constructed with these girders costs some 20 per cent less than one similar in all respects but constructed with girders of I section.

"Third, This form of joists requires no strutting, while the I girder requires lateral pressure to such an extent that it is said not to be employed to the best advantage unless absolutely filled in with either hollow brick arches or plaster, more than half its strength being dependent upon its lateral rigidity."

FER À COULISSE.—This is a form of iron joist resembling the I section, but with three flanges, the second longer than the upper flange and close below it.

Fig. 571 shows at *f* this form of girder in use as a common joist.

The main girders of fireproof floors have also been made in France of this section.

The girders are placed about 20 inches from centre to centre, and the space between them filled in with hollow bricks, or a hollow block of plaster resting on the lower flanges. The advantages claimed for these girders are, that the second flange assists the top flange in affording the necessary resistance to compression when the girder is loaded, and that it also stiffens the girder in a lateral direction; and further, that it affords a convenient arrangement for laying the boarding at once without the intervention of joists, and without employing nails.

The systems of fireproof flooring that have been introduced or proposed at different times are almost innumerable. The shape of the girders has been varied in every possible way, and all sorts of materials used in connection with them.

Several new forms have been proposed during the last few years, but many of them have not been fully tried. The subject is one of great importance, and will no doubt be greatly developed.

CHAPTER XXII.

IRON ROOFS.

THIS Course includes roofs of from 40 to 60 feet space.

Such roofs come under the first head of the classification given at page 130, Part I., as they can easily be formed with straight rafters, and it will therefore be unnecessary to notice roofs with arched rafters or mixed roofs in these Notes.

Trussed Rafter Roofs.—In Part I. illustrations and descriptions were given of a roof in which each principal rafter was trussed by means of a strut supporting it in the centre, the strut itself being sustained by tension rods connecting it with the ends of the rafter.

Such an arrangement is best adapted for roofs up to 30 or 40 feet span; but when, as in larger roofs, the rafters become very long, they require support at more than one central point.

TRUSS WITH TWO STRUTS.—Fig. 572 shows such a roof, in which the rafter is supported at two intermediate points.

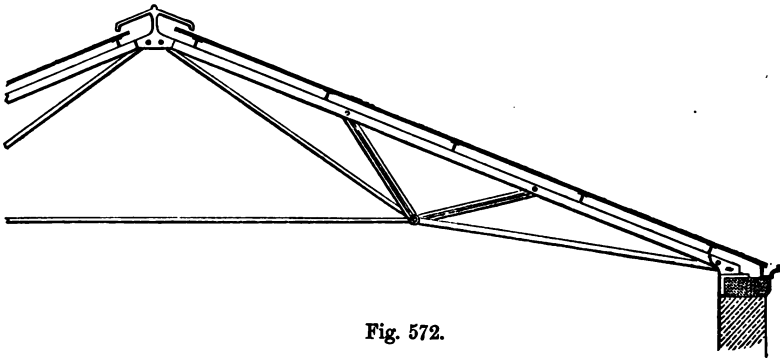


Fig. 572.


In this illustration the rafters are of double bar iron, the strut of cruciform section, either of cast iron or (better) of two T irons riveted back to back (see Fig. 252, Part I.) The tension rods are secured to chairs at the feet of the rafters and to a head at the apex, as already described in Part I.

A small cast-iron standard supports a ventilator at the ridge,

THEORY OF THE ROOF TRUSS

The roof truss is a structural member which is supported at its ends by walls or columns and is subjected to a load which is distributed over its entire length.

The roof truss is a structural member which is supported at its ends by walls or columns and is subjected to a load which is distributed over its entire length. The load is usually represented by a series of downward arrows of equal magnitude, spaced at equal intervals along the length of the truss.

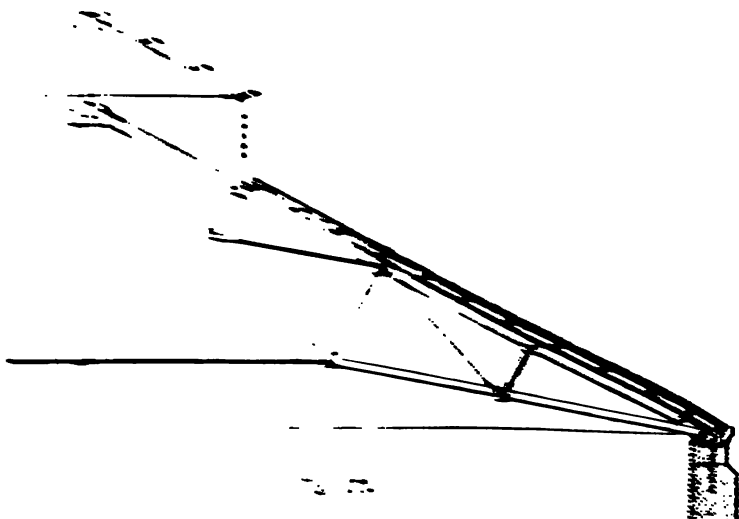

The roof truss is a structural member which is supported at its ends by walls or columns and is subjected to a load which is distributed over its entire length. The load is usually represented by a series of downward arrows of equal magnitude, spaced at equal intervals along the length of the truss.

The roof truss is a structural member which is supported at its ends by walls or columns and is subjected to a load which is distributed over its entire length. The load is usually represented by a series of downward arrows of equal magnitude, spaced at equal intervals along the length of the truss.

The roof truss is a structural member which is supported at its ends by walls or columns and is subjected to a load which is distributed over its entire length. The load is usually represented by a series of downward arrows of equal magnitude, spaced at equal intervals along the length of the truss.

The roof truss is a structural member which is supported at its ends by walls or columns and is subjected to a load which is distributed over its entire length. The load is usually represented by a series of downward arrows of equal magnitude, spaced at equal intervals along the length of the truss.

The roof truss is a structural member which is supported at its ends by walls or columns and is subjected to a load which is distributed over its entire length. The load is usually represented by a series of downward arrows of equal magnitude, spaced at equal intervals along the length of the truss.

In this example the rafters and struts are of T iron, the tension and suspending rods of round iron. The covering is of Duchess

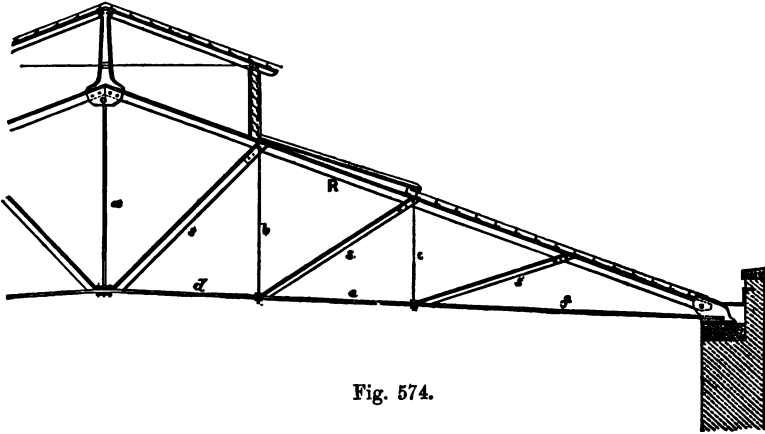


Fig. 574.

slates laid on angle iron laths. The ridge lantern is of similar construction to that last described, covered with slates on angle iron laths, and supported by cast iron standards.

A side skylight is shown just below the lantern consisting of T iron sash bars, filled in with glass.

Fig. 575 shows an extension of the form of truss just described, adapted for roofs of from 50 to 60 feet span.

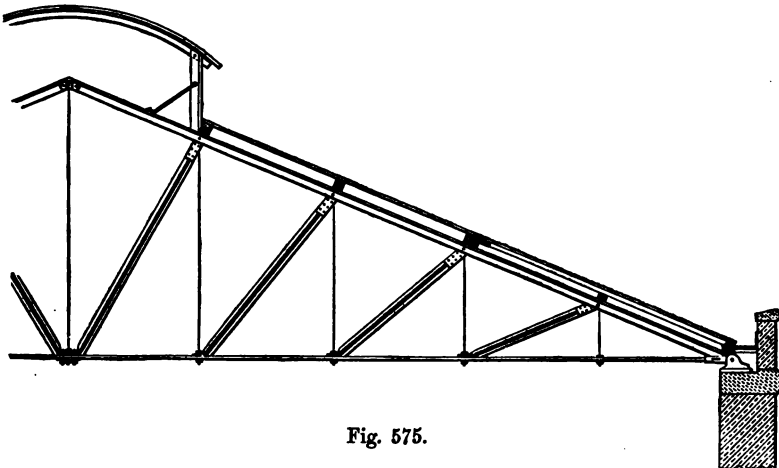


Fig. 575.

In this case the struts may be of double T iron, and the rafters of double angle or channel iron, kept asunder by cast iron distance

pieces. The purlins are of wood sustaining boarding, on which may be laid slates, zinc, or other roof covering.

The lantern is of simple construction, consisting merely of corrugated iron resting upon curved ribs of T iron, and supported by T iron side standards.

The lower portion of the roof slope is covered by an ordinary wooden sash skylight resting upon the purlins.

MODIFICATION OF QUEEN ROD ROOF.—Fig. 576 shows a modification of the queen rod roof often used in practice.

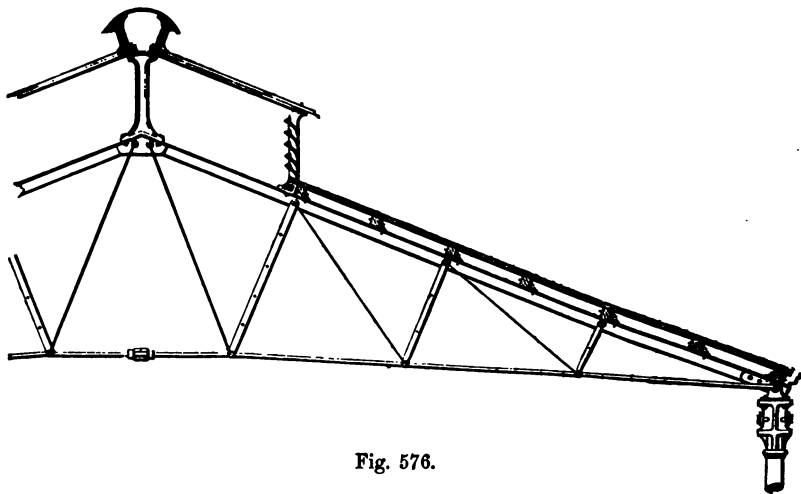


Fig. 576.

In this form of roof the struts are at right angles to the rafter, and are therefore of minimum length.

In the example given the struts are of double bar iron of the construction described at page 384, the rafters of T iron, the tension and tie rods of round iron, the purlins of wood connected to the rafters by angle iron.

The skylight is shown on a larger scale in Fig. 595, page 391, and is there described.

The tie rod is attached to chairs formed upon the heads of the columns supporting the roof (see Figs. 591, 592), and is provided with a union joint in the centre by which it may be tightened.

PARTS OF IRON ROOF TRUSSES.

The methods of constructing the different parts for iron roofs of small span have already been described in Part I. This

section will be confined to the consideration of the forms to be given to members of larger roof trusses.

Principal Rafters.—It has already been mentioned in Part I. that the principal rafters of an iron roof of small span are generally of T shaped section.

Bars of similar sections, but of larger dimensions, are also used for larger roofs; but in these many other forms are also adopted, a few of which may now be mentioned.

Rafters of I section are sometimes used for spans of over 60 feet, but are not convenient for the attachment of the struts.

When T iron is used for larger roofs the upper flange may be strengthened by adding plates to it, as in Fig. 577.

“Bulb iron with a thin web and a bulb somewhat larger than the top table, gives a greater resistance with the same weight of metal than T iron, but its cost is considerably greater, and it is not quite so easy to connect with the other part of the truss.”¹



Fig. 577.

The increased strength required in long rafters is sometimes given without increasing the scantling of the iron used by placing two bars side by side, parallel to one another, and kept an inch or two apart by means of cast iron distance pieces.

In Fig. 572 the rafters are double flat bars, so arranged.

Double channel iron may be similarly used, thus—




Fig. 578.

or double angle iron, thus—



Fig. 579.

The same forms are also used, the being filled in with timber, thus— can very conveniently be fixed.



interval between the bars to which the roof covering Fig. 580.

HIP RAFTERS may be strengthened by the introduction of additional flat plates, thus— the bulk of the rafter.



Fig. 581.

Purlins for roofs of from 40 to 60 feet span may be of timber or of angle iron, T iron, or U iron, as already described in Part I.; the angle and U iron may be filled in with wood in order that the roof covering may be more easily attached.

In larger roofs, where the principals are widely spaced, the purlins may be of I iron, or trussed in the manner described at page 280, or in other ways.

¹ Wray's *Theory of Construction*.

In very large roofs the purlins are often regular lattice girders.

Fig. 587 gives an example of angle iron purlins. Fig. 588 shows the same filled in with wood. Fig. 572 shows T iron purlins, Figs. 575, 576, wood purlins,—in the former case notched on to the rafters, and in the latter supported by angle irons.

Fig. 582 shows the method given by Mr. Dempsey (in his Treatise on Iron Roofs), for attaching a T iron purlin to rafters of double bar iron. A cast iron chair (dotted in the figure) is secured between the rafter bars to keep them apart, and through its jaws passes the T iron purlin, which is there bolted in position.




Fig. 582.

Struts.—The forms of wrought iron struts described in Part I,

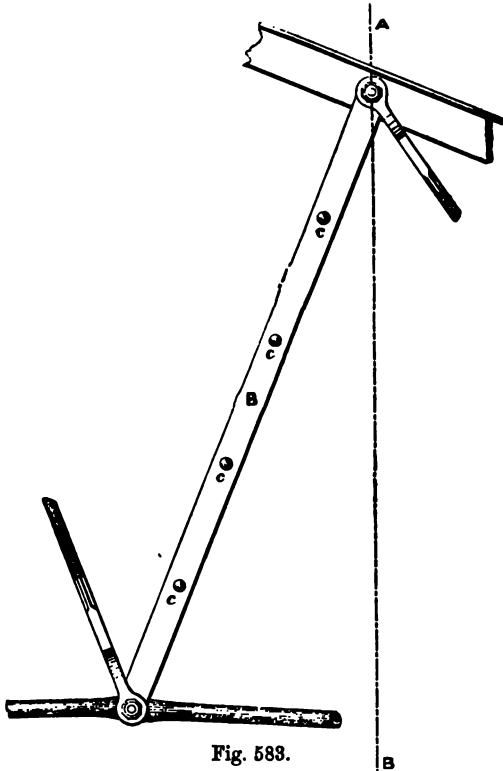


Fig. 583.




Fig. 584.

viz. those made of angle or T iron, are frequently used for roofs of spans up to 40 or 60 feet.

A better form, however, is the strut of cruciform section, consisting of two T irons riveted back to back, as in Fig. 252, Part I.

Strong and light struts formed out of wrought-iron gas tubing fitted with cast-iron sockets at the ends are sometimes used.

Another very good form was merely noticed in Part I. It consists of two flat bars *BB*, kept apart by cast-iron distance pieces, *ccc*, varying in length so as to form a strut tapering from the centre toward the ends.

Such a strut is shown in Fig. 576, and on an enlarged scale in Figs. 583, 584.

In very large roofs a strut on the same principle as the last mentioned may be constructed by using 4-angle irons kept apart by cross-shaped distance pieces. These crosses are made smaller and smaller as they approach the ends of the strut, which is therefore shaped somewhat like a weaver's shuttle, being wide in the middle and tapering towards its extremities.

Such struts are required only for roofs of very wide span.

Tie and Tension Rods in large roofs are of circular rod iron, or flat bars, as already described for smaller roofs—and are secured in a similar manner.

Flat bars, both single and double, are more common in large than in small roofs, as they are less liable to sag than circular rods of the same tensile strength.

Fig. 572 shows flat tension bars, which, it will be observed, are rather clumsy in appearance when used in a small roof.

In Fig. 573 the lower tension rod is of double flat bars.

When a tie rod is very long it frequently is cut in two—eyes being formed on the ends of the portions through which pass the bolts securing the feet of the struts. See Fig. 585.

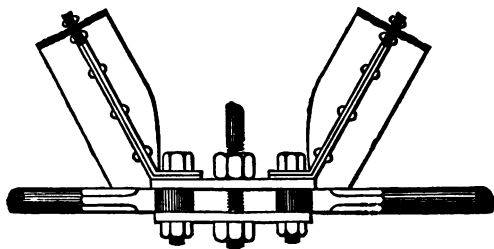


Fig. 585.

The tie rod should be so arranged with screw shackles¹ or cotttered

¹ A screw shackle or union joint consists of a short hollow prism of iron with reverse screws tapped inside its ends, into which fit the screws on the ends of the portions of the rod to be connected; as the shackle is turned the ends are drawn inwards and the rod is shortened.

joints that it can be altered in length in order to set up the roof when required.

In large roofs it is an advantage to arrange the tension rods in the same way, either with union screws—cottered joints—or with reverse screws at either end, so that by revolving the rod the screws turn opposite ways, and lengthen or shorten the rods.

These shackles, etc., are not shown in the small scale figures. They are often omitted in practice, the result being that the tension rods either become slack or undergo a greater strain than they are intended to bear.

Suspending Rods for large roofs are similar in every respect to those described in Part I., and nothing more need be said regarding them.

Diagonal Ties are long rods passing from the foot of a principal rafter diagonally across three or four trusses, to the under side of which they are secured, until they reach the ridge; they are generally arranged so as to converge in pairs, as shown in Fig. 586,

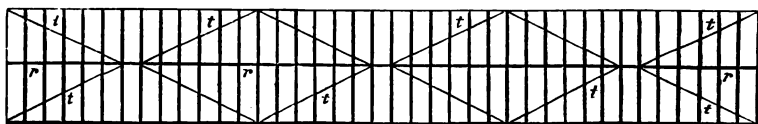


Fig. 586.

and should be furnished with union or cottered joints, so that they may be adjusted as to length: these joints are not shown in the figure.

Such tie rods should be fixed to all large iron roofs, to secure them against the effects of gales blowing at an inclination to the length of the roof.

They are hardly necessary when the gables of the building are of solid masonry, but in many cases, even when the roof is not hipped, the gable end is merely filled in with glass, and they are then required.

Shoes and Heads.—The extremities of principal rafters of large roofs are secured in cast-iron heads and shoes with cottered joints, as already explained in Part I.

The first illustration here given is one from Dempsey's *Iron Roofs*, applicable also to small roofs, but omitted for want of space in Part I.

It is useful when there is no room on the wall upon which to rest the shoe, which is therefore bolted to the face of the wall as

shown; where appearance is an object, the plate and nut shown on the outer face may be let into a recess in the wall and concealed from view.

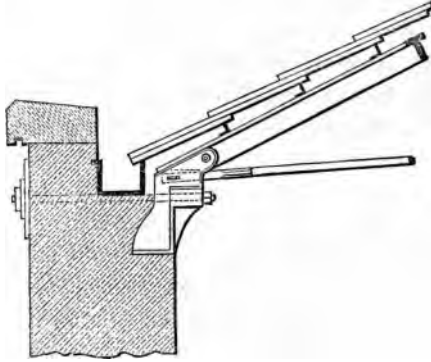


Fig. 587.

Fig. 588 is an enlarged representation of the shoe in the roof, Fig. 573. It has the disadvantage of being without any arrange-

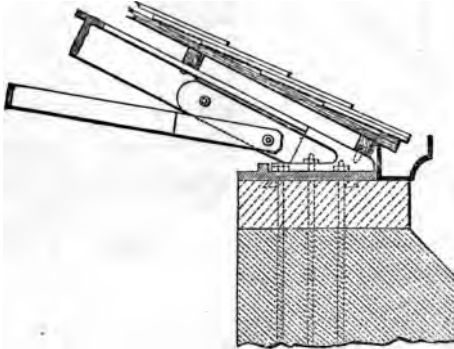


Fig. 588.

ment for altering the length of the tie rod in order to set up the roof.

Expansion and Contraction Arrangements.—Iron expands or contracts about $\frac{1}{150000}$ of its length for every degree on the Fahrenheit scale.

It is therefore important to make provision in all large roofs for the expansion and contraction caused by changes of temperature.

This is generally done by leaving one end of the truss free to move horizontally.

In roofs of great span the chair or saddle at the free end of the

truss is supported on oiled rollers, so that it can move outwards and inwards with ease under changes of dimension caused by the effects of temperature.

In smaller roofs the same object may be attained by supporting the chair on a sheet of lead, and making the holes for the bolts which secure it, slots of an oblong form, so that the chair can move slightly backward and forward on the lead.

It is better to fix the end from which the heaviest gales are most likely to blow.

"In countries liable to hurricanes extra precautions must be taken, and not only should the roof be strongly braced together by wind ties, but the entire structure should be well anchored to the ground. The latter precaution is especially necessary in buildings open at the sides or ends, and liable therefore to severe wind pressure below the roof."¹

Fig. 589 shows the arrangement adopted to allow for expansion

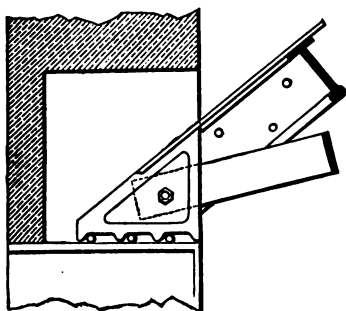


Fig. 589.

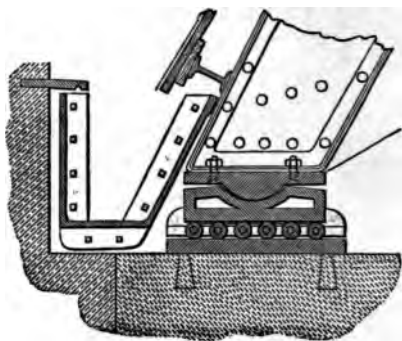


Fig. 590.

and contraction in the roof over the Lime Street Station, Liverpool, the details of which will be found in Dempsey's *Railways*, or in his work on *Iron Roofs*.

The objection to this arrangement is that when the principal rafter is depressed under the force of the wind, an uneven stress comes upon the joint, the roller on the inner side is more compressed than the others and is liable to be crushed. To prevent this the joint may be formed as in Fig. 590, which shows the expansion arrangement adopted for the roof of the Cannon Street Railway Station.² The junction of the roof with the upper part of the casting which rests upon the rollers is hinged with a circular

¹ *Works in Iron*, by Ewing Matheson.

² Hunter's *Record of Modern Engineering*, 1866.

joint, so that, whatever the inclination of the principal rafter may be, the stress passes through the centre of the group of rollers and is distributed evenly over them.

Attachment to Columns.—Iron roofs covering railway stations, sheds, etc., very frequently rest either one or both sides on the heads of iron columns.

The attachment of the foot of the rafter to the head of the column is effected in several different ways; one or two of which will now be described.

Fig. 591 shows the head of a column supporting a small roof. The shoe, *s*, which receives the foot of the rafter, is cast in one piece with the column. The swan-neck bend, *b*, receives the water from the gutter, *g*, and conveys it into the column, which acts as a down pipe.

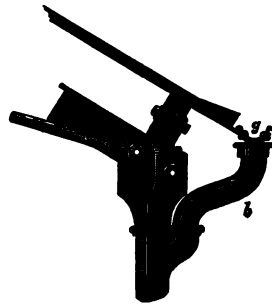


Fig. 591.

Fig. 592 is a side elevation, and Fig. 593 is a front elevation,

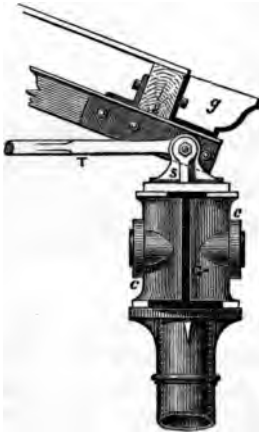


Fig. 592.

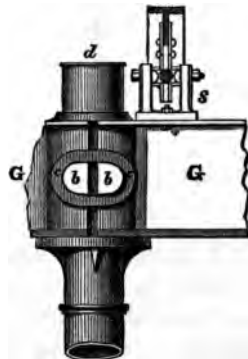


Fig. 593.

showing the method in which the roof described in page 382 is attached to the columns on which it rests.

In this case the chair, *s*, is a distinct casting, and bolted on to the head of the column.

The intervals between adjacent columns are spanned by cast-iron girders, *G*, the ends of which are swelled out and brought round so as to grasp the head of the column.

On the ends of these girders are cast burrs, *b*, and round these is a coupling link, *c c*, of wrought iron, so as to hold the girders together.

In this case the gutter, *g*, discharges through the socket *d*, down the interior of the column.

The socket prevents the chair from being placed immediately on the head of the column; it is necessarily a little on one side, as shown at *S*, which theoretically is a bad arrangement, as it causes an extra bending stress upon the girder; practically, it is so close to the support that this does not very much matter.



Fig. 594.

Fig. 594 shows an arrangement by which the foot of the principal rafter is brought more immediately opposite the column. A cast iron clip receives the ends of the contiguous lengths of the gutters, and has on its inner side a projecting ear or lug to which is bolted the foot of the principal rafter of the roof. The clip itself is fastened down by four bolts.

Lanterns and Ventilators.—The variety of forms of these is very great; one or two different kinds are shown in the accompanying illustrations.

Fig. 572 shows a small ridge ventilator supported by a central cast-iron standard.

In Fig. 575 a large ventilator is formed with vertical T iron

side standards, and covered with corrugated iron supported upon curved T iron rafters.

In Fig. 573 the ventilator has a central cast-iron standard in addition to T iron standards on each side, the latter being filled in with wooden louvres. The covering to the ventilator is the same as that of the roof, *i.e.* slating on boards fixed to angle irons filled in with wood.

Fig. 595 is an enlarged section of the lantern and ventilator surmounting the roof in Fig. 576.

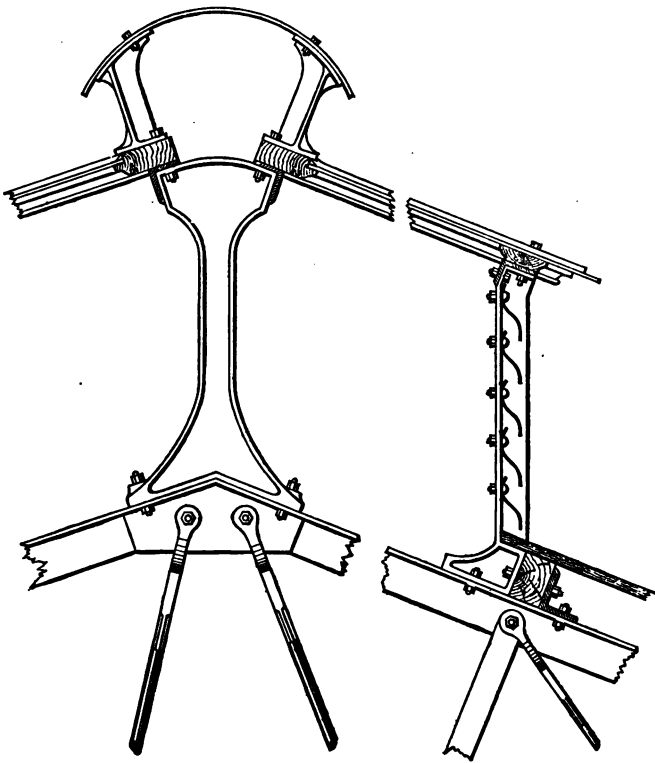


Fig. 595.

The construction is evident from the figure, and requires but little explanation.

The skylight itself is supported by a central cast-iron standard bolted to the head, which receives the rafters, and has side standards of the same material, with galvanised iron louvres,

It is covered by an ordinary wooden skylight sash, having deep bars filled in with glass.

Surmounting the skylight is a ventilator open at the sides, which are formed by cast-iron standards, supporting a covering of corrugated iron bolted to flanges formed upon their upper extremities.

Coverings for Iron Roofs.—The coverings used for wooden roofs have already been described at p. 142, Part I., and p. 262, Part II.

Most of these can be used for iron roofs, in some cases with slight modifications in the way of laying.

Slating.—Duchess slates are very often used for iron roofs, and they may be laid either upon boards, as described at p. 144, Part I., and shown in Fig. 588, Part II.; or upon angle iron laths, as mentioned at p. 147, Part I., and shown in Fig. 587, Part II.

Tiling of all kinds may also be used, laid upon laths in the same manner as slating.

Corrugated Iron may be used in the shape of an arch to form the roof itself, without supporting trusses, as mentioned at p. 130, Part I.; or it may be arched and supported by curved angle or T irons; or it may be laid in sheets upon regular trusses of any form.

The sheets may be laid with the corrugations running either way, either horizontally or down the slope of the roof.


The sheets are of course strongest in the direction of the length of the corrugation; the strength depends upon the depth of the corrugation, thickness of iron, etc.; and in this direction they may be left to span spaces of from 8 to 15 feet without support.

If the corrugations run up and down the slope of the roof, the sheets are supported upon purlins; if the corrugations are horizontal, the sheets rest upon the principals themselves, or when these are widely spaced, upon secondary rafters.

Zinc may be laid upon boarding with wooden rolls, as described at p. 269; or on the Italian system, as described at p. 272.

Lead is now very seldom used in iron roofs, having been almost entirely superseded by zinc.

Glass is a good deal used in large skylights, which often form a considerable portion of the slope of the roof, and run nearly throughout its length.

It is also, in large roofs, extensively used upon the "*ridge-and-furrow*" system. This consists in forming small  roofs between the secondary rafters, which rest upon the purlins. The ridges of these small roofs generally run horizontally, and their slopes drain into gutters, lying along the upper flanges of the secondary rafters.

Designing Iron Roofs.—In designing an iron roof it should be borne in mind that as many of the braces as possible should be in tension, and the struts should be as short as possible.

When there are only a few purlins widely spaced on the principal rafters, they should be immediately over the joints of the bracing of the roof, so as to prevent bending strains as much as possible.

In such a case the principal rafter is in compression throughout its length.

When, however, the weight is distributed throughout the length of the rafter by means of a number of small purlins, the principal rafter is subjected also to a transverse strain.

In either case the struts should not be so far apart as to necessitate the rafter being of too large a section for economy.

Elaborate forgings should be avoided, and all joints should be as simple as possible. The cast-iron connections between struts and ties so common in old roofs should be avoided.

"In a roof which is rectangular in plan the distance apart of the principals should be from $\frac{1}{8}$ to $\frac{1}{4}$ the span, and if these limits be overstepped there will be an unprofitable employment of material."¹

It is sometimes economical to adopt the larger rather than the smaller interval, because, when the trusses are widely spaced, there is necessarily a large cross section given to the struts, but their length remains the same, they are, therefore, less liable to buckle under the thrust that comes upon them, and thus more resistance is obtained from an equal weight of metal.

A hipped roof is more expensive than one with gable ends, but the hipped end is a considerable support to the roof, and itself offers much less resistance to the wind than a gable.²

Trusses which do not contain vertical members are not suitable for hipped roofs (see p. 380).

¹ Matheson.

² Maynard.

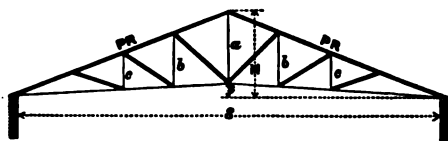
TABLE OF SCANTLINGS OF IRON ROOFS¹ (from actual practice).

Fig. 596.

Rise, $H = \frac{s}{4}$.Rise of Tie Rod, $t = \frac{s}{8}$.

Principals 6 feet 8 inches apart.

| Span, s. | Rafter, PR. | Struts, S. | King Bolt. | Queen Bolt. | | Tie Rod. | | |
|----------|---|---|----------------|----------------|---------------|----------------|----------------|----------------|
| In feet. | T iron. | T iron. | a. | b. | c. | d. | e. | f. |
| | Inches. | Inches. | | | | | | |
| 20 | $2\frac{1}{2} \times 2 \times \frac{3}{8}$ | $2 \times 2 \times \frac{3}{8}$ | $\frac{3}{8}$ | $\frac{5}{8}$ | .. | $\frac{5}{8}$ | $\frac{3}{4}$ | .. |
| 25 | $2\frac{3}{4} \times 2\frac{1}{2} \times \frac{3}{8}$ | $2 \times 2 \times \frac{3}{8}$ | $\frac{7}{8}$ | $\frac{3}{4}$ | $\frac{5}{8}$ | $\frac{7}{8}$ | 1 | ... |
| 30 | $2\frac{3}{4} \times 2\frac{1}{2} \times \frac{1}{2}$ | $2\frac{1}{2} \times 2\frac{1}{2} \times \frac{3}{8}$ | 1 | $\frac{3}{4}$ | $\frac{5}{8}$ | 1 | $1\frac{1}{8}$ | ... |
| 35 | $3 \times 2\frac{3}{4} \times \frac{1}{2}$ | $2\frac{1}{2} \times 2\frac{1}{2} \times \frac{3}{8}$ | 1 | $\frac{3}{4}$ | $\frac{3}{4}$ | 1 | $1\frac{1}{8}$ | $1\frac{1}{4}$ |
| 40 | $3\frac{1}{4} \times 3 \times \frac{1}{2}$ | $2\frac{1}{2} \times 2\frac{1}{2} \times \frac{3}{8}$ | $1\frac{1}{8}$ | $\frac{7}{8}$ | $\frac{3}{4}$ | $1\frac{1}{8}$ | $1\frac{1}{4}$ | $1\frac{3}{8}$ |
| 45 | $4 \times 3\frac{1}{4} \times \frac{1}{2}$ | $3 \times 3 \times \frac{1}{2}$ | $1\frac{1}{4}$ | 1 | $\frac{7}{8}$ | $1\frac{1}{8}$ | $1\frac{1}{4}$ | $1\frac{3}{8}$ |
| 50 | $4 \times 3\frac{1}{4} \times \frac{5}{8}$ | $3 \times 3 \times \frac{5}{8}$ | $1\frac{3}{8}$ | 1 | $\frac{7}{8}$ | $1\frac{1}{4}$ | $1\frac{3}{8}$ | $1\frac{1}{2}$ |
| 55 | $5 \times 4\frac{1}{2} \times \frac{5}{8}$ | $4 \times 4 \times \frac{1}{2}$ | $1\frac{3}{8}$ | $1\frac{1}{8}$ | 1 | $1\frac{3}{8}$ | $1\frac{1}{2}$ | $1\frac{5}{8}$ |
| 60 | $5 \times 4\frac{1}{2} \times \frac{3}{4}$ | $4 \times 4 \times \frac{5}{8}$ | $1\frac{3}{8}$ | $1\frac{1}{8}$ | 1 | $1\frac{1}{2}$ | $1\frac{5}{8}$ | $1\frac{3}{4}$ |

¹ From Molesworth's *Pocket Book*.

CHAPTER XXIII.

PLASTERERS' WORK.

Plastering consists in applying different compositions resembling mortar to walls and ceilings, in thin layers, so as to form smooth surfaces, for the sake of appearance and cleanliness.

The plaster may either be laid on the face of the wall itself, or it may be spread over a screen of laths fixed in any required position.

The latter operation only is technically known as "*plastering*," the application to the wall itself being called "*rendering*."

Plastering and rendering are applied in one, two, or three coats, according to the importance of the building and the degree of finish required.

Materials used by the Plasterer.—The materials used for plastering will be fully described in Part III.

In the following brief notes information is given sufficient only to enable the student to understand the processes described in this chapter.

LIMES AND CEMENTS.—*Lime.*—The pure or fat limes (see Part III.) are generally used for plastering, because in using hydraulic limes minute unslaked particles are apt to get into the work, and to *blow*, throwing out bits of plaster, and injuring the surface.

Plaster of Paris is calcined gypsum. When mixed with water to form a paste it sets very quickly, expanding as it sets, and attains its full strength in an hour or two.

Portland Cement is made from chalk and clay mixed together in water, then burnt and ground. It is the strongest cement in use, but sets more slowly than the other varieties.

Roman Cement, Medina Cement, Harwich, Calderwood, Whitby, Mulgrave's, and Atkinson's Cement, are all natural cements of the same description. They are made by burning nodules found in different geological formations. These cements set very rapidly, but attain no great ultimate strength.

Keene's Cement, Parian Cement, Martin's Cement, are all manufactured by recalcining plaster of Paris with different substances.

These cements are useful only for indoor work; they set very quickly, and can be painted within a few hours.

Whiting is made by grinding white chalk to a fine powder.

SAND AND WATER.—Very clean sand and fresh water should be used for plasterers' work (see Part III.)

MIXTURES.—*Coarse Stuff* is a rough mortar, containing 1 or $1\frac{1}{2}$ part of sand to 1 of lime by measure, thoroughly mixed with long ox hair (free from grease and dirt), in the proportion of 1 lb. hair to 3 cubic feet of mortar.

Fine Stuff is pure lime slaked with a small quantity of water, and afterwards saturated until it is of the consistence of cream; it is then allowed to settle and the water to evaporate, until thick enough for use. For some purposes a small quantity of white hair is added.

Plasterers' Putty is lime dissolved in water, and then run through a hair sieve. It is very similar to fine stuff, but prepared somewhat differently, and always used without hair.

Gauged Stuff consists of from $\frac{3}{4}$ to $\frac{4}{5}$ plasterers' putty, and the remainder plaster of Paris. The last-named ingredient causes the mixture to set very quickly, and it must be used in small quantities. The proportion of plaster used depends upon the time to be allowed for setting, the state of the weather, etc., more time required in proportion as the weather is damp.

For cornices the putty and plaster are often mixed in equal proportions.

Stucco is a term vaguely applied to many mixtures containing common and hydraulic limes, also to some cements.

Common Stucco contains three or four parts sand to one of hydraulic lime.

Trowelled Stucco consists of $\frac{2}{3}$ fine stuff (without hair), and $\frac{1}{3}$ very fine clean sand.

Bastard Stucco is of same composition as trowelled stucco, with the addition of a little hair.

Rough Cast consists of sand, grit, or gravel, mixed with hot lime in a semi-fluid state.

Size is thin glue made by boiling down horns, skins, etc.

Double Size is boiled for a greater time so as to be stronger.

LATHS are thin strips of wood, generally fir, sometimes oak, split from the log, 3 or 4 feet long, about an inch wide, and varying in thickness according to their class.

| | | | | | |
|---------------------------|-----------|---|---|---|----------------------------|
| <i>Single laths</i> | are about | . | . | . | $\frac{3}{16}$ inch thick. |
| <i>Lath-and-half lath</i> | " | . | . | . | $\frac{1}{4}$ " |
| <i>Double laths</i> | " | . | . | . | $\frac{3}{8}$ " |

Lathing.—Laths to receive plaster may be fixed either in a horizontal position as for ceilings, vertically as a covering for walls and partitions, or in such a manner as to form inclined or curved surfaces.

Lathing Ceilings.—For this purpose the laths are nailed to the underside of the ceiling joists (see Figs. 194 and 228, Part I.), (or in many cases to the bridging joists; see Fig. 192, Part I.), which should, if necessary, be brought into a horizontal plane by adding slips of wood called "firrings."

The laths are fixed parallel to one another, and $\frac{3}{8}$ inch apart so that the intervals afford a key for the plaster. Every lath is secured by nails, one being driven through the lath wherever it crosses a joist or batten. The moist plaster passes between the laths, forming protuberances at the back—these harden and form what is known as the "*key*," which prevents the plaster from falling away from the laths and keeps it in position. Care should be taken that the ends of the laths do not overlap one another, and that they are attached to as small a surface of timber as possible, so that the key may not be interrupted.

If the joists are of wood, a narrow fillet may be nailed along the under side of each to receive the laths, so as to interfere with the key of the plaster as little as possible.

The laths should be laid in "bays," so as to break joint in portions 3 feet wide (see Fig. 597).

The thickest laths should be used for ceilings, and for very important work they should be nailed with zinc nails, so that there may be no danger of their oxidising, and the rust showing on the surface.

*Battened Walls*¹ are so called because wooden battens about 2 to 2½ inches wide, and from $\frac{5}{8}$ to 1 inch thick, are fixed vertically at central intervals of about 12 inches, to receive the laths.

The battens are nailed to wood plugs in the wall, except where flues occur, in which case they should be secured by iron holdfasts.

The laths are nailed as above described. They should be fully $\frac{3}{4}$ inch clear of the inside of the wall, and about $\frac{3}{8}$ inch apart—thus affording a key which is sufficient to support the plaster in its vertical position.

Lath-and-half laths should be used for walls and partitions subject to rough usage, and single laths for ordinary walls.

Walls likely to be damp should be battened, as the clear air-

¹ *Sc. Strapped walls.*

space between the masonry and the lathing insures the plastered surface being constantly dry; but battened walls harbour vermin, the woodwork is subject to decay, and is injurious in case of fire.

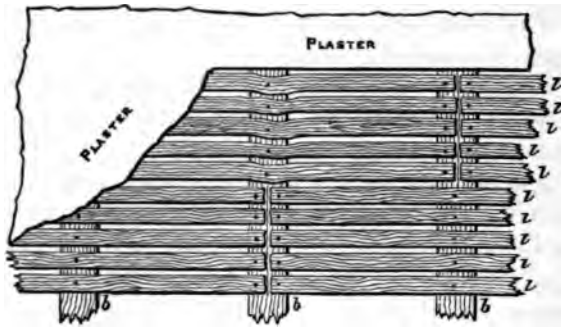


Fig. 597. *Elevation.*

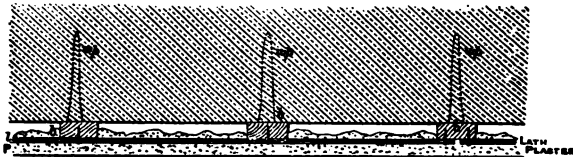


Fig. 598. *Sectional Plan.*

Figs. 597, 598 show a sectional plan and an elevation of a portion of a battened wall, with some of the plaster removed, in order to show the laths *ll* and battens *bb* below.

The laths are shown as breaking joint in bays. This is not absolutely necessary for walls, but is often done in vertical work as well as for ceilings.

Counter-lathing is necessary when plaster has to be applied close to a flat surface, such as that of a large beam. In such a case laths are nailed on to the surface of the beam an inch or two apart, and across these is nailed the lathing to receive the plastering.

This second layer of laths is termed *counter-lathing*. Being clear of the surfaces of the beam, a key is afforded, and the plaster adheres to the first layer of laths, which it would not do if they were nailed on to the beam itself.

*Brander*ing is a Scotch term applied to a kind of counter-lathing. It has already been described at page 100, Part I.

Plastering.—ONE-COAT WORK; known as "*Lath and Plaster one Coat*;" or, "*Lath and Lay*."—This consists of a layer of "coarse

stuff" of an uniform thickness, spread over the laths with a smooth and even surface. The plaster should be stiff enough to hold together, but just sufficiently soft to pass between the laths, being worked well in between them with the point of the trowel, and bulging out behind the laths into excrescences, which form a key, and keep the plaster in position.

This is the cheapest kind of plastering, and is used only in inferior buildings, or behind skirtings, plinths of partition shutters, window backs, etc.

In some parts of the country one-coat work is never used to cover lathing, but only for rendering on walls.

TWO-COAT WORK; described as "*Lath, Plaster, and Set;*" or, "*Lath, Lay, and Set.*"

1st Coat.—The first coat is laid upon the laths as above described, but the surface, instead of being smoothed, is roughed over by scratching it with a birch-broom, so as to form a key for the second coat.

Setting.—The second coat, or "setting," is a thin layer of fine stuff, or putty, or gauged stuff, and should not be trowelled on till the first layer is stiff. If the latter has become very dry, it must be moistened before the second coat is applied, or the latter in shrinking will crack and fall away. As the fine stuff is laid on, the surface is smoothed by drawing backwards and forwards over it the wet brush used for damping the first coat.

THREE-COAT WORK.—Described as "*Lath, Plaster, Float, and Set;*" or, "*Lath, Lay, Float, and Set.*"

Pricking-up is the name given in this case to the first coat, which is laid as before described; but in order to form a good key for the next coat the surface is scored over with the point of a lath in deep scratches, crossing each other diagonally in sets of parallel lines about 3 or 4 inches apart.

Scratching tools, with several points, are sometimes used.

*Floating.*¹—The second, or "floated" coat, is applied when the pricking-up is sufficiently dry to resist pressure.

It consists of fine stuff, with the addition of a little hair, and derives its name from its being laid on with "floats" in the following manner:—

In order to ensure the surface of the plaster being in a true plane, narrow bands or "screeds" of plaster, about 6 or 7 inches wide, are formed at the angles, and at intervals of from 4 to 10 feet

¹ Sc. *Straightening.*

on the wall or ceiling. The surfaces of these are then brought into the required plane by passing long straight-edges over them.

Horizontal screeds for ceilings should moreover be levelled, and vertical screeds "plumbed" up from the skirting grounds (see page 299), before proceeding farther.

The spaces between the screeds are then "filled out" flush with the fine stuff, and smoothed off with straight-edges, or with a large flat board, having two handles at the back, and known as a "Derby float."

The surface is then gone over with a smaller hand float, and any defects made good by adding a little soft stuff.

Setting.—Before applying the third coat or setting, the floated surface should be scratched over with a broom, and then allowed to become perfectly dry.

The setting is varied in composition to suit the nature of the finish intended for the surface.

If the surface is to be papered, it should be "set with fine stuff;" if it is to be whitened, it should be "set with putty and washed sand;" and if it is to be painted, it should be finished with "trowelled stucco" or plaster.

"Set with Fine Stuff."—For surfaces to be papered the setting coat should be of fine stuff containing a little hair, and the finished work would be described as "Lathed, Plastered, Floated, and Set with Fine Stuff."

"Set with Putty and Plaster."—If the wall or ceiling is to be whitened or coloured, the third coat should be of plasterers' putty mixed with a little fine sand, and sometimes with a little white hair.

If required to set quickly, especially in damp weather, from $\frac{1}{6}$ to $\frac{1}{3}$ plaster of Paris is added to the stuff, which must be gauged (or mixed) in small quantities (see Gauged Stuff, p. 396).

This work, when finished, would be known as "Lathed, Plastered, Floated, and Set with Putty and Plaster;" or it would also come under the general designation of *Gauged Work*.

Great care should be taken to ascertain that the floated coat is dry before this setting is applied, otherwise the coats will shrink unequally, and the last coat will be full of cracks.

Rendering is the term used for the process of applying plaster or cements to the naked surface of walls.

With regard to plaster, it is applied in exactly the same way as upon laths, excepting a slight difference in the first coat.

The surface of the wall to be rendered should be rough so as to form a key to which the plaster will firmly adhere. This may be secured by leaving the mortar joints unstruck and protruding when the wall is built; or the joints may be raked and the face hacked and picked over to give it the necessary roughness.

Rough Rendering is the first coat laid to receive more finished work.

It is of coarse stuff, but contains a little less hair than that used on laths, and is applied in a moister state, which causes it to adhere better to the wall.

The holes and crevices in the wall should be entirely filled up in applying this coat, but the surface of the plaster need not be scratched or scored over.

Floating and Setting are performed in exactly the same way as upon laths.

GAUGED WORK is formed by the addition of a proportion of plaster of Paris to any coat of plaster, in order to cause it to set more rapidly. Unless the process is very carefully conducted cracks will occur in the plaster. The quantity of plaster added depends upon the rapidity of setting required, the dampness of the weather, etc.

Cornices, Mouldings, and Ornaments, should be as light as possible.

If they do not project more than 2 inches, a backing of coarse stuff will be sufficient to support them; but if the projection is 6 or 8 inches, or more, brackets of wood, roughly cut to the section of the intended cornice, must be fixed along the wall at intervals of 10 or 12 inches. Upon these laths are nailed and "pricked up"—that is, covered with a thick coat of coarse stuff, so that a rough edition of the future cornice is produced. A mould made of zinc, or of beech with zinc or brass edges, is then for the time "muffled" by covering the profile edge with a layer of plaster of Paris about $\frac{1}{8}$ inch thick. The mould is then drawn along over the surface of the rough cornice of coarse stuff already formed. It is guided by battens fixed along the lines where the cornice will cut the ceiling and wall, and the effect produced by it is to remove the superfluous stuff and leave the cornice moulded approximately to the form required, the surface all over being about $\frac{1}{8}$ inch within the intended profile. The muffling is then removed from the mould, and the surface of the cornice covered with gauged stuff, over which the mould is worked until the exact form of the cornice is produced.

As the stuff sets very quickly, it should be frequently sprinkled, and portions between projections or other breaks in the line should be finished off at once.

Where a portion of the moulding projects 3 or 4 inches beyond the general surface, it may be sustained by nails driven into the wall or bracket about 6 inches apart, and connected by tarred string.

Mitres in angles and small breaks are finished by hand, and indentations are left for enrichments, which may be cast in plaster of Paris, or composition, and cemented into their place.

These indentations in the plaster are formed by projections left on the mould.

Ornaments of various kinds are made of plaster of Paris cast in bees'-wax moulds. When large and heavy they should be secured by screws to woodwork.

Carton pierre, or *Papier Maché*, consisting of paper formed into pulp and forced into moulds, is also used for ornaments. Though not capable of receiving so sharp an outline as plaster of Paris, it is more easily transported without breaking, lighter, easier to fix, and very useful—especially in the country, where skilled workmen to cast plaster ornaments are not easily obtainable.

There are several other materials used for making the mouldings and ornaments required by the plasterer, which it would be beyond the province of these Notes to describe.

Fig. 599 shows a cornice at the angle of a room in sectional elevation.

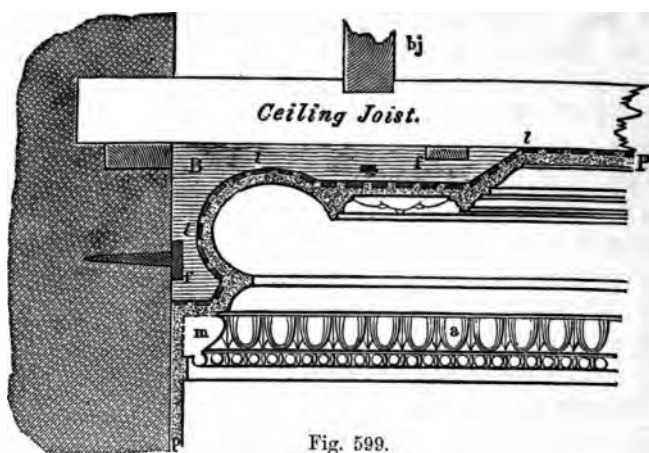


Fig. 599.

B is the rough bracket cut approximately to the shape of the cornice. This bracket is attached to the fillets *ff*, which are

fixed as shown, and carefully levelled. In some cases the bracket is nailed to the bottom or sides of the ceiling joists, and it is very frequently built into the wall, as shown at C in Fig. 600.

ll are the laths nailed to the bracket to form the surface and key for the plastering.

M is the moulding, which is made separately, and fixed (after the cornice is run and set) into the recess left for it, shown in Fig. 599 in dotted lines.

An ornament is also shown in the recess left in the soffit of the cornice. Holes are broken through the plaster forming this soffit, so that the soft plaster at the back of the ornament may pass between the laths themselves, and thus form a key, which secures it directly to the lathing.

The coved portion of the cornice is sometimes formed in papier maché or light plaster casts, and fixed without any supporting brackets, being fitted in between the projecting mouldings above and below, and secured with plaster of Paris.

Large Coved Cornices are supported by brackets or cradling, built up of pieces of board. Two or more are used, according to the size of the cornice, and the surface is covered with lathing, and finished in the same way as small cornices.

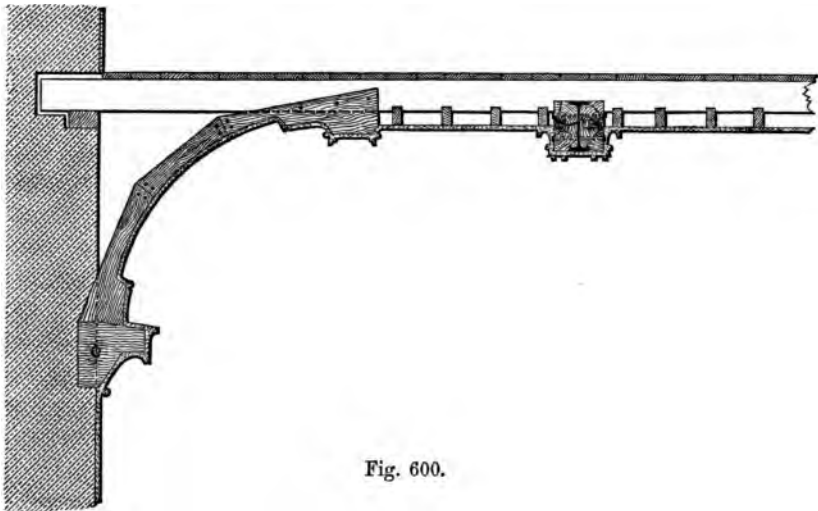


Fig. 600.

Fig. 600¹ shows a bracket built up in three pieces, which abut

¹ The scale of this figure is so small that neither the lathing nor counter-lathing is shown.

against one another, other pieces being nailed over the joints, the upper extremity being nailed to the joists of the floor above, and the lower end resting upon the rough bracket of the projecting cornice below, which is built into the wall.

This figure shows also the method of covering a beam projecting below the surface of the ceiling. The sides and soffit of the beam are counter-lathed, plastered, and decorated by mouldings struck on the plaster, or attached to it.

In some cases the beam is covered with cradling, which makes it up to the size required for the design of the decoration, and, by keeping the laths at a distance, affords a key without counter-lathing.

"Very large projecting mouldings and cornices inside buildings are even made of coarse canvas strained over a light framework, and washed over with gauged stuff. They are easily carried up and fixed in position."¹

Rendering in Cement.—The wall to be rendered should itself be dry, but the surface should be well wetted, to prevent it from absorbing at once all the water in the cement; it should also be sufficiently rough to form a good key for the cement.

Screeds may be formed on the surface, and the cement should, if possible, be filled out the full thickness in one coat, and of uniform substance throughout.

Any excess of cement in projections, mouldings, etc., should be avoided, by dubbing out with bits of brick.

When cement is put on in two or three coats, the coats already applied should on no account be allowed to dry before the succeeding layers are added.

The coats last applied are very liable to peel off under the effects of frost or exposure.

Many of the quick-setting cements, such as those mentioned below as adapted for internal work, are rendered in one thickness of cement and sand, and the face afterwards finished and brought to a surface with neat cement.

Sand may be added with advantage to most cements, to prevent excess in shrinkage and cracking; sometimes a very large proportion is used (see Part III.)

External Work.—The material best adapted for rendering the external surfaces of walls is Portland cement. Other materials

¹ Seddon's *Notes*.

such as Roman cement, are, however, frequently used, but have not the same adherence, appearance, or weathering properties.

The objection to Portland cement, from an economical point of view, is its first cost, the greater labour required in using it as compared with that necessary for other cements, and also the time frequently wasted upon it, for, in consequence of its setting slowly, there is a tendency for the men to go on working it too long.

In order that it may set as quickly as possible, the less heavy varieties should be selected for rendering (see Part III.)

External rendering is often marked with lines, so as to represent blocks of ashlar stone.

Both Portland and Roman cement are mixed with a good proportion of sand for external work.

The Portland cement may be used in the proportion of 1 cement to 3 sand, and the Roman cement with 1 part of sand to 1 of cement for upright work.

For cornices, mouldings, etc., about half the quantity of sand should be used, but some is required to prevent cracking.

Internal Work.—The Roman cements, Parian, Keene's, Martin's cement, and others of a similar character, are eminently adapted for internal work.

The treatment of the several descriptions varies slightly, but they are generally laid on in one thickness of from $\frac{1}{2}$ to $\frac{3}{4}$ inch, in the proportion of 1 cement to 1 or 2 of sand, the surface being afterwards finished with a thin coating of neat cement.

Most of them can be brought to a beautiful hard polished surface, and are ready to receive paint in a few hours.

These cements are largely used, not only for rendering walls, but for forming skirtings, mouldings, pilasters, angle beads, and other internal finishings of a building.

Portland cement is also used for internal work often with a very large proportion of sand, as much even as 9 parts of sand to 1 of cement being recommended.

Stucco.—*Common Stucco*, composed of $\frac{3}{4}$ sand and $\frac{1}{4}$ hydraulic lime, used to be greatly in vogue for outside work, but has now been almost superseded by the various cements introduced during the last few years.

To receive stucco, the surface of the wall should be rough to form a key, thoroughly wetted, and freed from dust. The stucco is then laid on in a fluid state with a brush, like whitewash, after

which a coat may be applied as in common rendering, unless the work is to be floated, in which case screeds must be formed round the margin of the wall, and vertically, at intervals of 3 or 4 feet throughout its length. These are filled out with stucco, which is smoothed by a straight-edge passed over it to remove any superfluous plaster, and then well rubbed with the hand-float and brought to a hard and glossy surface.

When cornices are to be formed, projecting bricks or tiles must be left to support them. These are covered with stucco, on which the moulding is run as in internal work.

Plaster of Paris quickens the setting of the stucco, but should not be used for outside work, as it will not stand exposure.

Rough Stucco is an imitation of stone. It is spread in a thin coat on a floated ground, which should be in a half-dry state, and is then gone over with a hand-float covered with a piece of felt, which raises the grit of the sand and gives the surface of the work the appearance of stone.

This also has been superseded by cement, which is treated in the same way when it is required to have a rough surface.

Trowelled Stucco, consisting of $\frac{2}{3}$ fine stuff and $\frac{1}{3}$ sand, is worked upon the floated coat, which must be perfectly dry before it is applied. The stucco is beaten and tempered with water until it is of the consistency of thin paste. It is then spread with a large trowel over the surface, to the thickness of about $\frac{1}{8}$ inch, as evenly as possible, and in small portions of about 2 or 3 square yards. The surface is then wetted and rubbed down with the hand-float (being sprinkled with a wet brush during the operation), until a surface is produced as hard and smooth as that of polished marble.

This process is used for surfaces to be painted, and for superior ceilings to be finished white. It is not so strong as the finishing with fine stuff.

Bastard Stucco is, like trowelled stucco, laid upon the second or "floated coat," but it is slightly different in composition, as it contains a little hair, is not hand-floated, and is finished with less labour than the other.

This and trowelled stucco are chiefly used for inside work intended to be painted.

Selenitic Plaster is made by adding a small proportion of plaster of Paris to hydraulic limes, which are then known as "prepared Selenitic Limes."

The effect of this is to stop the slaking of the lime, and to convert it into a kind of cement.

The following instructions for its preparation are from the circular of the patentees:—

"If prepared in a Mortar Mill.—1st, Pour into the pan of the edge-runner four full-sized pails of water.

2d, Gradually add to the water in the pan 2 bushels of prepared selenitic lime, and grind to the consistency of creamy paste, and in no case should it be thinner.

3d, Throw into the pan 10 or 12 bushels of clean sharp sand, burnt clay, ballast, or broken bricks, which must be well ground till thoroughly incorporated. If necessary, water can be added to this in grinding, which is preferable to adding an excess of water to the prepared lime before adding the sand.

When the mortar mill cannot be used, an ordinary plasterer's tub (containing about 30 or 40 gallons) or trough, with outlet or sluice, may be substituted.

"If prepared in a Plasterer's Tub.—1st, Pour into the tub 4 full-sized pails of water.

2d, Gradually add to the water in the tub 2 bushels of prepared selenitic lime, which must be kept well stirred until thoroughly mixed with the water to the consistency of creamy paste, and in no case should it be thinner.

3d, Measure out 10 or 12 bushels of clean sharp sand or burnt clay ballast, and form a ring, into which pour the selenitic lime from the tub, adding water as necessary. This should be turned over two or three times, and well mixed with the larry or mortar hook.

Both the above mixtures are suitable for bricklayers' mortar or for first coat of plastering on brickwork.

N.B.—Plastering on brick can be floated (or straightened) in one coat, and requires no hair.

"For Plastering on Lath Work.—To the same quantities of water and prepared lime, as given, add only 6 or 8 bushels of clean sharp sand and 2 hods of well-haired lime putty; the hair being previously well hooked into the lime putty. When the mill is used, the haired putty should only be ground sufficiently to ensure mixing. Longer grinding destroys the hair.

Lime putty should be run a short time before being used, to guard against blisters, which will sometimes occur.

This mixture will be found to answer equally well for ceilings

as for partitions. If the sand is very sharp, use only 6 bushels of sand for covering the lath, and when sufficiently set, follow with 8 bushels of sand for floating (or straightening).

"Setting Coat and Trowelled Stucco.—For common setting (or finishing coat of plastering), the ordinary practice of using chalk lime putty and washed sand is recommended. But if a hard selenitic face is required, care must be taken that the prepared selenitic lime be first passed through a 24 by 24 mesh sieve, to avoid the possibility of blistering, and used in the following proportions:—4 pails of water; 2 bushels of prepared selenitic lime (previously sifted through a 24 by 24 mesh sieve); 2 hods of chalk lime putty; 3 bushels of fine washed sand.

"This should be treated as trowelled stucco; first well hand-floating the surface, and then well trowelling. A very hard surface is then produced.

"Selenitic Clay Finish.—5 pails of water; 1 bushel of prepared selenitic lime; 3 bushels of prepared selenitic clay; 2 bushels of fine washed sand; 1 hod of chalk lime putty.

"This mixture, well hand-floated to a fair face, and then well trowelled, will produce a finished surface equal to Parian or Keene's cement, and will be found suitable for hospital walls, public schools, etc. Being non-absorbent, it is readily washed.

"The use of ground selenitic clay improves the mortar, and renders it more hydraulic.

"When the selenitic clay is used, 2 bushels may be added to 1 bushel of prepared selenitic lime, the proportion of sand, ballast, etc., being the same as for prepared selenitic lime. The use of selenitic clay effects a considerable saving, as it is much cheaper than lime.

"For outside Plastering use 6 or 8 bushels only of clean sand, and for finishing rough stucco face use 4 or 5 bushels only of fine washed sand, to the proportions of lime and water given.

"Plastering on Walls can be finished by the above processes, as two-coat work in 24 hours, while the ceilings can be floated immediately after the application of the first coat, and be set in 48 hours."

The advantages of this material for plastering are—its cheapness, as it can be used with a very large proportion of sand; its quick setting, which enables the coats to be applied rapidly in succession, and prevents delay.

Selenitic lime or mortar should not be used in conjunction with

gauged stuff for cornices, screeds, etc. No more mortar should be gauged than can be used the same day.

In applying selenitic plaster to quartered partitions or ceilings, care must be taken that the supporting woodwork is thoroughly seasoned, for the plaster is rigid and will be cracked if the timber warps and twists.

Rough-Cast is used as a cheap protection for external walls.

The surface of the wall is first "pricked up" with a layer of "coarse stuff," upon which a coat of similar composition is evenly spread; while this is wet, and as fast as it is done in small portions, rough-cast (p. 396), in a semi-fluid state, is thrown upon it with large trowels from buckets, forming a rough adhering crust, which is at once coloured with lime-wash and ochre.

Depeter consists of a pricked-up coat with small stones pressed in while it is soft, so as to produce a rough surface.

Depretor is the name for plaster finished so as to represent tooled stone.

Surfaces.—*Whitewash* is a mixture of any common white fat lime with water. It is used for common walls and ceilings which have to be whitened frequently, and for sanitary purposes.

Whitening is a mixture of whiting and size, used for whitening ceilings and inside walls. It will not stand the weather.

Colouring for very common work is made by mixing naturally-coloured earths, such as ochres, with whitewash.

Distemper is made with whiting and size. Any colouring matter may be added, being first ground in water and added to the whiting. Sometimes a little alum and soft soap are substituted for the size.

It is used for colouring walls and whitening ceilings; but is not fit for outdoor work, as it will not stand the weather.

Distemper is generally laid on cold, and at about the consistency of trembling jelly.

Not more than two coats are required—the first should be thin, and should contain a double quantity of size.

White lead is sometimes substituted for the whiting to produce a smoother surface; and for outside work boiled oil is sometimes added to ordinary distemper to make it weather better.

Pugging is a coat of coarse stuff about 2 or 3 inches thick laid on boards laid between the joists of a floor. It is intended to prevent sounds and smells from passing from one room to the other (see page 90), but is rather apt to lead to decay in the woodwork.

Scagliola is chiefly used for imitation marble pilasters and columns.

For the latter a "cradle" is first formed of wood, lathed over, and "pricked up" with lime and hair mortar.

After this has set and is quite dry it is covered with a floated coat consisting of plaster of Paris mixed with various colouring matters in a solution of glue or isinglass, to give greater solidity and to prevent the plaster of Paris from setting too quickly. When the surface is thoroughly hard, it is rubbed with pumice stone, being kept damp and clean with a wet sponge; it is then rubbed with tripoli and charcoal, then polished with a felt rubber dipped in tripoli and oil, and lastly finished by means of a piece of felt dipped in oil only.

This substance has been to a great extent superseded by the use of Keene's and similar cements.

Arrises, or sharp corners of plastered walls, require to be of extra strength, or protected in some way from being chipped and injured.

Angle Staves are substantial beads or cylinders of wood plugged to the salient angles of the walls, and splayed so as to receive the plaster on each side. They thus protect the angle of the wall from injury.

Cement Angles are often formed instead of angle staves. The angle of the wall, including a strip of 4 or 6 inches wide on each side, is rendered in cement, and is consequently harder and more able to withstand a blow than if finished in plaster. The corner of the wall or of the cement covering may with advantage be rounded.

Cement Staff Beads or *Quoin-beads* are similar in form to those in wood, described at page 292, and are formed in order to avoid an arris, and to answer the same purpose as angle staves.

CHAPTER XXIV.

PAINTING. PAPERHANGING. GLAZING.

THE object of painting is to preserve the more perishable parts of a structure from the effects of the weather, heat, gases, etc.

Woodwork should only be painted when it is thoroughly seasoned; if it is not so, the paint, by confining the sap and moisture, only hastens decay.

In the best buildings the woodwork receives at least four coats of paint, sometimes five or six; but in those of an inferior class two or three coats only are used.

Each coat, as the work approaches completion, should incline more in tint to the final colour.

Materials used in Painting.—Before proceeding farther it is necessary to allude briefly to the materials of which ordinary white lead paint is composed, though the composition and peculiarities of these materials, and other points connected with the subject, will be gone into more fully in Part III.

The paint in ordinary use for protecting woodwork is composed chiefly of white lead, linseed oil, and litharge (or other “driers”); sometimes a little turpentine, and small quantities of other ingredients are added, as hereafter explained.

The part played by each of the principal ingredients is as follows:—

The linseed oil soaks into and fills up the pores of the wood, and there dries into a sort of resin, which keeps out the air, and prevents decay.

The litharge or driers quicken the hardening or drying of the oil.

The white lead gives a body to the paint, and combines with the oil to form a kind of soap.

The spirits of turpentine, or “turps,” is used merely to save oil, and to make the paint more liquid, so as to work freely. It evaporates, and plays no part in protecting the wood.

Red lead is generally used with the priming coat; it dries well, and sets hard.

Proportion of Ingredients of Lead Paint.—The exact proportions

for the different materials to be used in lead paint vary according to the quality of the materials, the nature of work to be done, the climate, and other considerations.

The proportions given in the following table must, therefore, be taken only as an approximate guide for inside work when the materials are of good quality :—

| Coat. | White Lead. | Red Lead. | Raw Linseed Oil. | Litharge or Patent Driers. | Turpa. | Number of Superficial Yards the Paint will cover. |
|--------------------------|-------------|-----------|------------------|----------------------------|--------|---|
| | Lbs. | Ounces. | Pints. | Ounces. | Pints. | |
| 1st Coat or Priming..... | 10 | 1 | 4 | 2* | 0 | 63 |
| 2d Coat | 10 | 0 | 2½ | 2* | 1½ | 100 |
| 3d, and remaining Coats | 10 | 0 | 2 | 2* | 2 | 113 |

* Or ½ oz. burnt white vitriol, and ½ oz. litharge.

The last two coats have the final colouring added in proportion to the depth of tint required ; from 1 to 2 lbs. of colouring matter is added for every 10 yards of surface to be painted, and the quantity of white lead is reduced in proportion.

Painting Woodwork.—*Preparation of Woodwork.*—Woodwork should be thoroughly dry before being painted. The surface should be planed clean and smooth, and free from dust. All nails should be punched in, so that their heads are driven below the surface.

Killing Knots.—The knots should then be “killed” by painting them over with “size knotting” or “patent knotting” (see Part III.) This is necessary, especially with fir and resinous woods, to prevent the turpentine in the knots from exuding through the paint.

There are several other ways of killing knots. Sometimes they are covered with fresh-slaked hot lime for about 24 hours, which is then scraped off ; after which they are painted with size knotting, and if this does not kill them they are coated with red and white lead in linseed oil, and when quite dry rubbed smooth with pumice-stone.

Sometimes, after application of the lime, they are ironed with a hot iron, and then painted smooth.

In superior work the knots are cut out to a slight depth, and the holes filled up with putty made of white lead, japan, and turpentine.

Sometimes the knots are covered with gold or silver leaf.

INSIDE WORK.—Priming.—After “knotting” the “priming” coat is laid on. This generally contains a large proportion of red lead, which makes it set harder, and gives it the pink colour familiar to all in new work.

The object of this coat is to fill the pores of the wood before applying the colouring coats, which would otherwise be sucked up and wasted by the wood.

“Painters will sometimes for cheapness prime with clearcole or glue size instead of oil, which form a skin over the surface, without entering into the pores of the wood; it is liable to peel off, and should never be allowed unless the surface is too greasy or dirty to take oil priming.”¹

Stopping.—The surface should now be well rubbed down with fine sand-paper or pumice-stone, and all holes and cracks stopped with putty.

Second Coat.—When the priming is dry the second coat is laid on and allowed to harden. If the knots still show, they may be covered with silver leaf, gummed on with size. This, however, is seldom done in practice.

Third and Fourth Coats.—The third coat is then applied, and when it is dry and well rubbed down the finishing coat is added.

In good work each coat should be carefully rubbed down with sand-paper or pumice-stone, and well dusted, before the next coat is laid on.

Flattening.—For delicate interior work a fifth coat is added, mixed with turpentine only, and containing no oil. This causes it to dry with an uniform flat dead surface, without gloss.

This coat must be laid on quickly, of a tint somewhat lighter than the ground colour.

It does not protect the material to which it is applied, as an ordinary coat of paint would do, for the turpentine evaporates, leaving only the pigment.

Flatted work will not last when exposed to the weather, nor will it, as a rule, stand washing; if it is required to do so, a little copal varnish must be added to it when mixing.

“Sometimes a little size is added to the turps, in order to enable the paint to stand washing better, in which case it is called ‘*bastard flattening*.’”¹

OUTSIDE WORK.—If the paint is to be exposed to the sun,

¹ Seddon's Notes.

the quantity of turps in the second coat should be reduced to about one-half that mentioned on page 412, and there should be no turps used in the remaining coats, except in winter, when a little is necessary to make the paint work.

Varnishing.—Varnish may be applied either to painted surfaces, or to the original surface of the wood; in the latter case it may either be plain, or stained with tints to darken the grain, or to imitate the colour of different woods.

Varnish adds greatly to the appearance and durability of painted surfaces.

“A priming coat, followed by a dark coat, such as chocolate or purple brown, and finished off with a coat of common varnish, is cheaper than and as durable as four coats of common colour; it looks better, is more rapidly executed, and stands washing well. A single coat of gum lac, or good resin dissolved in linseed oil to about the consistency of cream, and coloured as may be required, also forms a good and durable covering.”¹

New plaster work should be well sized with a weak solution of glue before being varnished.

Woodwork to be varnished should be very dry. The colour to be used should be ground up and dissolved with the varnish in the preliminary coats; the last coat should contain very little colour—better none at all.

The surface of woodwork should be treated with size before being varnished, to prevent it from swelling. This also fills up the pores, and causes a saving in the quantity of varnish used.

“Walls may be coloured and varnished thus:—First apply at boiling heat two coats of whiting, mixed with strong glue size; then fill up defects with mastic and water, rub smooth with pumice-stone, and cover with two coats of coloured varnish, the first coat mixed with one quarter of the required colour, the last coat with only half as much colour; the colour should be ground very fine, and the varnish should be white spirit varnish.”¹

GRAINING.—Four or five ordinary coats of paint having been applied, the last is composed of equal parts of oil and turpentine, and should approximate in tint to the final colour required, after which thin glazings of Terra de Sienna, Umber, Vandyke brown, or other required tints, are applied.

These tints may for ordinary work be ground in water, and mixed with small beer; but for oak graining a thicker substance

¹ Seddon's Notes.

is required, and the colour is mixed with turpentine and a little turpentine varnish, and its surface, before it is dry, is scratched over (with *combs*, or with flat brushes, dipped in oil and turps), to imitate the grain of different woods. The representations of knots are produced by dexterous touches with the tips of the fingers, or with pieces of cloth, or sponge, moistened with turps. In ordinary work the surface is completed by covering it with two coats of copal varnish.

Superior work is "*overgrained*"—that is, a glaze of colour in beer, as dark as may be requisite, is laid over the comb-work in shades thrown across the work.

The ground and the graining colours differ with each variety of wood to be imitated—thus, for *Light Oak*, the ground would be of white-lead and stone-ochre thinned with half raw oil and half turps; the graining of raw umber and whiting thinned with half and half as above, the overgraining of Vandyke brown in water. For *Bird's-eye Maple* the ground would be of white stained with vermilion, thinned with 3 turps, 1 oil; the graining York brown, Vandyke brown, and burnt sienna, in porter, with a little paste.

A detailed description of the processes by which different kinds of wood are imitated would be of no practical use; the examples just given are merely to convey a general idea of the methods adopted.

Grained work, including the varnishing, lasts longer than ordinary painted work.

Painting Plaster.—Plaster to be painted should be carefully laid, and its surface free from air bubbles or flaws caused by the "blowing" of the lime.

Special care must be taken that both the plaster and the wall itself are perfectly dry before they are painted.

It is safer to distemper the walls and leave them for two years before painting. Then brush the distemper well down (without washing, unless it is greasy), and paint over it.

There are several methods of applying the paint, all of which are influenced by the very absorbent nature of the plaster.

The plaster may be primed with glue size to prevent absorption, and then four coats of ordinary lead paint applied. Care should be taken that the whole surface stands out with an equal gloss, after which it may be flatted.

The plaster may be primed with two or three coats of boiling linseed oil. When this is dry it is covered with a thin coat of

weak size, tinged with red lead, to stop all absorption, and give the work a uniform appearance, and then finished off with two coats of oil paint, and a flatting coat if required; or with two coats of coloured varnish, as described at page 414.

Another plan is to prime the plaster with white lead and linseed oil containing a little litharge, and mixed to the consistency of cream. When the oil is absorbed into the plaster, and this coat is dry, another similar coat is given. In a few days a third coat may be added, rather thicker, and containing a little turpentine. By this time, the plaster being thoroughly saturated, a fourth coat, thinned with equal parts of turps and oil, may be added, and then the flatting coat; or, when the work is not required to be very durable, the fourth coat may be omitted.

SANDING.—Fine sand is sometimes thrown on to the last coat while it is wet, with a view to imitating the rough surface of stone.

FRESCO is painting on plaster done while it is wet. It requires to be performed with great rapidity, and with care, as the work cannot be altered.

Painting Canvas and Paper.—*Canvas* to be painted should be prepared with size—oil causes it to rot.

Paper should be covered with a thin coat of oil paint, and then the other coats applied as usual.

Sometimes after the first coat of paint a coat of size is applied; but this, though cheaper, is not such good work.

Clearcole consists of white lead ground in water and mixed with size. It is useful in preparing greasy and smoky surfaces to receive paint, which is afterwards laid on in the ordinary way, the white lead being mixed in half oil half turpentine with the colouring pigment and driers, and laid on as stiff as possible.

Repainting Old Work.—The surface should be scoured with soap and water; if greasy or smoky, washed with lime water; when dry, rubbed down with sand-paper or pumice-stone; all necessary repairs should be made, cracks and openings stopped with putty, and portions from which the paint is blistered or knocked off brought up to the general level by painting, or with cement, before the surface is repainted.

When the old paint is very much blistered, it should be removed altogether before repainting.

This may be done by various solutions containing potash, quicklime, etc., which will be described in Part III.; or the old paint may be scraped or burnt off.

Painting Ironwork.—*Cast Iron* should be painted directly it leaves the mould, in order to preserve the hard skin which is formed upon the surface of the metal by the fusing of the sand in which it is cast. After this a second coat will be required, and will generally be sufficient for the preservation of the iron from atmospheric influences.

In any case all rust upon the surface of castings should be carefully removed before the paint is applied.

Wrought Iron.—Before painting wrought iron, care must be taken to remove the scales or film of oxide formed upon the surface of the iron during the process of rolling, and which, by the formation of an almost imperceptible rust, becomes detached from the iron itself.

An attempt to prevent this rusting is sometimes made by dipping the iron while still hot in oil. This plan, however, is expensive, and not very successful.

Paraffin may with advantage be substituted for the oil.

The scale is sometimes got rid of by "pickling," the iron being first dipped in dilute acid to remove the scale, and then washed in pure water.

"If the trouble and expense were not a bar to its general adoption, this is the proper process for preparing wrought iron for paint, and it is exacted occasionally in very strict specifications.

"But somewhat the same results may be obtained by allowing the ironwork to rust, and then scraping the scale off preparatory to painting. If some rust remains upon the iron, the paint should not be applied lightly to it, but, by means of a hard brush, should be mixed with the rust."¹

Ordinary lead paint may be used for ironwork, but it is thought that the lead and iron are apt to set up a galvanic action together, which destroys the paint.

The paints made with oxide of iron (some of which will be described in Part III.) are therefore preferable for this purpose; but they must be used alone, and not laid upon a priming containing lead, or the two metals will set up a galvanic action as above described.

Bituminous paints are said to adhere better than others to the surface of the iron, and to form a plastic film which yields without cracking when the iron expands and contracts under changes of temperature.

¹ Matheson's *Works in Iron*.

All tooled surfaces in ironwork should be coated with tallow and white lead.

Gilding is of two kinds—"burnished" bright or left "dead." The latter description is most usual in the decoration of buildings.

The painted surface is covered with "oil gold size." When this is dry but sticky, the gold leaf is laid on in narrow pieces, overlapping slightly at the edges. These are pressed down to the surface with cotton-wool, and the loose portions brushed off.

In gilding varnished work, white of egg beaten up in water is applied to those parts where the leaf is not required to stick.

When woodwork is to be gilt with burnished gold, a different size is used, called "burnished gold size." The leaf adheres to this, and when the size becomes hard the surface of the leaf is rubbed bright with a dog's-tooth or other burnisher.

In gilding ironwork the surface of the iron must be very carefully cleaned, and then painted, first with two coats of oxide paint and then two coats of lead paint of light colour. It is then ready for sizing and gilding.

PAPERHANGING.

Walls to be papered should be thoroughly dry before the paper is hung.

The surfaces of walls to be papered for the first time should be stopped, rubbed smooth with pumice-stone, and then treated with a coat of size, which prevents the plaster from absorbing the paste.

In order to obtain a smooth surface to work upon, a plain coarse white "lining" paper is sometimes hung first. In hanging lining papers the edges of adjacent pieces overlap about $\frac{1}{2}$ inch, and are distempered, and well rubbed down, to prevent their showing through the wall paper. The latter is hung with its trimmed edges facing the light, so that they may not cast a shadow. Where the walls are damp, and battening with lath and plaster would be too expensive, canvas may be stretched tight, and nailed to battens, to receive the paper; it is, however, generally unsatisfactory, as it expands and contracts with the changes in the weather.

The heads of the nails securing the canvas should be covered over with strips of common paper before the papering is hung. Iron nails should be painted.

Re-papering.—In re-papering walls the old paper should be removed, the walls scraped, washed, stopped, and coated with size; or if the old paper is left on, a coat of size may be applied to it, and then over that a coating of whiting and size or distemper.

There is considerable danger in leaving the old paper upon the walls, as the paste which secures it is apt to become decomposed and injurious to health.

"Indiarubber, gutta percha, or tinfoil paper, are sometimes used where damp is likely to injure the paper if not kept back. The drying of walls may be quickened by rubbing them over with sulphuric acid."¹

GLAZING.

Glass is fitted into window-sashes made of wood or iron, or into lead work, as described at page 421.

GLAZING IN WOODEN SASHES.—The construction of a wooden sash has been described at page 196, Part I., and it has been there explained that the styles and bars of the sash have rebates formed upon their inner sides to receive the edges of the panes with which they are to be glazed.

The size of the squares, and the stoutness of the sash bars, should be arranged so as to suit the kind of glass intended to be used.

The glass is cut with a diamond into panes. The dimensions of these should be a little less both ways than the distances between the sides of the rebates upon which they are to rest, so that the edges of the glass nowhere actually touch the wood-work of the sash, and any jar received by the latter is deadened by the intervening putty before it is felt by the glass.



Fig. 601.




Fig. 602.

A layer of putty is spread over the narrow part of the rebates, upon which the glass is firmly bedded. This is called the *back putty*; as the glass is pressed upon it the superfluous putty is

¹ Seddon's *Notes on the Building Trades*.

squeezed out round the edges of the panes, and cut off on the inside.

This superfluous putty should not be cut off for four or five days, as its removal may disturb the front putty.

The back putty is sometimes omitted in inferior work. When plate-glass is used it is not required.

The glass is then *front-puttied*, the rebate is *stopped*, that is filled in with putty to a triangular section, as shown in Fig. 601. This soon hardens, and keeps the glass secure.

Care must be taken that the putty does not project beyond the front of the rebate, so as to be seen from the inside of the window.

Large panes of plate-glass are not back-puttied, for it would be useless in the case of large and heavy panes to attempt to compress the putty when bedding the pane.

In very large and heavy panes copper brads or *sprigs* are driven in to secure the glass more firmly before it is front-puttied, or the glass may be secured by beads or mouldings secured to the bars or frames of the sashes, as in Fig. 602.

Large panes of plate-glass in doors are sometimes bedded in wash-leather or vulcanised indiarubber, one piece glued to the inside of the rebate the other placed on the reverse side of the glass (see *i i*, Fig. 602), so as to deaden the effects of concussion.

Plate-glass is thick, and keeps a room warm, but is expensive, and therefore used only in houses of a superior class.

Firsts, seconds, and thirds sheet, or crown, glass are used in buildings of an inferior description (see Part III.)

The glazing is generally done after the plastering is finished and the floors laid, and before the painting, the sashes being primed however before the glass is put in, in order to prevent the wood from absorbing the oil out of the putty. The surfaces of all puttied joints should be painted, to prevent the oil from evaporating.

GLAZING IN IRON SASHES.—Iron sashes have bars of similar shape to that of wooden sash-bars, and are glazed in the same way, particular care being taken that the glass does not touch the iron, in order to avoid the risk of its being broken.

GLAZING SKYLIGHTS.—As already mentioned (see page 316), skylights and other inclined sashes have no horizontal sash-bars; the panes are made to overlap, as shown in Fig. 496. When they are large and heavy, any tendency for them to slip down is prevented by hanging the tail of each on to the head of the pane

below by means of a zinc or copper *tingle*, as shown by the dark line in Fig. 496.

“Considerable overlap is necessary to prevent leakage, for the overlapping surfaces can seldom be brought into direct contact; consequently wet is held and drawn up by capillary attraction, and if the lap is not sufficient it will drip over the heads of the under sheets, and, moreover, get blown up by the wind; therefore it is better, if possible, to keep the overlapping surface far enough apart to prevent any capillary action coming into play. The tails of the panes are frequently cut to a point or rounded to throw the water off better, as well as to turn it away from the sash-bars.”¹

LEAD WORK.—The small diamond-shaped panes used in old cottages and in churches are set in lead strips called *comes*, soldered together to form the panes.

The lead is first cast into bars, and then passed through a vice, which turns them out in comes about 6 feet long.


The section of the comes resembles the letter H. The dimensions vary according to the purpose for which the lead is intended. In the size most commonly used the sides of the H are $\frac{3}{8}$ inch long, the cross-bar between the sides $\frac{1}{16}$ inch long, and the thickness of the metal about $\frac{1}{8}$ inch.

The sides of the comes are bent down so as to admit the panes, and then turned up again, so as to form a groove in which the edges of the panes are secured.

In large windows the leadwork is strengthened by iron *saddle-bars*, to which the comes are secured either by leaden *bands* or with copper wire soldered to the comes and twisted round the iron. The saddle-bars themselves are supported, when necessary, by iron *stay-bars*, or *standards*, which are fixed in the masonry.

FRETWORK is somewhat similar to the leadwork just described, but that the comes are of much lighter section, and instead of being in regular shapes, such as squares and diamonds, the pieces of glass are cut so as form figures or other patterns, and the comes are bent round to fit the edges of the pieces.

¹ Seddon's *Notes*.



INDEX.

A

Air-drains, 213, 236.
 Allen's system of fireproof floors, 373.
 Angle bonds, 223.
 " " acute, 224 ; obtuse, 223.
 " brace, 256 ; iron laths, 391 ;
 joints, 291 ; staves, 410 ;
 tie, 245.
 Apron lining, 334.
 Arched floors, disadvantages of, 369.
 Arches, 226.
 " brick, for fireproof floors, 367.
 " core of, 307.
 " gauged, 307.
 " in English bond, 226.
 " in Flemish bond, 226.
 " in half-brick rings, 226.
 " in heading bond, 226.
 " in whole brick rings, 227.
 " of large span, 228.
 " 1½ brick thick, 226.
 " relieving, 296.
 " rough, 239.
 " rough relieving, 307.
 " thick, bonded through their
 depth, 227.
 " with bond blocks, 227.
 " with rings bonded in pairs,
 227.
 Architraves, 296, 298, 308.
 " double faced, 299.
 Arrangement for flues, 231, 234,
 243.
 Arrangements of rivets, 365.
 " of stone stairs, 327.
 Arrises, wood, 291.
 " plaster, 410.
 Ashlar, 210.
 " with brick backing, 210.
 " with rubble backing, 211.

Asphalted felt coverings for roofs,
 263, 274.
 Atkinson's cement, 395.
 Attachment of shoes to iron columns,
 389.

B

Back hearth, 239.
 " flaps, 308 ; folds, 308 ; linings,
 296, 302, 309.
 Backing, 296, 297.
 " brick for ashlar, 210.
 " rubble for ashlar, 211.
 Balanced steps, 352.
 Balusters, 322, 334, 348.
 " iron, 348 ; wooden, 348.
 Base, 299, 301 ; plate, 299.
 Bastard flatting, 414.
 " stucco, 396, 406.
 " tuck pointing, 221.
 Battened walls, 397.
 Battens, 245, 296, 398.
 Bead, inside, 296 ; parting, 296.
 " staff in cement, 410.
 Beams, 275 ; built-up, 275 ; fitch,
 277 ; indented, 276 ; joggled or
 keyed, 275 ; rolled wrought iron,
 282 ; sandwich, 278 ; straining,
 245, 249, 259, 260 ; tie, 245,
 249, 250, 259.
 Bearers, 334, 343 ; cross, 334.
 Belidor's outline of curb roof, 258.
 Best forms of roofs for different spans,
 261.
 Binders, 245, 250, 257, 313.
 Birmingham wire gauge, 263.
 Blocked joints, 295.
 Blocking course, 245.
 Blocks or blockings, 296, 334.
 Blue or black pointing, 221.

Boarding for roofs, 245, 270, 271.
 „ for roof coverings, 263.
 Bolection mouldings, 291.
 Bolts, 276, 277; king, 277, 278;
 queen, 245, 260, 279, 394;
 screw, 294.
 Bond, acute angles, 224; blocks,
 227; courses, 222; hoop-iron,
 228; obtuse angles, 223; of
 chimney shafts, 240; ranging,
 228; timbers, 222.
 Bonding bricks, 216.
 Bonds, 221; diagonal, 221; garden,
 222; herring-bone, 222; raking,
 221.
 Bottled or bottle-nosed step, 322.
 Bottom rail of sash, 296.
 Box girders, 284.
 Boxings for shutters, 308, 310.
 Braces, 260.
 Bracket, 296, 334; rough, 334, 340,
 344.
 Bracketed stairs, 346.
 Brady's patent saddle piece and stop
 end, 270.
 Brandering, 398.
 Breast linings, 302; chimney, 232,
 234, 237; of step, 322.
 Brick arches and girders for fireproof
 floors, 376.
 „ ashlar, 210; drains, 229; piers,
 222; sewers, 229.
 Bridging joists of floor, 334.
 Bridling, 256.
 Built ribs, 276.
 Built-up beams, 275.
 Bunnett's system of arched floors, 369.
 Butt joints, 292.
 „ joint riveted, 360.
 „ riveted joint in compression, 362.
 „ riveted joint in tension, 362.
 Button rivets, 357.

C

Calderwood cement, 395.
 Cambered girders, 280.
 Cames, 421.
 Capping, 296, 307, 318, 320; tiles,
 266.
 Carriages, 336, 347.

Carton pierre or papier maché, 402.
 Cases in which drilled and punched
 holes may respectively be used,
 364.
 Cast iron boxes for trusses, 279, 281.
 „ girders, 282.
 „ painting of, 417.
 „ shoes and heads, 386.
 Caulking, 356.
 Causes of failure in riveted joints,
 365.
 Cavetto moulding, 290.
 Ceiling joists, 245, 369, 402; sizes
 of, 260.
 „ light, 317.
 Ceilings, lathing of, 397.
 Cement angles, 410; screeds, 404;
 staff heads, 410.
 Cements, 395; Atkinson's, 395;
 Calderwood's, 395; Harwich,
 395; Keene's, 395; Martin's,
 395; Medina, 395; Mulgrave's,
 395; Parian, 395; Portland,
 395; Roman, 395; Whitley,
 395.
 Centres, 286.
 Chain riveting, 360.
 Chair rail, 300.
 Channel tiles, 266.
 Chimneys, 231; arrangement of flues,
 231, 234, 243; bar, 239;
 breasts, 232, 234, 237; cans,
 244; caps, 237; circular earthen-
 ware pipes for, 237; coddings of,
 233; corbelling for, 234; foot-
 ings, 233; jambs of, 239; pots,
 244; shafts, 237, 240; stacks,
 234; stone, 243; terminals, 243;
 throats, 232.
 Circular drains, 229.
 „ earthenware pipes for chim-
 neys, 237.
 „ geometrical stairs, 325, 333.
 „ newel stairs, 325, 331.
 „ stairs, 325, 331.
 Clamping, 294; mitre, 295.
 Cleadings, 287.
 Clearcole, 416.
 Cleats, 245, 250.
 Clips, 269, 271; zinc, 271.
 Close strings, 330.

- Closers for shutters, 308.
 Coarse stuff, 396, 398.
 Coddings, 233.
 Cog, 278.
 Cold riveting, 356.
 Collar beam, 249 ; tie, 245.
 " tie roof, 255.
 Colouring, 409.
 Common dovetail, 293 ; ground, 297 ;
 rafters, 245, 249, 259, 260 ;
 stucco, 396, 405.
 Comparative advantages of oval and
 circular sewers, 230.
 " strength of riveted joints,
 361.
 Comparison of plate and box girders,
 284.
 Compound walls, 209.
 Concave tiles for ridges, hips, and
 valleys, 265.
 Concrete for sewers, 231 ; floors, 368,
 371.
 Conical roofs, 253.
 Copper roof coverings, 263, 268.
 Corbelling for chimneys, 234.
 Corbels for trimmers, 257.
 Core of arch, 307 ; of handrail, 347.
 Coring, 244.
 Corked or calked turning bars, 239.
 Cornices, 245, 401 ; large coved, 403.
 Corrugated iron plates, 263, 268.
 " " roof coverings, 392.
 " tiles, 265.
 " zinc roof, 272.
 Cottered joints, 385.
 Counter lathing, 398.
 " skylight, 317.
 Countersunk rivets, 357.
 Courses, bond, 222 ; lacing, 222.
 Cover flaps, 312.
 " plates for riveted joints, 359,
 360.
 Covered drains, 229.
 Coverings for iron roofs, 392.
 Cradling, 296, 305.
 Cramps, 216.
 Cross bearers, 334.
 Cup-ended rivets, 357.
 Cupping hammer, 355.
 Curb, 318 ; roofs, 253, 257.
 Curtail step, 322, 345, 346.
 Curved ribs, 276.
 Cut and mitred strings, 334.
 " strings, 334.
 Cyma recta moulding, 290.
 " reversa moulding, 290.

 D
 Dado, 292, 294, 296, 300.
 Damp-proof courses, 214.
 " " walls, 214.
 Dancing steps, 352.
 Decorated mouldings in plaster, 404.
 Dennett's fireproof floors, 372.
 Dentils, 243.
 Depeter, 409.
 Depretor, 409.
 Designing iron roofs, 393.
 Diagonal bond, 221 ; ties, 386.
 Dimensions of roofs, 259 ; of stairs,
 322.
 Disadvantages of arched floors, 369.
 Distemper, 409.
 Dog-legged stairs, 324, 328, 340.
 " " laying out, 350.
 Doorways, jamb linings to external,
 303.
 " solid frames with jamb
 linings for internal, 303.
 " jamb lining with framed
 grounds, 304.
 " jamb lining with finished
 grounds, 305.
 Double angle iron principals, 383.
 " channel-iron principals, 383.
 " dovetail keys, 294.
 " faced architraves, 299.
 " flat iron principals, 383.
 " laths, 396.
 " ovolo moulding, 289.
 " rebated linings, 306.
 " riveting, 359, 360.
 " roll tiles, 265.
 " size, 396.
 " skirting, 300.
 " torus moulding, 289.
 Dovetail, common, 393 ; double keys,
 294 ; joints, 293 ; keys, 293 ;
 mitred, 293 ; pins, 293 ; secret,
 293 ; sockets, 293.
 Dragging tie, 256.

Dragon beam, 256 ; pieces, 254.
 Drains, circular, 229 ; concrete, 221 ;
 covered, 229 ; in brick, 229.
 Drips, zinc, 271.
 Drilled holes for rivets, 364.
 Duchess slates, 392.

E

Easing centres, 287.
 Eaves, 254.
 Egg-shaped sewers, 229.
 Elbow linings, 302, 306, 307.
 English bond, arches in, 226.
 " for chimney shafts, 240.
 " garden walls, 222.
 " splayed jambs in, 225.
 Essentials of good riveting, 363.
 Evils of facing with superior bricks,
 209.
 Expansion and contraction arrange-
 ments for roofs, 388.
 External doorways with jamb linings,
 303.
 " work in cement, 404.

F

Fairbairn's rule for proportion of
 rivets, 358.
 Fascia, 245.
 Fat limes, 395.
 Fautons, 375.
 Feather-edged steps, 326.
 " slip, 291, 292.
 " tongued joints, 343.
 Fer à coulisse, 378.
 " tubulaire, 377.
 Fillet for skirting, 296, 299, 301.
 " for stairs, 334.
 Fine stuff, 396.
 Finished or wrought ground, 297.
 Fireplaces, 237.
 Fireproof blocks, Whichcord's, 369.
 " floors, 367.
 " Allen's system, 373.
 " Bunnett's, 369.
 " Dennett's, 372.
 " Fox and Barrett's,
 370.

Fireproof floors, French systems, 375.
 " " general remarks on,
 367.
 " " Hornblower's system,
 373.
 " " of girders and brick
 arches, 367.
 " " Measures' patent, 371.
 " " Moreland's system,
 372.
 " " Thuasne's system,
 375.

Firrings, 397.
 First coat plastering, 399.
 Fish joint, riveted, 359.
 Fixing grounds, 297.
 " joiners' work, 296.
 " stone steps, 226.
 Flange girders, 283.
 Flanges of girders, 282.
 Flaps for shutters, 309, 310, 312,
 313, 314.
 Flashing, lead, for skylight, 316.
 " zinc, 273.
 Flat joints jointed, 219.
 " joint pointing, 220.
 " or flush joints, 219.
 " tiles for walling, 265.
 " topped roofs, 253, 257.
 Flatting painted surfaces, 413.
 Flemish bond, arches in, 226.
 " for chimney stacks,
 242.
 " garden walls, 222.
 " splayed jambs in, 225.
 Fleurs, 265.
 Fliers, 322, 347.
 Flight, going of, 322.
 " of stairs, 322, 323.
 Flitch beams, 277 ; iron, 278.
 Floating, 399.
 Floating and setting, 401.
 Floor joist, 214, 314 ; line, 235.
 Floors, 367.
 " Allen's system, 373.
 " arched, disadvantages of, 369.
 " Bunnett's system, 369.
 " concrete for, 368, 371.
 " Dennett's fireproof, 372.
 " fireproof, 367.
 " Fox and Barrett's, 370.

Floors, French systems, 375.
 „ Hornblower's system, 373.
 „ Measures' patent fireproof, 371.
 „ Moreland's system, 372.
 „ Thuasne's system, 375.
 „ tile, 369.
 Flues, arrangement of, 231, 234, 243.
 „ sizes of, 232.
 „ widths for, 233, 238.
 Flush joints, 219.
 Fold joint, 271.
 Folding shutters, 308.
 Footings for chimneys, 233.
 Forms of rivets, 356; button or cup-ended, 357; counter-sunk, 357; hammered, 357; pan-headed, 357; snap, 357; staff, 357.
 Forms of stairs, 324.
 „ wooden stairs, 338.
 Fox and Barrett's floors, 370.
 Framed angles, 256; grounds, 297.
 French system of fireproof floors, 375.
 Fresco, 416.
 Fretwork, 421.
 Front hearth, 240; putty, 420.
 Furrings, 334.

G

Gables, 254.
 Garden bond, 222; English, 122; Flemish, 222.
 Gauge of tiles, 264.
 Gauged arch, 307.
 „ plaster work, 401.
 „ stuff, 396.
 General remarks on fireproof floors, 367.
 „ iron girders, 385.
 „ planning stairs, 348.
 „ roof coverings, 262.
 Geometrical circular stairs, 325, 333.
 „ stairs, 325, 330, 342.
 „ „ laying out, 352.
 Gilding, 418; burnished, 410; dead, 418.
 Girders, 275; and brick arches, 367; box, 284; cambered, 280; cast-iron, 282; flange, 283; iron, 275, 281; plate, 283; riveted plate, 283; rolled wrought iron, 278,

282; timber, 275, 277; trussed, 275, 278.
 Girders trussed with deep trussing, 280.
 „ trussed within their depth, 278.
 „ with cast-iron plates, 369.
 „ with wrought iron plates, 370.
 Glass coverings for roofs, 274, 392.
 „ tiles, 265.
 Glazing, 419; fretwork, 421.
 „ in iron sashes, 420.
 „ in lead work, 421.
 „ in wooden sashes, 419.
 „ skylights, 420.
 Glued and blocked joints, 295.
 „ block, 334; joints, 295.
 Going of a flight, 322.
 „ of a stair, 322.
 Graining, 414.
 Grooved grounds, 397.
 „ ridge-tile with fleurs, 265.
 Grounds, 296; common, 297; finished, 297; fixing, 297; framed, 297; grooved, 297; mitred, 297; splayed, 297; wrought, 297.
 Grouped joints in riveting, 363.
 Grouting, 219.
 Gutter, 245; bearer, 245; plate, 245.
 Gutters, eaves, 274; valley, 273; zinc, 273.

H

Half king post truss, 256.
 „ space landing, 322, 329.
 Hammer-headed key-joint, 294.
 Hammered rivets, 357.
 Handrailing, 322, 334, 347.
 „ knee in, 348.
 „ mopstick, 347.
 „ Newland's rule for height, 347.
 „ ramp in, 348.
 „ swan neck in, 348.
 „ toad's back, 347.
 „ wreathed, 348.
 Hand riveting, 354.
 Hanging steps, 327.
 Harwich cement, 395.
 Headers, 211.
 Heading bond arches, 226.

Head of sash frame, 296.
 Hearths, 239 ; back, 239 ; front, 240.
 Heating rivets, 365.
 Herring-bone bond, 222.
 Hinges, 296 ; parliamentary, 315.
 Hip rafters, 249, 254 ; iron, 383.
 Hipped ends, 254.
 „ roof, 254 ; advantages of, 394 ; construction of, 254.
 Hips, 254 ; concave tiles for, 265.
 Hollow walls, 215 ; openings in, 218.
 „ with bonding bricks, 216.
 „ with common bricks, 217.
 „ with iron ties and cramps, 216.
 „ with thin portion inside, 215.
 „ with thin portion outside, 215.
 Hoop iron bond, 228.
 Horizontal plaster screeds, 400.
 „ rafters, 252.
 Hornblower's system of fireproof floors, 373.
 Housed strings, 335.
 Housings, 335.
 Hydraulic limes, 395.

I

Indented beams, 276.
 Inside bead, 296.
 „ lining of sash-frame, 296.
 „ shutters, 308.
 „ work, painting, 413.
 Internal work in cement, 405.
 Interties, 375.
 Iron angle laths, 391.
 „ balusters, 348.
 „ cast, boxes and shoes, 279, 281.
 „ cast, shoes and heads, 386.
 „ corrugated, 268.
 „ „ roof coverings, 263, 392.
 „ „ galvanised, 268.
 „ flitches, 278.
 „ for principals, 383 ; double angle, 383 ; double channel, 383 ; double flat, 383 ; I section, 383 ; T section, 383.

Iron girders, 281 ; cast, 282 ; of I section, 377 ; of Ω section, 377 ; wrought, 282 ; rolled wrought, 278, 282.
 „ roofs, 379.
 „ „ designing, 393.
 „ „ parts of trusses, 382.
 „ „ queen rod, 380, 381.
 „ „ table of scantlings, 394.
 „ sashes, glazing, 420.
 „ sheet, roof covering, 263.
 „ ties for hollow walls, 216.
 „ work, painting, 417.
 Italian corrugated zinc roof, 272.
 „ tiles, 266.

J

Jack rafters, 245, 254.
 Jamb and soffit linings, 302.
 „ linings, 302, 303, 304, 306.
 „ linings to external doorways, 303.
 „ linings with framed grounds, 304.
 „ linings with finished grounds, 305.
 Jamb-head, 302.
 Jambs, 302.
 „ in English bond, 225.
 „ in Flemish bond, 225.
 „ of chimney breasts, 239.
 „ splayed, 224.
 Joggled beams, 275 ; joints, 326.
 Joiners' work, fixing, 296.
 Joinery, 289 ; names of parts, 296.
 Joints, 218, 291 ; angle, 291 ; butt 292 ; butt, riveted, 360, 361 ; butt, riveted, in compression, 362 ; butt, riveted, in tension, 362 ; common dovetail, 293 ; cottered, 385 ; dovetail, 293 ; feather-tongued, 343 ; flat joints jointed, 219 ; flat or flush, 219 ; fold zinc, 291 ; glued, 295 ; glued and blocked, 295 ; grouped riveted, 363 ; hammer-headed key, 294 ; in compression, 362 ; in stone steps, 326, 327 ; in tension, 361 ; joggled, 326 ; jump, 360 ; key, 293 ; keyed, 220 ;

keyed mitre, 292 ; lap, riveted, 359, 360 ; lap, riveted, in compression, 361 ; mason's or V, 221 ; mitre, 291 ; mitred dovetail, 294 ; plugged, 326 ; secret dovetail, 294 ; struck, 219 ; zinc, welted, 271.
 Joists, 319 ; bridging, 334 ; ceiling, 245, 369, 402 ; of landings, 334, 341 ; soffit, 334 ; trimming, 334, 345.
 Jump joint riveted, 360.

K

Keene's cement, 395.
 Key joint, hammer-headed, 294.
 Keyed beams, 275 ; joints, 220 ; mitre joint, 293.
 Keys, 276, 294, 301 ; double dovetail, 294 ; dovetail, 293 ; rule for, 276.
 Killing knots in painting, 412.
 Kilt of stone steps, 326.
 King and queen post roofs, 245.
 " bolts, 245, 246, 276, 278.
 " sizes of, 260, 394.
 " post, 245 ; sizes of, 259, 260.
 " truss, 256.
 Knotting, 413.

L

Lacing courses, 222.
 Laggings, 287.
 Laid in moulding, 289.
 Laminated ribs, 277.
 Landing, 322.
 " half-space, 322.
 " quarter-space, 322.
 Lanterns, 315 ; for iron roofs, 390.
 Lap joint, riveted, in tension, 361.
 " riveting, 359, 360.
 " of tiles, 264.
 Large coved cornices, 403.
 Larring, 219.
 Lath and lay, 398.
 " and plaster one coat, 398.
 " lay and set, 399.
 " lay, float, and set, 399.

Lath, plaster and set, 399.
 " plaster, float, and set, 399.
 Lathing, 397.
 " ceilings, 397.
 " counter, 398.
 Laths, 296, 334, 396.
 " angle iron, 391.
 " double, 396.
 " and half lath, 396.
 " single, 396.
 Laying out dog-legged stairs, 350.
 " geometrical stairs, 352.
 " straight stairs, 350.
 " the plan of stairs, 350.
 " winders, 351.
 Lead coverings for iron roofs, 392.
 " flashings for skylights, 316.
 " flat, 257.
 " paint, proportions of ingredients, 412.
 " sheet, for roof coverings, 268.
 " work, glazing, 421.
 Lean-to roofs, 253.
 Length of steps, 322.
 Limes, 395 ; fat, 395 ; hydraulic, 395.
 Line of nosing, 322.
 Linings, 302 ; apron, 334 ; back, 302 ; breast, 302 ; elbow, 302, 306 ; for skylights, 316 ; jamb, 302, 303, 304, 306 ; outside and inside, 302 ; single and double rebated, 306 ; soffit, 302, 304 ; top, 296 ; wall, 302 ; window, 302, 306.
 M
 Machine riveting, 355.
 Mansard roofs, 253, 257.
 Martin's cement, 395.
 Mason's or V joint, 221.
 Materials used in painting, 411.
 Measures' patent fireproof floors, 371.
 Medina cement, 395.
 Meeting rails, 296, 307.
 Methods of arranging folding shutters, 310, 311.
 Mitre clamping, 294 ; key joint, 292 ; joints, 291.
 Mitred and cut strings, 334.

Mitred or secret dovetail, 293.
 „ or splayed grounds, 297.
 Mixtures, 396 ; bastard stucco, 396 ;
 coarse stuff, 396 ; common stucco,
 396 ; double size, 396 ; fine stuff,
 396 ; for outside plastering, 408 ;
 gauged stuff, 396 ; plasterers'
 putty, 396 ; size, 396 ; stucco,
 396 ; trowelled stucco, 396.
 Modification of queen rod roof, 382.
 Mopstick handrail, 347.
 Moreland's system of fireproof floors,
 372.
 Mouldings, 289 ; bolection, 291 ;
 cavetto, 290 ; cyma recta, 290 ;
 cyma reversa, 290 ; double ovolo,
 290 ; double torus, 289 ; for
 stairs, 337 ; laid-in, 289 ; ogee,
 290 ; ovolo, 289 ; planted, 289 ;
 plaster, 401 ; quirk ogee, 290 ;
 quirk ogee and quirked bead,
 290 ; quirk ovolo and bead, 290 ;
 quirk ovolo and fillet, 290 ;
 reverse ogee, 290 ; scotia, 290 ;
 stuck, 289 ; torus, 289.
 M roofs, 253.
 Muffing, 401
 Mulgrave's cement, 395.

N

Newel stairs, 340 ; circular stairs,
 325, 331.
 Newels, 322, 340 ; open, 322, 342.
 Newland's rule for height of handrail,
 347.
 Nicholson's rule for size of handrail,
 347.
 Nosing in stone steps, 326.
 „ line of, 322.
 „ of stairs, 322.

O

Oak pegs, 264.
 „ sill, 296, 306, 307.
 Ogee mouldings, 289.
 „ roofs, 254.
 One coat plastering, 398.
 Open newel stairs, 322, 342.
 „ strings, 336.

Ornamental flat tiles, 264.
 Ornaments in plaster, 401.
 Outer strings, 334, 336, 345.
 Outside and inside linings, 302.
 „ lining of sash frame, 296.
 „ shutters, 308, 315.
 „ work painting, 414.
 Overgraining, 415.
 Ovolo mouldings, 289.

P

Painting, 411.
 „ canvas and paper, 416.
 „ cast iron, 417.
 „ inside work, 413.
 „ iron work, 417.
 „ materials used in, 411.
 „ old work, 416.
 „ outside work, 413.
 „ plaster, 415.
 „ woodwork, 412.
 „ wrought iron, 417.
 Pan-headed rivets, 357.
 „ tiles, 265.
 Paperhanging, 418.
 Papier maché, 404.
 Parapet wall, 245.
 Pargetting, 244.
 Parian cement, 395.
 Parliament hinges, 315.
 Parting bead, 296 ; slip, 296.
 Parts of iron roof trusses, 382.
 „ of queen post roof, 250.
 „ of roofs, 254.
 Pavilion roof, 254.
 Pickling iron, 417.
 Piend check, 327.
 „ rafters, 254.
 „ roof, 254.
 Piends, 254.
 Piers, brick, 222.
 Pins of dovetails, 293.
 Pitch of rivets, 358.
 „ of roofs, 262.
 Pitching pieces, 334, 345.
 Plain tiles, 264 ; method of laying,
 264.
 Planning stairs, general remarks on,
 348.
 Planted moulding, 289.

Plaster, 296, 334.
 „ cornices, 401.
 „ mouldings, 401, 404.
 „ of Paris, 395.
 „ ornaments, 401.
 „ painting, 415.
 „ selenitic, 406.
 Plasterers' mixtures, 396.
 „ putty, 396.
 „ work, 395.
 Plastering, 395, 398.
 „ key in, 399.
 „ one coat work, 398.
 „ on lath work, 407.
 „ on walls, 408.
 „ three coat work, 399.
 „ two coat work, 399.
 Plat, 322.
 Plate girders, 283.
 Plinth, 301.
 Plugged joints, 326.
 Pocket piece, 296.
 Pointing, 220.
 Pole plate, 245, 249.
 Portland cement, 395.
 Preparation of wood-work for painting, 412.
 Prevention of damp in walls, 212.
 Pricking-up, 399.
 Priming, 413.
 Princess posts, 245, 246, 249, 259.
 Principal rafter, 245, 249 ; iron, 383 ; long, 249 ; rule for distances apart, 393 ; short, 249 ; sizes of, 259, 260.
 „ truss, 245.
 Proportions of ingredients of lead paint, 412.
 „ of rivets, 357.
 Pugging, 409.
 Pulley, 296, 307 ; style, 296.
 Punched holes for rivets, 364.
 Purlin, 245 ; sizes of, 259, 260.
 „ roofs, 251.
 Purlins, iron, 383, 384.
 „ stone templates for, 252.
 „ trussed, 251, 252.
 Putty, 419, 420.
 „ lime, 407.
 „ plasterers', 396.

Q

Quadruple riveting, 360.
 Quarter-space landing, 322, 329.
 Queen bolts, 245, 279 ; sizes of, 260, 394.
 „ post, 245, 250 ; oak, 249 ; sizes of, 259, 260.
 „ „ roof, 246, 250.
 „ „ roof, skylight for, 317.
 „ „ roof with king-bolt, 246.
 „ rod roofs, 380, 381 ; modifications of, 382.
 Quirk ogee moulding, 290.
 „ „ and quirked bead moulding, 290.
 „ „ ovolo and bead moulding, 290.
 „ „ and fillet moulding, 290.

R

Rafters, common, 245, 249, 259, 261.
 „ hip, 249, 254 ; iron, 383.
 „ horizontal, 252.
 „ jack, 245, 254.
 „ piend, 254.
 „ principal, 245, 259, 260 ; 383, 394.
 „ secondary, 393.
 „ valley, 254.
 Raking and pointing, 220.
 „ bond, 221.
 Ramp of handrail, 348.
 Ranging bond, 228.
 Rankine's rule for built ribs, 277.
 „ „ for laminated ribs, 277.
 Rebate in square steps, 326.
 Reed's riveted butt joint, 362.
 Relieving arch, 296 ; rough, 307.
 Rendering, 244, 395, 400.
 „ in cement, 404.
 „ rough, 401.
 Repainting old work, 416.
 Re-papering, 419.
 Reveals, 224.
 „ in English bond, 225.
 „ in Flemish bond, 225.
 „ with splayed jambs, 224.
 Reverse ogee moulding, 290.
 Rhones, zinc, 274.

- Ribs, 275, 276.
 " built, 276.
 " curved, 276.
 " for centres, 286.
 " laminated, 277.
 Ridge and furrow system of roof covering, 393.
 " piece, 249.
 " tiles, 265.
 Ridges, 245, 254, 564.
 " concave tiles for, 265.
 Rise of stairs, 322.
 " of tie rod, 394.
 Risers, 322, 334; rule for, 323; table for, 323.
 Rivets, 354; arrangement of, 365; button or cup-ended, 357; counter-sunk, 357; drilled holes for, 364; Fairbairn's rule for punched holes, 358; forms of, 356; hammered, 357; heating, 365; holes, 363; pan-headed, 357; proportions of, 358; punched holes, 364; snap, 357; staff, 357; steel, 357; Unwin's rule for diameter of, 358.
 Riveted joints, 359.
 " " butt, 360, 361.
 " " causes of failure, 365.
 " " comparative strength of, 361.
 " " fish, 359.
 " " grouped, 363.
 " " in compression, 362.
 " " in tension, 361.
 " " jump, 360.
 " " lap, 359, 361.
 " plate girder, 283.
 Riveting, 354; chain, 360; cold, 356; double, 359, 360; hand, 354; machine, 355; quadruple, 360; single, 359, 360; triple, 360; zigzag, 360.
 Roll, 265; caps, zinc, 270, 271, 272; wood, 269; zinc, 273.
 Rolled wrought iron girders, 278, 282.
 Roman cement, 395.
 Roof boarding, 245.
 " coverings, 262.
 " " asphalted felt, 274.
 " " copper, 268.
 Roof coverings, corrugated iron plates 263, 268, 392.
 " " general remarks on 262.
 " " glass, 274.
 " " sheet lead, 268.
 " " slating, 263, 392.
 " " thatch, 267.
 " " tiles, 263, 266.
 " " Tredgold's table for 263.
 " " wrought iron flat plates, 267.
 " " zinc, 269.
 Roofs, 245.
 " Belidor's method of tracing curb, 258.
 " collar tie, 255.
 " conical, 253.
 " curb or Mansard, 253, 257.
 " flat-topped, 253, 257.
 " hipped, 254.
 " iron, 379.
 " " queen rod, 380, 381.
 " " " " modifications of, 382.
 " " trussed rafter, 379.
 " " trussed rafter with three struts, 379.
 " " trussed rafter with two struts, 379.
 " king and queen post, 245.
 " lean-to, 253.
 " M shape, 253.
 " of spans greater than 60 feet, 248.
 " of various shapes, 253.
 " of wood and iron for more than 40 feet span, 249.
 " ogee, 254.
 " parts of, 254.
 " pavilion, 254.
 " piend, 254.
 " purlin, 251.
 " queen post, 246, 250.
 " " " with king bolt, 246.
 " queen post, with princesses, 246.
 " to-fall, 253.
 " V shape, 253.

Rough arch, 239.
 „ brackets, 334, 338, 340, 344.
 „ cast, 409.
 „ relieving arch, 307.
 „ rendering, 401.
 „ strings, 334, 336, 344.
 „ stucco, 406.
 Round-ended step, 346.
 Rubble ashlar, 211.
 Rules for built ribs, 277.
 „ distance apart of principals
 of iron roofs, 293.
 „ indented beams, 276.
 „ keys, 276.
 „ laminated ribs, 277.
 „ proportions of rivets, 358.
 „ roof scantlings, 260.
 „ thickness of tread, 337.
 „ tread and rise of stairs, 323.

S

Saddle-bars, 421.
 Saddle-piece, 270.
 Sand, 396.
 Sanding painted work, 416.
 Sandwich beam, 278.
 Sash bar, 296.
 „ bottom rail, 296.
 „ frame back lining, 296.
 „ „ head of, 296.
 „ „ inside lining, 296.
 „ „ outside lining, 296.
 „ line, 307.
 „ top rail, 296.
 Sashes for skylights, 318.
 „ sliding in skylights, 319.
 Scagliola, 410.
 Scantlings for roofs, 258.
 „ of iron roofs, 394.
 „ of timber for roofs, 259.
 „ tables for roof, 259.
 Scotia moulding, 290.
 Screed, 297.
 „ in cement, 404.
 „ in plaster, 399, 400.
 Screw bolts, 294.
 Screw shackles, 385.
 Second coat painting, 413.
 Secondary rafters, 392.
 Selenitic clay finish, 408.

II

Selenitic plaster, 406.
 „ „ prepared in a mortar-
 mill, 407.
 „ „ prepared in a plas-
 terer's tub, 407.
 Set with fine stuff, 400.
 „ putty and plaster, 400.
 Setting coat and trowelled stucco,
 408.
 „ plaster, 399, 400.
 Settlements, inequality of, 209.
 Sewers, brick, 229.
 „ comparative advantages of oval
 and circular forms, 230.
 „ concrete for, 231.
 „ egg-shaped, 229.
 Shafts for chimneys, 237, 240.
 Sheet iron roof covering, 263.
 „ lead for roofs, 268.
 Shoes and heads for iron roofs, 386,
 387.
 „ attachment to columns, 389.
 Shutters, 308.
 „ and one flap, 309.
 „ and two flaps, 310.
 „ back flaps, 308.
 „ back folds, 308.
 „ boxings, 308, 310.
 „ closers, 308.
 „ folding, 308.
 „ inside, 308.
 „ methods of folding, 210, 311.
 „ outside, 308, 315; sham,
 307.
 „ sliding, 308, 313.
 „ with cover flaps, 312.
 Side keys, 267.
 Sill, oak, 296, 306.
 „ stone, 296, 306.
 „ straining, 245, 249.
 Single laths, 396.
 „ rebated linings, 306.
 „ riveting, 359, 360.
 Size, 396.
 Sizes of flues, 232.
 „ of roof scantlings, 249, 259.
 Skirting, 292, 296, 299, 307.
 „ board, 300.
 „ double, 300.
 Skylights, 315.
 „ for queen-post roof, 317.

- Skylights, glazing, 420.**
 " lead flashings for, 316.
 " sashes, 318.
 " sliding sashes, 319.
Slabs of stone for roof coverings, 263.
Slates, 245, 263 ; duchesses, 392.
Slating, 263.
 " for iron roofs, 392.
Sliding sashes in skylights, 319.
 " shutters, 308, 313.
Slip feather, 291, 292.
Snap rivets, 357.
Sockets of dovetails, 293.
Soffit, 245, 306.
 " joists, 334.
 " lining, 302, 304.
Solid frames with jamb linings for doorways, 296, 303.
Spans of roofs, 258, 259, 260, 394.
Spandril framing, 340.
 " of stairs, 338.
 " steps, 326.
Splayed jambs, 224.
 " grounds, 297.
Square steps, 326.
Staff bead, 292 ; rivets, 357.
Staircase, 323.
Stairs, 321 ; balusters, 322 ;
 backeted, 346 ; breast, 322 ;
 circular, 325, 331 ; circular
 geometrical, 325, 333 ; circular
 newel, 325, 331 ; curtail step,
 322, 345, 346 ; dimensions of,
 322 ; dog-legged, 324, 328, 340 ;
 fliers, 322 ; flight, 322 ; forms
 of, 324 ; general remarks on
 planning, 348 ; geometrical, 325,
 330, 342 ; going of a flight, 322 ;
 going of a stair, 322 ; half space,
 322 ; handrail, 322 ; landing,
 322 ; laying out dog-legged, 350 ;
 laying out geometrical, 352 ;
 laying out straight, 350 ; laying
 out the plan, 350 ; length of step,
 322 ; line of nosing, 322 ; newel,
 340 ; newels, 322 ; nosing, 322 ;
 open newel, 322, 342 ; quarter
 space, 322 ; rise, 322 ; riser,
 322 ; spandril of, 340 ; stone,
 325 ; straight, 324, 327, 338 ;
 tread, 322 ; tread and rise, 322 ;
 table for tread and rise, 323 ;
 wheeling steps, 322 ; winder, 322,
 351 ; wooden, 334 ; wooden forms
 of, 338 ; wooden, parts of, 334.
Stalks, chimney, 237.
Standards, 421.
Stay bars, 421.
Steel rivets, 357.
Steps, balanced, 352 ; curtail, 322,
 345, 346 ; dancing, 352 ; dimen-
 sions of, 323 ; feather-edged, 326 ;
 fixing stone, 326 ; hanging, 327 ;
 jointed, jogged, and plugged, 326 ;
 length of, 322 ; parts of, 334 ;
 round-ended, 346 ; spandril, 326 ;
 square, 326 ; stone, 326 ; sup-
 ported at both ends, 326 ; wheel-
 ing, 322 ; wooden, terms of,
 334.
Stiffeners for girders, 283.
Stone, arrangement of stairs, 327 ;
 chimneys, 243 ; headers, 211 ;
 lintel, 296 ; sill, 296, 303 ; slabs
 for roof covering, 263 ; stairs,
 325 ; steps, 326 ; templates, 252.
Stop-end, 270.
Stopping painted surfaces, 413.
Story rod, 353.
Straightening, 399.
Straight stairs, 324, 327, 338.
 " " laying out the plan of,
 350.
Straining beam, 245, 249, 250, 257.
 " " sizes of, 259, 260.
 " sill, 245, 249, 250.
Strapped walls, 397.
Straps, 276.
Strengthening timber girders, 277.
Stringers, 334.
Strings, 334 ; close, 336 ; cut, 334 ;
 cut and mitred, 334 ; open, 336 ;
 outer, 334, 336, 345 ; rough,
 334, 336 ; wall, 334, 336 ;
 weathered, 336 ; wreathed, 336.
Struck joints, 236.
Struts, 245, 249, 278 ; iron, 384,
 385, 394 ; sizes of, 259, 360.
Stucco, 396, 405.
 " bastard, 396, 406.
 " common, 396, 405.
 " rough, 406.

Stucco, trowelled, 396, 406.
 Stuck moulding, 289.
 Styles, 296.
 Substitutes for air drains, 214.
 Surbase, 296, 300.
 Surfaces, 409 ; colouring, 409 ; dis-
 temper, 409 ; whitening, 409 ;
 whitewash, 409.
 Suspending rods, 386.
 Swan-neck handrail, 348.

T

Table for roof coverings, 263.
 " for queen and princesses roofs of
 46 feet to 60 feet span, 259.
 " for queen and princesses roofs of
 60 feet to 90 feet span, 259.
 " for tread and rise of stairs, 323.
 " of lead paint ingredients, 412.
 " of scantlings for queen post
 roofs of 30 feet to 46 feet
 span, 259.
 " of scantlings of iron roofs, 394.
 Tail of tiles, 264.
 Taylor's damp-proof walling, 215 ;
 patent tiling, 266.
 Templates, 245, 252.
 Tension plate, 278.
 " rods, 281, 368, 385.
 Terminals, 243.
 Terms in joinery, 296.
 Thatch, 263, 267.
 " pitch, 567.
 " thickness, 267.
 Thickness of zinc for roofs, 273.
 Third coat painting, 413.
 Three coat plastering, 399.
 Throat of chimney, 232.
 Throating, 296.
 Through stones, 211.
 Thuasne's system of fireproof floors,
 375 ; table, 376.
 Tie beam, 245, 249, 250
 " " sizes of, 259, 260.
 " rods, 385.
 " " sizes of, 394.
 Tile floors, 369.
 Tiles, 263 ; capping, 266 ; channel,
 266 ; concave, 265 ; corrugated,
 266 ; double roll, 256 ; flat, for
 walling, 265 ; glass, 265 ; grooved
 ridge, 265 ; Italian, 266 ; orna-
 mental flat, 264 ; pan, 263, 265 ;
 plain, 263, 264 ; Taylor's patent,
 263, 266.
 Tiling for iron roofs, 392.
 Tilting batten, 245.
 " fillet, 245.
 Toad's back handrail, 347.
 To-fall roofs, 253.
 Top lining, 296.
 " rail of sash, 296.
 Torus moulding, 289.
 Tread and rise of stairs, 323.
 " " rule for, 323.
 " " table for, 323.
 Tread of stairs, 322, 334.
 " rule for thickness, 337.
 " weathered, 326.
 Tredgold's rule for indented beams,
 227.
 " " for keys, 276.
 " " for roof scantlings,
 260.
 " table for roof scantlings,
 259.
 " table for kinds of roof
 coverings, 263.
 Trimmers, 338.
 " for chimneys, 254, 255.
 " for skylights, 254, 255.
 " for stairs, 334.
 Trimming, 256.
 " joists of floors, 334.
 " " for stairs, 321, 338,
 345.
 Triple riveting, 360.
 Trowelled stucco, 396, 406.
 Trussed girders, 275, 278.
 " " with deep trusses,
 280.
 " " trussed within their
 depth, 278.
 " purlins, 251, 252.
 " rafter roofs, 379.
 Trusses, iron, 379.
 " parts of iron roof, 382.
 " wooden, 245.
 Tuck pointing, 220.
 Turning bar, 239.
 Two-coat plastering, 399.

U

Unwin's rule for diameter of rivets, 358.

V

Valley gutters, 273 ; pieces, 254 ; rafters, 254.

Valleys, 254.

" concave tiles for, 265.

Varnishing, 414.

Ventilators, 390.

Vent-linings, 237.

Vertical plaster screeds, 400.

V roofs, 253.

W

Wall linings, 294, 302.

" plate, 214, 217, 245, 249.

" strings, 334, 336.

Walls, ashlar, 210.

" battered, 397.

" bond of obtuse and acute angles, 223, 224.

" compound, 209.

" damp-proof, 214 ; Taylor's, 215.

" external, of chimneys, 240, 241, 242.

" hollow, 215, 216, 217, 218.

" in English bond, 225.

" in Flemish bond, 225.

" prevention of damp in, 212.

" rubble, 211.

" strapped, 397.

Water bar, 296.

Weather slates, 212.

Web of girders, 282.

Wedge-shaped nails, 267.

Wedges, 296.

" for centres, 287.

" for ribs, 277.

" for stairs, 336.

Weight to balance bottom sash, 296.

" " top sash, 206.

Well hole, 353.

Welded joints, 271.

Wheeling steps, 322.

Whichcord's fireproof blocks, 369.

Whitby cement, 395.

Whitening, 409.

Whitewash, 409.

Whiting, 396.

Winders, 322, 325, 329.

" laying out, 351.

Window backs, 294, 302, 307.

" boards, 296.

" linings, 302, 306.

Withs for chimneys, 233, 238.

Wood bricks, 296, 307.

" lintel, 296.

" plugs, 228, 296.

" roll, 269, 270.

Wooden balusters, 348.

" sashes, glazing, 419.

" stairs, 334.

" steps, 334.

" " parts of, 334.

" " terms of, 334.

Wreathed handrailing, 348.

" strings, 336.

Wrought grounds, 297.

" iron flat plates for roofs, 267.

" " girders, 370.

" " painting, 417.

" " rolled beams, 278, 282.

Z

Zinc clips, 271.

" corrugated roof, 272.

" coverings for iron roofs, 392.

" " for roofs, 263, 269.

" drips, 271.

" eaves gutters, 274.

" flashings, 273.

" fold joints, 271.

" gutters, 273.

" Italian corrugated roof, 272.

" laid with patent drawn roll cap, 272.

" laid with plain roll caps on boarding, 270.

" parting slip, 296, 307.

" rhones, 274.

" roll cap, 269, 270, 271, 272.

" rolls, 273.

" thickness for roofing, 273.

" valley gutters, 273.

" welded joints, 271.

Zigzag riveting, 360.



